Practi

A14000 270882

Robinson Township Library
Robinson, Illinois 62454

Digitized by the Internet Archive
in 2026

https://archive.org/details/practicaldraught0000paul

ng Model Boats. With 168 Engravings and Diagrams.
nts.—Building Model Yachts. Rigging and Sailing Model Yachts. Making and Simple Model Boats. Building a Model Atlantic Liner. Vertical Engine for a Launch. Model Launch Engine with Reversing Gear. Making a Show Case for l Boat.

ic Bells, How to Make and Fit Them. With 162 Engravings and Diagrams.
nts.—The Electric Current and the Laws that Govern it. Current Conductors Electric-Bell Work. Wiring for Electric Bells. Elaborated Systems of Wiring; r Alarms. Batteries for Electric Bells. The Construction of Electric Bells, Pushes, itches. Indicators for Electric-Bell Systems.

oo Work. With 177 Engravings and Diagrams.
nts.—Bamboo: Its Sources and Uses. How to Work Bamboo. Bamboo Tables. o Chairs and Seats. Bamboo Bedroom Furniture. Bamboo Hall Racks and Stands. o Music Racks. Bamboo Cabinets and Bookcases. Bamboo Window Blinds. aneous Articles of Bamboo. Bamboo Mail Cart.

ermy. With 108 Engravings and Diagrams.
nts.—Skinning Birds. Stuffing and Mounting Birds. Skinning and Stuffing als. Mounting Animals' Horned Heads: Polishing and Mounting Horns. Skin-Stuffing, and Casting Fish. Preserving, Cleaning, and Dyeing Skins. Preserving and Birds' Eggs. Cases for Mounting Specimens.

ing. With 180 Engravings and Diagrams.
nts.—Tailors' Requisites and Methods of Stitching. Simple Repairs and Press-Relining, Repocketing, and Recollaring. How to Cut and Make Trousers. How and Make Vests. Cutting and Making Lounge and Reefer Jackets. Cutting and g Morning and Frock Coats.

graphic Cameras and Accessories. Comprising How to Make Cameras, ARK Slides, Shutters, and Stands. With 160 Illustrations.
nts.—Photographic Lenses and How to Test them. Modern Half-plate Cameras. and Pocket Cameras. Ferrotype Cameras. Stereoscopic Cameras. Enlarging s. Dark Slides. Cinematograph Management.

al Lanterns. Comprising The Construction and Management of Optical ANTERNS AND THE MAKING OF SLIDES. With 160 Illustrations.
nts.—Single Lanterns. Dissolving View Lanterns. Illuminant for Optical Lan-Optical Lantern Accessories. Conducting a Lime-light Lantern Exhibition. Ex-nts with Optical Lanterns. Painting Lantern Slides. Photographic Lantern Mechanical Lantern Slides. Cinematograph Management.

ving Metals. With Numerous Illustrations.
nts.—Introduction and Terms used. Engravers' Tools and their Uses. Ele-y Exercises in Engraving. Engraving Plate and Precious Metals. Engraving rams. Transfer Process of Engraving Metals. Engraving Name Plates. En-g Coffin Plates. Engraving Steel Plates. Chasing and Embossing Metals. Etch-tals.

t Work. With 189 Illustrations.
nts.—Tools and Materials. Simple Baskets. Grocer's Square Baskets. Round s. Oval Baskets. Flat Fruit Baskets. Wicker Elbow Chairs. Basket Bottle-s.) ctors' and Chemists' Baskets. Fancy Basket Work. Sussex Trug Basket. ee s Basket Work. Index.

nding. With 125 Engravings and Diagrams.
nts.—Bookbinders' Appliances. Folding Printed Book Sheets. Beating and Rounding, Backing, and Cover Cutting. Cutting Book Edges. Covering Cloth-bound Books, Pamphlets, etc. Account Books, Ledgers, etc. Coloring, ling, and Marbling Book Edges. Marbling Book Papers. Gilding Book Edges. ling and Tree Marbling Book Covers. Lettering, Gilding, and Finishing Book Index.

Iron Work. Including Elementary Art Metal Work. With 269 Engravings d Diagrams.
nts.—Tools and Materials. Bending and Working Strip Iron. Simple Exercises t Iron. Floral Ornaments for Bent Iron Work. Candlesticks. Hall Lanterns. s, Grilles, etc. Table Lamps. Suspended Lamps and Flower Bowls. Photo-Frames. Newspaper Rack. Floor Lamps. Miscellaneous Examples. Index.

graphy. With Numerous Engravings and Diagrams.
nts.—The Camera and its Accessories. The Studio and the Dark Room. Plates. ure. Developing and Fixing Negatives. Intensification and Reduction of Nega-Portraiture and Picture Composition. Flash-light Photography. Retouching ves. Processes of Printing from Negatives. Mounting and Finishing Prints. g and Enlarging. Stereoscopic Photography. Ferrotype Photography.

Upholstery. With 162 Engravings and Diagrams.
Contents.—Upholsterers' Materials. Upholsterers' Tools and Appliances. W
Springing, Stuffing, and Tufting. Making Seat Cushions and Squabs. Upholst
Easy Chair. Upholstering Couches and Sofas. Upholstering Footstools, Fen
etc. Miscellaneous Upholstery. Mattress Making and Repairing. Fancy Upl
Renovating and Repairing Upholstered Furniture. Planning and Laying Car
Linoleum. Index.

Leather Working. With 162 Engravings and Diagrams.
Contents.—Qualities and Varieties of Leather. Strap Cutting and Making.
Cases and Writing Pads. Hair Brush and Collar Cases. Hat Cases. Banjo a
doline Cases. Bags. Portmanteaux and Travelling Trunks. Knapsacks and
Leather Ornamentation. Footballs. Dyeing Leather. Miscellaneous Exa
Leather Work. Index.

Harness Making. With 197 Engravings and Diagrams.
Contents.—Harness Makers' Tools. Harness Makers' Materials. Simple Exe
Stitching. Looping. Cart Harness. Cart Collars. Cart Saddles. Fore Gear an
Harness. Plough Harness. Bits, Spurs, Stirrups, and Harness Furniture. Van
Harness. Index.

Saddlery. With 99 Engravings and Diagrams.
Contents.—Gentleman's Riding Saddle. Panel for Gentleman's Saddle. La
Saddles. Children's Saddles or Pilches. Saddle Cruppers, Breastplates, a
Accessories. Riding Bridles. Breaking-down Tackel. Head Collars. Horse
Knee-caps and Miscellaneous Articles. Repairing Harness and Saddlery.
Collars and Saddles. Riding and Driving Whips. Superior Set of Gig Harness.

Knotting and Splicing, Ropes and Cordage. With 208 Engravings and D
Contents.—Introduction. Rope Formation. Simple and Useful Knots. Ey
Hitches and Bends. Ring Knots and Rope Shortenings. Ties and Lashings
Knots. Rope Splicing. Working Cordage. Hammock Making. Lashings and
Scaffolding. Splicing and Socketing Wire Ropes. Index.

Beehives and Beekeepers' Appliances. With 155 Engravings and Diagra
Contents.—Introduction. A Bar-Frame Beehive. Temporary Beehive. Tie
Frame Beehive. The "W. B. C." Beehive. Furnishing and Stocking a Beehive
vatory Beehive for Permanent Use. Observatory Beehive for Temporary Use. I
Case for Beehives. Hive for Rearing Queen Bees. Super-Clearers. Bee
Honey Extractors. Wax Extractors. Beekeepers' Miscellaneous Appliances.

Electro-Plating. With Numerous Engravings and Diagrams.
Contents.—Introduction. Tanks, Vats, and other Apparatus. Batteries,
and Electrical Accessories. Appliances for Preparing and Finishing Work.
Plating. Copper-Plating. Gold-Plating. Nickel-Plating and Cycle-Plating.
Electro-Plated Goods. Electro-Plating with Various Metals and Alloys. Index

Clay Modelling and Plaster Casting. With 153 Illustrations.
Contents.—Drawing for Modellers. Tools and Materials for Clay Modelling. Cla
ling. Modelling Ornament. Modelling the Human Figure. Waste-Moulding P
Plaster Casting. Piece-Moulding and Gelatine-Moulding. Taking Plaster C
Nature. Clay Squeezing or Clay Moulding. Finishing Plaster Casts. Pictur
in Plaster. Index.

Violins and other Stringed Instruments. With about 180 Illustrations.
Contents.—Materials and Tools for Violin Making. Violin Moulds. Violin
Varnishing and Finishing Violins. Double Bass and a Violoncello. Japanese O
Violin. Mandolin Making. Guitar Making. Banjo Making. Zither Making.
Making. Index.

Glass Writing, Embossing, and Fascia Work. (Including the Making an
of Wood Letters and Illuminated Signs.) With 129 Illustrations.
Contents.—Plain Lettering and Simple Tablets. Gold Lettering. Blocked
Stencil Cutting. Gold Etching. Embossing. French or Treble Embossing.
Fascias, Stall-plates, and Grained Background. Letters in Perspective; Spacing
Arrangement of Wording and Colors. Wood Letters. Illuminated Signs. Te
Signs for Windows. Imitation Inlaid Signs. Imitation Mosaic Signs. Specime
bets. Index.

Photographic Chemistry. With 31 Engravings and Diagrams.
Contents.—Introductory: Relation of Chemistry to Photography. Some Fun
Chemical Laws. Meaning of Symbols and Equations. Water: Its Prope
Impurities. Oxygen and Hydrogen Photographically Considered. Theories C
the Latent Image. Chemistry of Development, Toning, Intensification, etc.
Compounds Employed in Photography. The Halogens and Haloid Salts. Sul
its Compounds. Metals, Alkali Metals, etc. Organic or Carbon Compounds
Photography. Pyroxyline, Albumen, Gelatine, etc. Benzene and the Organic D

PRACTICAL DRAUGHTSMEN'S WORK

WITH NUMEROUS ENGRAVINGS AND DIAGRAMS

EDITED BY

PAUL N. HASLUCK

HONOURS MEDALLIST IN TECHNOLOGY
EDITOR OF "WORK" AND "BUILDING WORLD"
AUTHOR OF "HANDYBOOKS FOR HANDICRAFTS," ETC. ETC.

PHILADELPHIA

DAVID McKAY, PUBLISHER

610, *SOUTH WASHINGTON SQUARE*

1907

744
H[illegible]

2859

PREFACE.

PRACTICAL DRAUGHTSMEN'S WORK contains, in a form convenient for everyday use, a comprehensive digest of information, contributed by experienced draughtsmen, scattered over the columns of WORK and BUILDING WORLD, two weekly journals it is my fortune to edit, and supplies concise information on the general principles and practice of the art on which it treats.

In preparing for publication in book form the mass of relevant matter contained in the volumes, much of it necessarily had to be re-arranged and re-written. The contents of this book consist substantially of several series of illustrated articles by Prof. Henry Adams, originally contributed to WORK and BUILDING WORLD. The writings of many other contributors are so blended that it is difficult to distinguish any for acknowledgment.

Readers who may desire additional information respecting special details of the matters dealt with in this book, or instruction on any building trade subjects, should address a question to WORK or BUILDING WORLD, so that it may be answered in the columns of one of those journals.

P. N. HASLUCK.

CONTENTS.

CHAPTER		PAG
I.	Drawing Boards, Paper and Mounting	
II.	Draughtsmen's Instruments	1
III.	Drawing Straight Lines	3
IV.	Drawing Circular Lines	5
V.	Elliptical Curves	7
VI.	Projection	9
VII.	Back-lining Drawings	10
VIII.	Drawing to Scale and Preparing Maps	11
IX.	Colouring Drawings	12
X.	Making Drawings	14
	Index	15

LIST OF ILLUSTRATIONS.

FIG.		PAGE
1.	Back of Battened Drawing-board	10
2.	Clamped Drawing-board	10
3.	Corner of Drawing-board	11
4.	Position of Draughtsman's Board	12
5.	Section of Fixed Table and Board	13
6 11.	Drawing Pins	16
12.	Pasting Margin of Drawing-paper	17
13.	Fastening the Paper	17
14.	Edge and Top View of T-square	20
15.	Framed Set-square	21
16.	Set-square for Lettering	21
17.	Use of T- and Set-squares	22
18.	Serviceable Set of Instruments	23
19.	Ruling Pen	24
20.	Lift-up Nib	25
21.	Square-handled Pen	25
22.	Double Ruling Pen	25
23.	Pen for Ruling Curves	25
24.	Milled Head between the Nibs	26
25.	Setting Ruling Pen	26
26.	Point of Ruling Pen Enlarged	26
27.	Dotting Pen	27
28.	Dotting Pen with Midrib	27
29–32.	Needle Points for Compasses	28
33.	Socket Fitting for Compass Legs	29
34.	Leg of Hair Dividers	30
35.	Proportional Compasses	30
36.	Bow Compass	31
37.	Spring Bow Dividers	31
38.	Spring Bow Pencil	31
39.	Spring Bow Pen	31
40.	Pump Bows	32
41.	Spring Bows	32
42.	Pen Point	33
43.	Back of Holder	33
44	Section through Beam	33
45.	Needle Point	33
46.	Cheap Beam Compass	34
47.	Curve Bow	34
48.	Railway Curve	35
49–51.	French Curves	35
52.	Method of Holding T-square	37
53.	Chisel Shaped Pencil Point	38
54.	Round Point to Pencil	38
55.	Method of Holding Pencil	39
56.	Line in Error	39
57.	Dotted Line	39
58.	Testing Straightedge	40
59.	Untrue T-square makes Correct Angles	40
60.	Untrue Board makes Incorrect Angles	41
61.	Testing Set-square	42
62.	Straightening Set-square Edge	43
63, 64.	Parallel and Perpendicular Lines	43, 44
65.	Equal Lines Appear Unequal	44
66.	Equal Spaced Spots Appear Unequal	45
67.	Straight Lines Appear Curved	45
68.	Paralleled Lines Appear to Converge and Diverge	46
69.	Square Partly Covered	46
70, 71.	Equal Size Areas Appear Unequal	47
72.	Disappearing Dots	47
73–75.	Square Figures	48
76.	Full Lines	49
77.	Dotted Lines	49
78.	Dimension Lines	49
79.	Method of Showing Dimensions	50
80.	Section Lines	50
81	Graduated Lines	50
82.	Holding Ruling Pen	51
83.	Concentric Circles	52
84.	Finding Centre of Circle	53
85.	Flat Curves	54
86.	Holding Compasses	54
87.	Sharp Curves	54
88.	Concentric Arcs	55
89.	Arcs of Equal Radius	55
90.	Finding Centre of Small Arc	56
91–93.	Circles for Practice	56
94.	Hollow Edge of Castings	57
95.	Angle of Castings	58
96.	Curves Joining Arms and Boss of Wheel	59
97.	Example Requiring Accuracy	60
98.	Round Corners	61
99.	Parallel Lines Joined by Semi-circle	61
100.	Angular Lines Joined by Arcs	61
101–103.	Curved Lines as Junctions	62
104.	Curved Joins	63
105.	Ogee Curve	63
105–113.	Mouldings	64, 65
114–121.	Arches	66–68
122.	Method of using Pump Bow	69
123.	Conic Sections	70
124.	Circle	71
125.	Ellipse	71
126.	Vertical Straight Line	71
127–132.	Ellipses	72–76
133.	Paper Trammel	77
134.	Use of French Curve	77
135.	Patternmakers' Ellipse	78
136.	Gardeners' Ellipse	79
137.	Plan of Skew Arch	79

FIG. PAGE
133.—Elevation of Skew Arch . . 80
139, 140.—Flat or Camber Arch . 82, 83
141, 142.—Parabolas 84, 85
143–145.—Hyperbolas . . . 87, 88
146, 147.—Helix 88, 89
148.—Entasis of Column . . . 90
149–153.—Projections of Line . . 92, 93
154, 155.—Projections of Line . . 94, 95
156, 157.—Brick in Angular Projection 96
158.—Grating in Angular Projection. 97
159.—Side Elevation of House . . 99
160.—Front Elevation of House . 99
161.—Angular Projection of House . 99
162, 163.—Cube 100
164.—Constructing Isometric Scale . 100
165.—Isometric Scale 101
166.—Isometric Projection. . . 101
167, 168.—Projection at Angle of 45°. 102, 103
169–172.—Plans and Elevations of Rectangular Objects . . 105
173–175.—Plans and Elevations of Curved Objects . . . 107
176.—Cast Iron Grating . . . 108
177.—Chequered Plate . . . 110
178.—Fluted Pilaster 112
179.—Fluted Column 113
180.—Quarter Scale 116
181.—Twelfth Scale 116
182.—Forty-eighth Scale . . . 117
183.—One-hundred-and-twentieth Scale 117
184.—Ninety-sixth Scale . . . 118
185.—Two-thousand-five-hundredth Scale 118
186, 187.—Scale Drawings . . . 119
188.—Sketch Plan of House . . 119
189.—Diagonal Scale for Accurate Measurements . . . 120

FIG. PAG
190.—Plan to Scale showing Tenths and Hundredths . . . 12
191.—Plan to Scale: 1 in. = 880 ft. . 12
192.—Plan to Scale: 1 in. = 88 in. . 12
193.—Plan to Scale: 1 in. = 208·33 ft. 12
194.—Plan to Scale: 1 in. = 41·66 ft. 12
195.—Slant and Saucers for Colours . 12
196.—Primary Colours and Secondary Tints 12
197.—Colours of the Spectrum . . 12
198.—Front Elevation showing Deal or Fir 13
199.—Side Elevation showing Deal or Fir 13
200, 201.—End Grain . . . 133, 13
202.—Various Cross Sections for Fir 13
203.—Front Elevation showing Oak . 13
204.—Side Elevation showing Oak . 13
205, 206.—End Grain Oak . . . 13
207.—Cross Sections for Oak . . 13
208.—Marking Measurements . . 14
209.—Block Plan of Building and Site 14
210.—Measuring Angle . . . 14
211.—Scale for Plan shown at Fig. 209 14
212.—Sample Block Letters . . 14
213.—Enlarged Drawing of Letter G . 14
214.—Samples of Figures . . . 14
215.—Plan of House 14
216.—Front Elevation of House . 14
217.—Side Elevation of House . . 14
218.—Back Elevation of House . . 14
219, 220.—Sections of House . . 14
221.—Irregular Outline to be Copied 14
222.—Method of Copying Irregular Outline 14
223.—Small Squared Plan of Estate . 14
224.—Method of Enlarging by Squares 14
225, 226.—Conventional Signs used by Draughtsmen . . 152, 1

PRACTICAL DRAUGHTSMEN'S WORK.

CHAPTER I.

DRAWING BOARDS, PAPER AND MOUNTING

This book deals with the principles upon which mechanical and architectural drawings are made, and it is proposed, in the following chapters, to give a course of practical instruction in technical drawing as applied to the constructive arts. This branch of drawing does not aim at producing pictures so much as at showing conventional representations which shall enable other persons to construct precisely and exactly what the designer intends, in shape, size, and arrangement. The primary essentials are accuracy and neatness. An inaccurate drawing invites bad workmanship, and one not neatly made at the least leaves a doubt as to what is required.

Though it may occur in business that many things have to be hurried over for want of time, in learning a subject the student should not be satisfied unless each portion of his work is an improvement upon the last, and is the very best he is able to do; speed can always be superadded to accuracy if the latter is mastered first, but the order can never be reversed.

To describe the principles involved in making a mechanical or architectural drawing would necessitate a treatise on plane and solid geometry and projection that would be out of place in a book which is intended to deal only with the practical operations of the drawing-office. However, it should be understood that, to be in a position to do any but the very simplest work, a certain amount of geometrical knowledge is a necessary part of the draughtsman's equipment, and this must be acquired by a systematic study of that branch of science.

To commence draughtsmen's work a large assortment of

instruments is unnecessary, and even undesirable, the fewer and the simpler they are the better, provided they are efficient. Of course, a drawing-board, a T-square, and two set squares will be required, with drawing pencils, indiarubber, and drawing pins for holding down the paper, which may be cartridge paper. If a drawing-board 16 in. by 22¾ in. is employed, sheets 15 in. by 22 in. (half imperial size) will be found suitable. The ordinary drawing instruments, including bows for ink and pencil, will be required; but when the reader has mastered the contents of this book he will be able to decide for himself here. We need go no further than to advise a beginner not to buy cheap tools. A set of pearwood French curves, a foot rule, or a set of scales, will be handy while, for those who prefer it, a steel scale can be obtained.

Fig. 1.—Back of Battened Drawing Board.

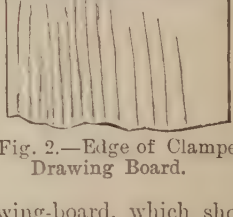

Fig. 2.—Edge of Clamped Drawing Board.

The first thing necessary is a drawing-board, which should be made about an inch longer each way than the largest sheet of paper in general use. If the sizes of the drawings vary considerably, it will be convenient to have large and small boards to suit. The usual method of constructing the ordinary board is shown in Fig. 1. The wood should be fairly stout, but not too hard, so that the pins can be inserted and withdrawn with moderate ease; the grain should run lengthways of the board. The two battens should be screwed on underneath, and transversely to the grain of the other wood, to stiffen the board and prevent warping. All woodwork in course of time shrinks to a greater extent across the grain than it does in the direction of the grain, so it is advisable for the screws securing the battens to the board to work in slots, as shown on an enlarged scale in Fig. 2. The board is thus allowed to shrink and swell without unduly straining the screws or battens. In properly seasoned timber the shrinkage will be slight, and care should be used to secure wood suitable for the purpose. To prevent warping

hrough expansion and contraction, drawing-boards are some-
mes grooved on the back, half-way through the thickness, at
ntervals of about 3 in. or 4 in. from end to end, as shown in
ig. 1. Some boards have hardwood slips glued into grooves at
e end, as shown by Fig. 3. These slips are to guide the
tock of the T-square, and saw kerfs should be run through
em at intervals of about 3 in. (B B, Fig. 3) to prevent the slips
eing forced out of position by unequal shrinkage. Smaller
oards can be stiffened by clamping a strip of wood about 2 in.
ide transversely on each end of the board, as shown in Fig. 2.

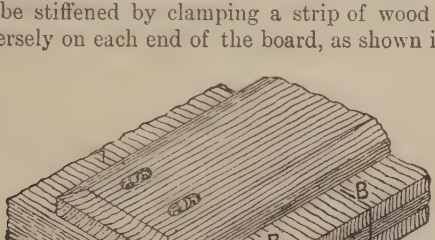

Fig. 3.—Enlarged Corner of Drawing Board.

All drawing-boards should be planed level on both sides, and
quared exactly so that the opposite edges are parallel, and the
djacent ones at right angles to each other. A drawing-board
hat has suffered from rough usage and become indented may
e renovated and the bruised grain of the wood can be raised
well wetting it and placing on the dents several thicknesses
brown paper previously soaked in hot water. A piece of dry
aper is placed on these, and a hot flat-iron laid on the whole
uses the dents to swell up. When the board is dry, a shaving
two can be taken off with a smoothing-plane, and the board
ill be as good as new.

Draughtsmen generally prefer to stand to their work, because
the various operations of drawing and finishing a large plan
erations are seldom confined to one part of the paper only,
d it is necessary to alter continually the position of the body
obtain a proper command of the work. However, for some
awing it is possible to work while seated, and a stool is used
some draughtsmen.

The position and arrangement of the office in which th draughtsman has to work is a matter of some importance. Fo working in the daylight, a window facing north, with the ligh rather on the left-hand side of the board, as shown at Fig. 4, about the best arrangement, and when artificial light is employe the lamp should be placed over and beyond the top left-han corner of the board. A pair of supports for inclining the boar from 15° to 20° by placing one under each end, as shown i Fig. 4, is a convenience. This slope of the board allows th

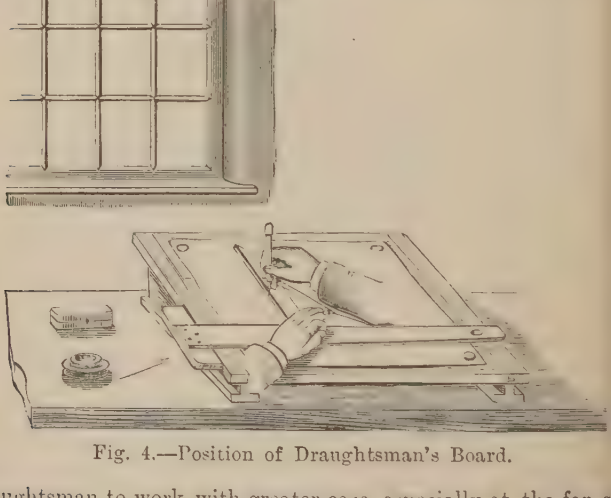

Fig. 4.—Position of Draughtsman's Board.

draughtsman to work with greater ease, especially at the far si of the board.

The height of the desk or table on which the drawing-boa has to be placed while the draughtsman is at work will determined by the size of the drawings. When the paper under imperial size, one may sit down while at work, and height of about 2 ft. 6 in. from the floor to the surface of t drawing-board at its lowest edge, with the board sloping at angle of about 1½ in. in a foot, will be a convenient arrangeme for most workers. With larger drawings the draughtsman w find it most convenient to stand while at work ; and to rea the upper farther part of the board it will be necessary to use

t-stool. Fig. 5 gives a section through a fixed desk or counter a drawing-office. The space underneath is often utilised by ng fitted with drawers to hold drawings; but when this done, sufficient knee room should be allowed, by keeping the nts of the drawers well back from the edge of the desk. nen the drawing-board is placed on this desk, the slope for venient working may be obtained by placing under the back ge a strip of wood about 2½ in. square (A, Fig. 5), and as long the board, the slope of which may be regulated by sliding this ip backwards or forwards.

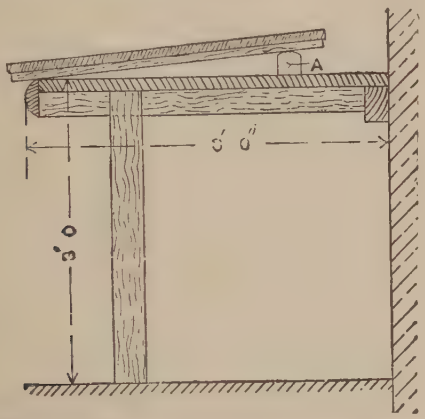

Fig. 5.—Section of Fixed Table and Board.

The paper most suitable to be used depends a great deal on kind of drawings to be made. For fine, accurate work ooth or medium surface paper is the best. But for a coloured wing made more for show than accuracy, rough paper should used, as the colour runs better on it. The papers in general in the drawing office are "cartridge," a machine-made paper, d for work where an ordinary finish is required; and hand- le for superior work. Generally one side of the "cartridge" inished to a smoother surface than the other, and the smooth face is the one usually chosen for drawing on; it is not able for colouring. Hand-made paper is of a finer and ger texture, and has a hard surface. Both sides are much e in appearance, but the surface intended for drawing on

may be ascertained by holding the paper up to the light and observing the letters of the water-mark, which reads in the right direction when looked at from the working surface. For drawings which have to be submitted to much handling, or which it is desired to preserve in good condition for many years it is usual to use drawing-paper mounted on holland or linen.

The sizes of drawing-papers vary to the extent of half an inch or so with different makers, but the usual sizes are as follows :—

USUAL SIZES OF DRAWING-PAPER.

Name of Paper.	WHATMAN'S.		JOYNSON'S.	
	Size to Inches.	*lb. weight to Ream.*	*Size to Inches.*	*lb. weight to Ream.*
Foolscap	17 × 13½	18	—	—
Demy	20 × 15½	25	20 × 15½	42
Medium	22 × 17½	34	—	—
Royal	24 × 19	44	24 × 19	44 to 60
Super Royal ...	27 × 19	54	—	—
Elephant	28 × 23	72	—	—
Imperial	30½ × 22½	72	30 × 22	72 to 140
Colombier	34½ × 23½	100	—	—
Atlas	34 × 26	100	—	—
Double Elephant ...	40 × 26¾	133	40 × 27	140 to 230
Grand Eagle ...	42¾ × 28	150	—	—
Antiquarian ...	53 × 31	240	52½ × 30½	250
Emperor	—	—	72 × 48	535
Double Emperor ...	—	—	96 × 69	1025

These papers can be obtained in three surfaces—N (natural surface), HP (hot pressed or smooth surface), R (rough surface). The natural-surface paper should be employed for general work, as it will stand much rubbing out and will take colour well. The hot-pressed surface paper is the best for fine pencil and ink drawings that are not coloured. The rough paper is used by artists for water-colour drawings and sketches.

Paper of the standard sizes is to be bought ready mounted on cloth, and for specially large plans either "cartridge" or superior paper can be bought in a continuous roll in various widths up to 60 in.

A useful paper is that sold ready divided by faintly ruled lines into squares of various sizes, generally into inches and eighths or tenths, the inches themselves being indicated by a thicker line. It is of service in enlarging or reducing by the method of squaring described on p. 150, and even more so in sketching directly to scale, as the squares enable any dimension to be drawn correctly at once. It is applicable alike to the uses of the machine draughtsman in sketching details of machinery to correct scale and the civil engineer for plotting small surveys.

Tracing-papers are made in a variety of thicknesses, tints, and textures. They have usually one side smoother than the other, and are sold in continuous rolls measuring 21 yd. or 22 yd. in length, and varying in width from 30 in. to 44 in. To make tracing-paper tissue paper is coated, by brushing or sponging, with a mixture of 1 part of boiled linseed oil to 5 parts of turpentine. Each sheet is done separately, and hung over a line to dry. When the clear oily marks disappear it will be ready for use. Tracing-linen or tracing-cloth is obtainable in about the same sizes. It is made generally with one side glazed and the other rough, and occasionally with both sides glazed. The selection of the side to be used for drawing on must be left to individual discretion, some preferring one side, some the other. The rougher side is easier to work on, as it takes both ink and colour easily, but a much neater and more effective tracing is produced on the glossy side, the colouring being done on the rough surface. The rougher surface is more easily soiled than is the smooth.

It is a usual custom, before commencing a mechanical drawing, to secure the paper to a drawing-board, so as to keep it flat and in the same position relative to the edges of the board from which right angles are set off with the T-square. The most simple method is by placing lead weights on the corners of the paper. If the drawing is to be made in pencil only, then the paper can be fastened to the board by pins. The most convenient way to do this is to place the paper squarely on the board, and put a drawing-pin into the top left-hand corner; place the T-square along the top edge of the paper: take hold of the bottom right-hand corner of the paper and move it up or down till the top edge of the paper becomes parallel with the edge of the T-square, when another drawing-pin can be inserted in the bottom right-hand corner, and then two others in the remaining corners.

The principal point to be attended to in the choice of drawing-pins (see Figs. 6 to 11), is that the head shall be so shaped as not to interfere with the passing of the blade of the T-square over it; and for this reason the dome-shaped head shown in Fig. 7 will be found to answer admirably. Another good section of head is shown in Fig. 8; while the "flat heads," shown in Fig. 9, are not so good as the two last mentioned. A cheap and fairly effective drawing-pin is now made by punching out of a steel disc a tongue, and bending it downwards to form a pin, as shown in Fig. 10; while Fig. 11 shows a form in which the three corners of a triangular sheet of thin steel are bent downwards to form three pins to pass through the paper. For a good drawing-pin, it is



Fig. 6.



Fig. 7.



Fig. 8.



Fig. 9.

Fig. 10.

Fig. 11.

Figs. 6 to 11.—Drawing Pins.

desirable to have the head at least ¾ in. in diameter, and the pin not much tapered, or it will not hold tightly in the drawing-board and this is necessary.

If the drawing to be inked in, coloured, and dimensioned is an elaborate one, and likely to be a long time in hand, the paper should be strained on the board. To do this, first ascertain which is the correct surface for drawing on, and lay the paper face upwards on the board, then bend up a margin strip ¾ in. to 1½ in. wide all round the sheet. Turn over the paper, and well damp the back of it with a sponge and cold water taking care to leave the margins free from moisture. After thoroughly damping, sponge off the superfluous water, and turn the paper right side up on the board, taking care not to wet any part of the board where the glue or paste for fastening the edges has to come. Lay a wooden straight-edge along the paper, about 1 in. from the top edge, bend the dry margin over the straight-edge, so as to bring the under surface uppermost over the straight-edge, and pass over it a brush dipped in hot glue or paste (see Fig. 12). Turn the paper back again, and press the

lued margin into close contact with the drawing-board. Remove he straight-edge to the left-hand margin of the paper, and glue hat in the same way, and afterwards proceed to glue down the ther margins at the right-hand end and bottom edge.

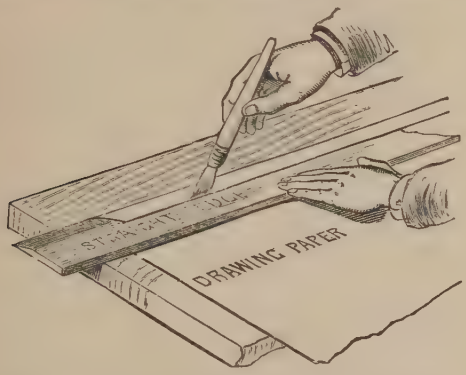

Fig. 12.—Pasting the Margin of Drawing Paper.

Now smooth down the paper, commencing in the centre of the heet, with a clean dry handkerchief, working gradually towards he edges to expel the air. Then press the glued margins well on

Fig. 13.—Fastening the Paper.

he board with the thumbs, at the same time drawing them part, as shown by the arrows (Fig. 13). This operation should be repeated all round the margin, the thumbs being always opposite each other during the stretching process. Shoemakers' paste, which can always be obtained ready-made at any cobbler's shop or grindery store, is much stronger than the ordinary paste, but shares with that material and gum the defect of taking a long time to dry.

The wetting of the paper causes it to expand, so that it measures more in length and breadth than when dry. As the paper dries it will shrink, and as the edges are securely glued to the board, the paper will stretch itself very tight and flat. From this it will be understood that the more quickly the gluing is done the better, because if there be much delay, the paper will be partially dried before the margins are completely stuck. It is advisable to leave the board in a horizontal position, not standing on one edge, as the moisture may run down to the bottom margin, keeping one part of the paper wet longer than another. The drying should not be hastened by placing the board before a fire, which would probably dry the paper unevenly, and pull it into wrinkles. If the edges of the paper are not firmly glued to the board when the paper begins to shrink, they will be pulled from their support, and thus the paper cockled and warped.

Care must be taken that the drawing-board is not stained with ink, or this may get into the damp paper and spoil it. Some kinds of wood—teak, for instance—will stain the paper; therefore, when there is any doubt on this point, it is a good plan to put a sheet of common paper between the board and the drawing-paper. In stretching mounted drawing-paper on the board, glue will not be strong enough to hold the edges, and small tacks should be used for the purpose.

CHAPTER II.

DRAUGHTSMEN'S INSTRUMENTS.

In giving a brief description of some of the various instruments generally used in the drawing office, it may be advisable to remind the reader that it would take up more space than can be spared here to even mention and illustrate all the varied forms of the numerous instruments which are used by draughtsmen. Attention is devoted in this chapter principally to such appliances as may be considered comparatively indispensable. All the instruments generally used will be found illustrated and described in the catalogues issued by makers and dealers, who point out the several merits which are claimed for them. A great number of peculiar instruments and many patented articles will also be found in the manufacturers' catalogues, and although these are in many cases very useful in their way, most practical draughtsmen manage to do without them, and in this chapter it is proposed to deal only with those instruments that are usually necessary in the ordinary work of making a drawing.

Most makers stock three qualities of instruments, and it is advisable to buy the best that are made, called extra-quality instruments, as they will last a lifetime and the first cost is also the last.

Next in importance to the drawing-board, which has already been described in the preceding chapter, comes the T-square. Spanish mahogany is the best wood for large squares, and smaller ones may be made of pear tree or of mahogany, edged with ebony. Plain straight-grained wood should be selected for T-squares. Figured mahogany is more liable to warp, is difficult to plane, and wears to a ragged edge. The blade ought to be easily removable from the stock for the purpose of trueing up the edges.

The most approved pattern of T-square has a taper blade screwed on the top of the butt end, as shown by Fig. 14, p. 20. A parallel blade let into the butt is not so good. With the

former the set-square can slide over the butt, and still be kept against the blade; with the latter the set-square must be raised to pass over the butt, which makes it difficult to keep the set-square firm against the blade. However well seasoned the pear-tree or mahogany wood of which the T-squares are made, it will be found difficult to prevent it warping, and care should be taken to keep the squares in a place free from damp or excessive heat. The working edges of the butt and blade should be furnished with narrow strips of ebony slightly bevelled on the upper side. Some T-squares are made with parallel blades and shifting stocks, which may be adjusted to any angle. These are not popular with practical draughtsmen, who generally prefer to



Edge View of T-square.

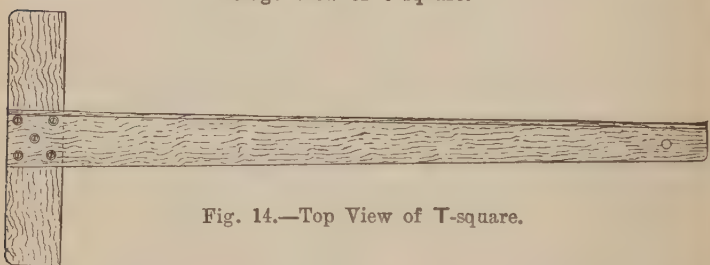

Fig. 14.—Top View of T-square.

use two set squares with which to draw lines at an angle. The T-square must be worked on the left-hand edge of the drawing-board, and it should be used for drawing horizontal lines only; the perpendiculars being always drawn by a set-square working against the T-square. A T-square used for vertical as well as horizontal lines would communicate to the lines in the drawing any slight inaccuracy in the truth of the edges of the board, as shown on p. 41.

The position of the left hand when drawing is shown in Fig. 52, p. 37, the left hand holding the set-square against the T-square. the thumb and forefinger pressing the blade on the paper, and at the same time holding the butt against the end edge of the board by a slight pressure towards the right.

Next in importance to the T-square comes a selection of set-squares. These are made of various materials, all of which have

certain objectionable features, but the best squares are those made of ebonite or vulcanite, as shown in Fig. 17. They are not liable to warp or to get out of square, but they collect dirt and smear the paper if not kept very clean, are liable to break if dropped or roughly handled, and the larger sizes are rather expensive. Framed set-squares (see Fig. 15) are made of three pieces of mahogany or other wood, edged with ebony. They are built up of three separate parallel pieces of hard wood, joined at the corners. By means of the open centre, a better hold of the set square can be obtained, and it can thus be moved about more freely, and held more firmly when once in its proper position for drawing. Framed squares are liable to get out of order if not made of carefully selected dry material. Common plain

Fig. 15.—Framed Set Square.

Fig. 16.—Set Square for Lettering.

squares, made of plain pieces of thin mahogany, pear-tree, or other woods, planed to the required angles, are liable to twist and warp when exposed to heat or dampness.

These squares have a hole, about $\frac{3}{4}$ in. in diameter, bored near the base, by which they can be manipulated, and which also enables them to be hung on a peg. Set-squares are made of all angles, but for ordinary work two are generally sufficient, one with angles of 30°, 60°, and 90°, and one with angles of 45°, 45°, and 90°. Special set-squares are procurable,

adapted to the various pitches of roofs, slopes, and batters of embankments, angles of screw nuts, and other standard requirements. A set-square used in setting-out lettering is illustrated at Fig. 16.

When drawing a vertical line, the vertical side of the set-square should be turned towards the left, as shown at B, Fig. 17. When it is desired to draw lines against the sloping edge of the set-square this is reversed, as shown at A. In both cases the set-square serves as a rest for the draughtman's hand and protects the drawing.

Drawing pens and compasses form the most important instruments in the draughtman's outfit. Foreign-made cases of instruments, containing a large number of pieces, may be bought for a comparatively small sum, but cheap instruments are often

Fig. 17.—Use of T and Set Squares in Drawing.

worthless. The best plan is to buy of some well-known maker, and get instruments which the makers will guarantee to replace if not satisfactory. A case should be provided in which to keep the instruments, so that they shall be together and clean. Among working draughtsmen it is generally agreed that a beautiful, well-polished case crammed with the very best instruments of all and every kind, is not necessary for turning out a good drawing, and good work can be done by means of a few of the simplest and plainest instruments. It may not be out of place here to give the following hint to young would-be draughtsmen :—Do not waste a lot of money in getting together an elaborate and expensive box of instruments, many of which will afterwards be found to be not wanted. It is better even to buy singly just the instrument that is wanted as advance is made in the art of drawing. A strip of chamois leather and a pair of elastic bands make a case that serves all purposes; it keeps out

the damp and preserves the points, and possesses many distinct merits. No draughtsman need ever feel diffidence in walking into the best of drawing offices with such a little roll of instruments in his pocket. Empty cases may be purchased without the instruments. Some morocco-covered ones that go in the pocket have a neat appearance, take up but little room, and are not expensive. It is advisable to commence with a case that will contain the following, even if it is not filled up at first :—Half-

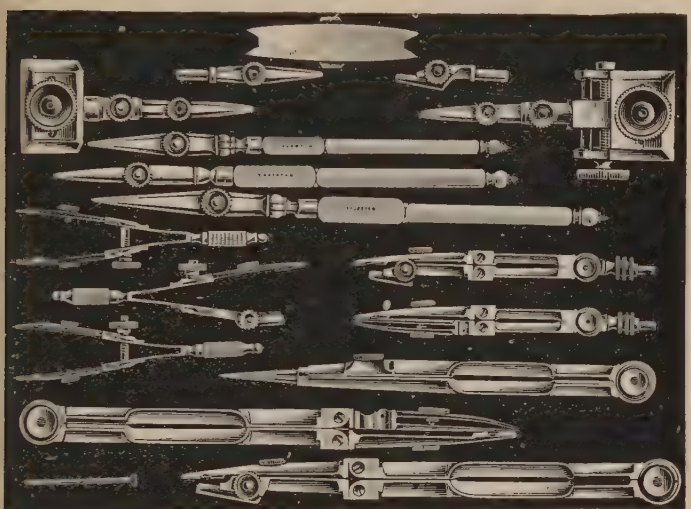

Fig. 18.—Serviceable Set of Instruments.

set of 6-in. compasses, with lengthening bar ; ink and pencil bows ; two drawing pens ; set of three spring-bows ; pricker and key. These instruments are sufficient for general work.

Fig. 18 illustrates the contents of an ordinary box of serviceable instruments. They comprise, commencing at the upper part :—One pair of 6-in. compasses with pencil point ; one pair of compasses with pen point ; one pair of 5-in. hair dividers ; bow pen ; bow pencil ; set of three spring bows, comprising divider, pencil, and pen ; three drawing pens ; pair of beam-compass heads with screw adjustment and extra pen and pencil joints, and screw key for adjusting the joints.

Fig. 19.—Ruling Pen.

A ruling pen of good quality should be selected, as it is the instrument with which most of the lines are inked in, see Fig. 19. This illustration shows a pen fitted with an ink reservoir in the handle, and it is particulariy useful for drawing lines that require much ink.

Pens with lift-up nibs, as shown at Fig. 20, are handy for setting and keeping clean. It is advisable to choose a ruling pen having one strong and rigid blade which will not bend with an increase of pressure against the edge of the set-square or straight-edge; flexibility would affect the regular thickness of the line which is being drawn. The handle shown in Fig. 21 has a square portion which is useful in preserving the proper direction of the nibs of the pen when drawing. This screw should be sufficiently loose for the draughtsman to open or close the nibs with the second finger, when holding the pen as shown in Fig. 82, p. 51, without lifting it from the paper. New pens are usually too tight, and a little oil will greatly improve the working of a tight screw, and the screw of all pens and spring dividers should be oiled occasionally, or in the course of time they may strip their threads. It is often convenient to be able to carry a drawing pen in the pocket ready for use, for much can be done with this instrument alone by a mechanical draughtsman who is also a good free-hand draughtsman. A pocket drawing pen consists of a hollow handle in which the nib is carried secure from damage. When required for use, the nib is unscrewed, reversed, and again screwed into the handle.

For drawing parallel lines moderately close together, as in indicating roads, canals, or railways in maps and small scale plans, a double pen, such as is shown in Fig. 22, is convenient. It consists of two ruling pens, with a screw and a milled head for regulating the distance between them. It is particularly

useful where the lines to be drawn are curved or of irregular form.

A ruling pen especially designed for drawing curved lines is shown in Fig. 23. The handle is tubular, and through it there runs loosely the metal shank of the pen. At the top is a milled head, by which the pen can be clamped tight to the handle, and can then be used as an ordinary drawing pen. When the nibs

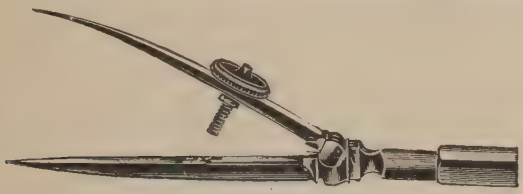

Fig. 20.—Lift-up Nib.

Fig. 21.—Square Handled Pen.

Fig. 22.—Double Ruling Pen.



Fig. 23.—Pen for Ruling Curves.

are free to revolve independently of the handle, they follow the direction of a curved line with great freedom, and although rather awkward to handle without practice, a swivel pen is convenient for the purpose of drawing lines against a curved guide.

Draughtsmen's ruling pens should always be cleaned after using, and for this to be done it is convenient, though not necessary, to have one of the nibs hinged so as to lift up and allow the dried ink to be scraped off the inner side of the nibs with a penknife. This hinge is shown in Fig. 25. A piece of chamois leather pulled between the nibs of the pen after using will generally be found sufficient. For scraping off hard dried

Indian ink, the thin blade of a penknife may be inserted between the nibs of the drawing pen, or a steel writing pen with half of the nib broken away may be used. The adjusting screw for setting the pen nibs to rule lines of various thickness is often made with its milled head too small. A good arrangement is to have the



Fig. 24.—Milled Head between the Nibs.

milled head placed between the nibs of the pen, as in Fig. 24, and these are adjusted by right and left-hand threads on the screw of which the milled head forms part. Some ruling pens are made with the ivory handle to unscrew and serve as a pricker or station pointer. This form weakens the instrument at the screwed joint and there is little gained in providing in this way a simple tool which can, by driving a needle into a pen holder, by any draughtsman, be made in five minutes.

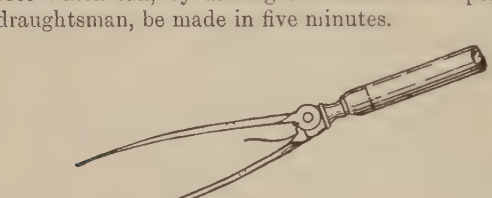

Fig. 25.—How to Set a Ruling Pen.

Fig. 26.—Point of Ruling Pen Enlarged.

The ruling pen is more used than any other drawing instrument, and occasionally it requires setting or sharpening. This is not a very difficult operation after a little practice, yet many draughtsmen make a practice of sending their pens to the instrument makers to be set. By taking out the screw and looking directly at the point of the pen, it will be seen that the worn part has a flattened surface. If only one nib of the pen has become worn shorter than the other, hold the pen upright on the stone (fine Turkey or Arkansas preferred) and grind both nibs level before removing the screw and setting. To set the pen place the nib on an oilstone in the position shown in Fig. 25. Move the pen

ackwards and forwards, at the same time slightly rocking it orizontally and vertically. Wipe and examine the pen occaionally, and stop just short of bringing the point to a sharp dge. If the nibs are too sharp, they will cut the paper, and it ill be necessary to take off the keen edge by using for a few inutes on a piece of brown paper. A pen of good hard steel ill keep its edge for many months without being set. In etting the pen, each nib should be brought to a rounded chisel dge and both nibs should be of exactly the same length, as



Fig. 27.—Dotting Pen.

hown enlarged at Fig. 26, so that when the pen is held upright hey shall both bear evenly on the paper.

Dotting pens are used for the purpose of drawing lines comosed of dots and of dashes, the ordinary pattern being such as shown in Fig. 27, where a small roller or rowel is fixed between he nibs of the pen. Ink is supplied to this roller which has its dge cut to the desired pattern of dots, and imprints them on the aper as it is rolled along. Several patterns of dotting wheels or



Fig. 28.—Dotting Pen with Midrib.

ollers are usually supplied with the pen, and are stored in the avity shown at the top of the handle, covered by a screwed d. Another pattern, shown in Fig. 28, is provided with n internal tongue or midrib coming almost into contact with he dotting wheel. It is claimed that with this pen sufficient nk can be retained to draw a dotted line 60 feet in length. Other descriptions of dotting pen have been produced, some eing elaborate pieces of mechanism actuating an ordinary pen y a cam movement, which derives its motion from a roller oved by drawing the instrument along the desired line. It generally admitted by experienced draughtsmen that a

dotting pen is an instrument which can easily be dispense with, and it is rarely used by an expert.

Compasses generally include dividers and pen and penc compasses. The ordinary forms of these instruments are show on p. 23 by the three lower Figs. in the illustration, and need but short reference here. This instrument is for setting off lon distances and for making large circles. Besides the dividing leg it should be fitted with interchangeable legs for pen and penci and also a lengthening bar, for use when extra large circles are t be made.

Compasses are made with plain points and needle point

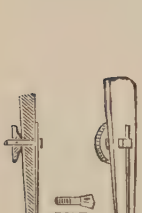

Fig. 29.

Fig. 30.

Fig. 31.



Fig. 32.

Needle Points for Compasses.

The latter are far preferable, as they do not greatly enlarg holes in the paper when drawing a large number of concentr circles. Triangular points, which are often found on inferi instruments, have a very bad tendency to bore holes in the pape The needle points in Fig. 29 are very good, provided the hole which the point of the needle fits is accurately drilled, so th the needle cannot shake, as in this case there is no tightenin arrangement; a small bolt is pierced at one end by a hole, throug which the needle passes—a nut on the outer end of the bo enables the needle to be firmly clamped against the leg of the i strument. The screw above only prevents the needle fro slipping backwards, not from shaking sideways. Probably t safest needle-holder is that shown at Fig. 30, where t

ollow holding the needle is split, and the needle can be adjusted
y tightening and loosening the screw. The needle in this point
n be adjusted so as to project a very little beyond the shoulder,
hich acts as a stop, to prevent the needle penetrating too far into
e paper. Figs. 31 and 32 show other forms of needle points
at are sufficiently explained by the illustrations.

Compass legs are made both with and without a leg joint. Fig.
3 shows a joint in each leg which is wanting in some instruments.
hese joints are useful, as by their means the point of needle and
ncil can be kept almost vertical as shown by Fig. 86 on p. 54.
n unjointed leg forming the centre point of a large circle would
very much inclined, and therefore have a tendency to slip,
the same time wearing a large hole in the paper.

Some compasses are so arranged that the legs, after being
serted in a socket, are fastened by a screw with a milled head,
d it is often a source of vexation to find this screw continually
osening. A better form of joint is shown in Fig. 33, which

Fig. 33.—Socket Fitting for Compass Legs.

mply depends on an accurate fit and friction to keep the parts
eady, and if this is well made, it is a much better joint than
e former. The part marked B (Fig. 33) is a flat piece of steel
serted in the circular piece C on the leg, to prevent the
tachable portion, which is shown in section, from turning
und.

To test the joint of a pair of compasses, open them slowly to
eir fullest extent. If they open and close smoothly, without
evenness in any part, the joint may be considered to be good,
t if one part works tightly and another loosely, the compasses
ould be rejected. Another point is to see that the interchange-
e legs fit accurately, leaving no play whatever. Electrum is the
terial best suited for their construction, on account of its light-
s and freedom from liability to tarnish. The legs should be
uble-jointed ; with these it is possible to keep both points at
nt angles to the paper—a great advantage in good work ; and
se with needle points should be chosen, as they cause less
nage to the drawing-paper, and admit of greater accuracy in
ir use.

Hair dividers are useful for comparing or setting off sma distances with great accuracy, though with care an equal amou of accuracy can be obtained with the ordinary dividers. Ha dividers have one leg fitted with a spring, as shown in Fig. 3 with an adjusting screw. The points are first set approximate to the desired measurement, and the final adjustment is made b turning the milled head of the screw.



Fig. 34.—Leg of Hair Dividers.

Proportional compasses are specially for the purposes of redu tion and enlargement. From Fig. 35 it will be seen that the tw arms of the compasses are slotted to receive the sliding bloc which form the pivot. By means of the milled head shown in th figure, this pivot can be clamped in any position in the slots, an the relative opening of the two ends of the compasses is regulat by the position of this movable centre. A scale engraved o one of the arms indicates the position to which the cent

Fig. 35.—Proportional Compasses.

pivot is to be set in order to give the required proportion b tween the openings of the two ends of the instrument. Thus, the line engraved on the sliding centre be set to the line figured on the scale, the opening at one end of the compasses will three times as large as at the other. If the centre is to be s to the line 4, one opening will be four times as large as the oth and to enlarge or reduce any measurements on a drawing fo times, it is only necessary to take the measurements from t original drawing with one end of the instrument and trans them to the new drawing with the other end. The bet

quality of proportional compasses have additional scales engraved upon them, giving the ratios of diameters of circles, areas, and other tables, and some have also a rack and pinion motion, for setting the centre pivot in its correct position.

Fig. 36.—Bow Compass.

Bisecting compasses are a simple form of proportional compasses, intended for measuring and setting off lengths only in the proportion of 1 to 2. They are, accordingly, provided with a fixed pivot, and have no means of adjustment.

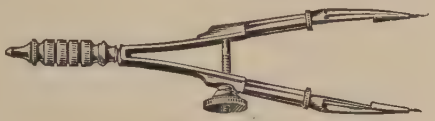

Fig. 37.—Spring Bow Dividers.



Fig. 38.—Spring Bow Pencil.

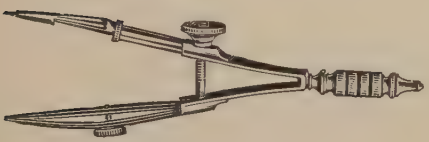

Fig. 39.—Spring Bow Pen.

Bows (Fig. 36) are used for describing smaller circles, and these may be obtained also either single or double jointed, or with pain or needle points. Double-jointed bows, with needle points, are well worth the extra cost.

Spring bows are used for making small circles. They are sold

in sets of three, comprising dividers, pen bow and pencil bow. A set is illustrated by Figs. 37, 38, and 39.

A form of spring bow which is known as the "pump" pen i shown in Fig. 40. In this, one leg consists of a straight rod abou 4 in. long. The pen or pencil forms the other leg, which revolve freely around the centre rod. The method of using is shown a Fig. 122, p. 69. The pen and pencil points are interchangeable, an a larger circle can be described with this instrument than with th

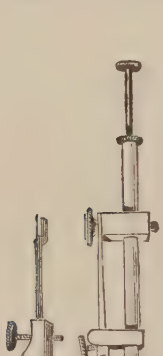

Fig. 40.—Pump Bows.

Fig. 41.—Spring Bows.

ordinary spring bows. Fig. 41 shows another form of spring bo with which larger circles can be drawn.

Beam compasses are useful for striking very large circl Those fitted with a socket to take a lath are the cheapest, and a suitable for all practical purposes. It is advisable to have o end fitted with a screw adjustment, as this saves a lot of troul in setting to the required radius.

Beam compasses are somewhat costly, though not difficult make. The home made beam compasses about to be describ are generally used in preference to the superior and orth dox kind, principally on account of their great lightne The beam was made from an old boxwood 18-in. sc that was badly damaged on one edge. This was ripp

down the middle and trued up; the scale on the upper edge afterwards proved to be of great use in adjusting the two points.

Having made the beam, cut two strips of tin about $\frac{5}{8}$ in. or $\frac{3}{4}$ in. wide, and long enough to go round the beam, and make a lap-joint as shown in Fig. 43 and also in all the other figures; bend these strips tight round the beam, so that they will just slip, and solder the lap-joint. From two other strips of tin bend up two split tubes, one as in Fig. 42, to fit a drawing pen, the other to fit a

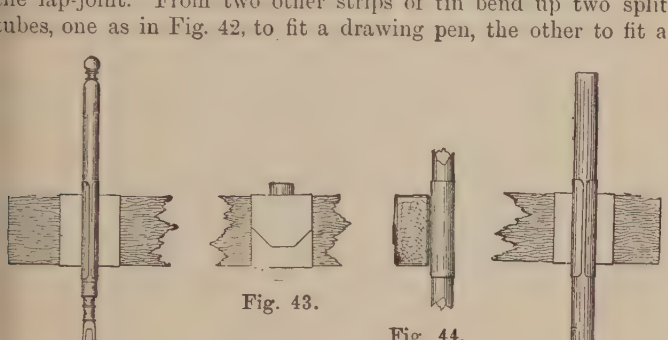

Fig. 42. Fig. 43. Fig. 44. Fig. 45.

Fig. 42.—Pen Point. Fig. 43.—Back of Holder. Fig. 44.—Section through Beam. Fig. 45.—Needle Point.

BEAM COMPASSES.

short piece of ordinary wooden penholder. These split tubes should be soldered to the two tin straps, on their plain sides, in the positions shown in Figs. 42, 43, and 45.

The piece of wooden penholder that fits the other split tube, and forms the needle-point, should be about the same length as the drawing-pen. Into one end of it drive part of an ordinary fine sewing needle, point outwards, then shape the penholder as a pencil is sharpened (see Fig. 45), and the needle-point is complete. When not in use it is well to keep a bit of cork stuck on the end of the needle-point for protection. When fixing together for use, as in Figs. 42 and 45, the pen and needle-point should be kept perpendicular, and in the right position. Should the straps and split tubes at any time work a little loose, they can easily be tightened by a slight pinch with the thumb and finger.

Should a pencil-point be wanted instead of a drawing-pen, it is easy to get one to fit well into the split tube made for the pen.

A cheap makeshift beam compass, with which good work can be done, may be made out of a blind lath and two good-sized

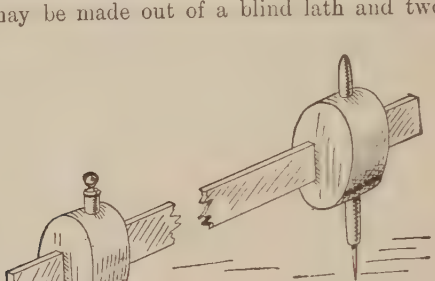

Fig. 46.—Cheap Beam Compass.

corks, such as are used in pickle bottles. Holes for the reception of the lath and drawing pen, and also for the pricker or needle stuck into a penholder, are burnt and cut through the corks as

Fig. 47.—Curve Bow.

shown in Fig. 46. The cork takes a good grip of the lath, and the instrument is quite steady and pleasant to work with.

For very flat curves, a Curve Bow (Fig. 47) is sometimes used. It consists of two wooden beams, one being a rigid piece of hard wood with a screw working through the centre; the other a thin, pliable strip, which is bent by the turning of the screw. Within narrow limits, this instrument can be adjusted to varying radii, but if the strip be bent beyond a moderate extent the curve loses its circular character and becomes approximately parabolic.

For inking-in large curves, such as those of elliptical arches "splines" are very useful. These may be made of lancewood

hickory, or ash, about ¼ in. square. They are bent to the required curve, and kept in position by means of weights.

Railway curves (Fig. 48) may be obtained in cardboard, pear-



Fig. 48.—Railway Curve.

wood, or ebonite, with radii varying from 1½ in. to 240 in., each curve being numbered according to its radius in inches. These are also useful for setting out flat curves, such as those of camber

Fig. 49.—French Curve.

arches and the lines of railway sidings.

When curves of ever-varying radius are to be inked in, the French curve, shown in Figs. 49 to 51, is used. This consists

Fig. 50.—French Curve.

of a flat piece of hard wood cut out into more or less intricate patterns, with almost any curve between a straight line and a very small circle. When inking in a curve on the drawing with the curve, it is necessary to find some portion of the wood which

exactly coincides with a certain part in the drawing ; this should be inked in with the pen, the curve should be removed, and some other portion of it found to continue the curve from the last point. This process is shown in Fig. 134, p. 77. French curves are made in pearwood, in a great variety of shapes. Figs. 49, 50, and 51 show useful patterns, and a few of these in varying sizes will be sufficient for most purposes.

In cases where there is much repetition of a complicated detail in drawing, it is a saving of time to make suitable templates out of soft wood, with which the outlines can be rapidly

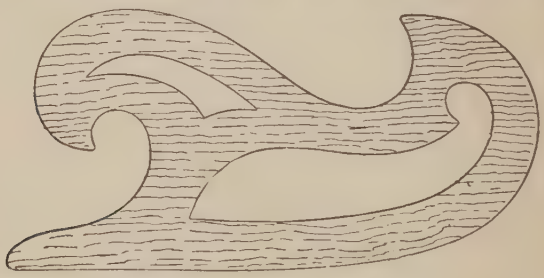

Fig. 51.—French Curve.

drawn by passing the drawing pen round them. Small templates can be shaped with a penknife, the curved portions being smoothed with a file and glasspaper.

In addition to the curves enumerated above, the draughtsman should provide himself with a few thin pieces of pearwood or mahogany, from which a template to suit any required sweep may be easily made with the penknife and a piece of glasspaper.

It should be remembered that a draughtsman who can strike in his curves with a steady freehand sweep often saves himself much piecing up of odd lengths of curves selected from the template, and is certain to obtain a more harmonious effect in the end.

The methods of using draughtsmen's instruments will be explained in the following chapters as opportunities offer.

CHAPTER III.

DRAWING STRAIGHT LINES.

It is presumed that the reader has procured a selection of the instruments already described, and that he is now desirous to attain skill in using them.

This course, outlined in this and the following chapter, while simple enough for youths yet at school, will be found equally suitable for adults who desire to make accurate working drawings, and who have had no preliminary training, and

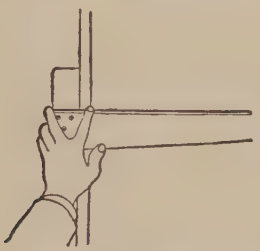

Fig. 52.—Method of Holding T-square.

for young professional draughtsmen who have not learnt the basis upon which their art depends; it will also lead up to the drawing required by the Department of Science and Art in the subjects of machine and building construction.

To commence the practical work of making a drawing, set the drawing board on a flat table, and raise the back edge so that a sloping surface is presented to work upon. Place the paper about half an inch from the left-hand and bottom edges of the board, with the smooth side uppermost, and fix a drawing pin in the top left-hand corner of the paper, put in square and pressed firmly down. Now take the T-square, holding it as shown in Fig. 52, and slide it up to the top edge of the paper, swinging the paper upon the pin already put in until it coincides with the upper edge of the T-square; then put a second pin in the

bottom right-hand corner, and afterwards in the two remaining corners.

The pencil should be used solely at first for practising, and the most expensive drawing pencils are often the most economical to use in the drawing office. There are many well-known makes that may be depended upon to work smoothly and evenly without grittiness or inequality of texture. The number of H's marked upon the pencil indicate its relative hardness. For general use those marked H or HH will be suitable, while for particularly fine work HHHHHH may be necessary. For roughly sketching details on a large scale, a very soft lead, such as B will be found pleasantest to work with. Pencils of unvarnished cedar are to be preferred, and those of a



Fig. 53.—Chisel Shaped Pencil Point.



Fig. 54.—Round Point to Pencil.

hexagonal section do not roll off the sloping surface of the drawing-board or desk.

In sharpening the pencil a chisel point (Fig. 53), not a round point (Fig. 54), should be produced. Almost the first lesson for a draughtsman is how to properly sharpen a pencil, which is not easy for the beginner to accomplish satisfactorily. A pencil point should be well sharpened so that when the pencil is passing along the edge of a square it should be closely against it; and in ordinary drawing or tracing, a clear view should be obtained completely around it on the paper.

A round point wears away very rapidly, and will hardly make even one fine line, whereas if the edge be kept the full thickness of the lead in the direction of the line the pencil will last very much longer and produce better work; the flat faces of the lead point may be slightly rounded, as shown by Fig. 53.

If properly sharpened, one operation of the knife on the wood will be sufficient to allow of several re-sharpenings of the lead, whilst a badly sharpened point requires further hacking of the wood every time the lead is slightly worn.

Fig. 55 shows the T-square and pencil with the two hands in position for drawing an ordinary horizontal line. The pencil

should be upright when looking in the lengthways direction of the line, and sloping about five degrees from the upright in the direction in which it is being drawn, as would be seen at right angles to the line.

Now from each edge of the paper mark off $\frac{3}{4}$ in. and draw a border line all round, with plain square corners. The three



Fig. 55.—Method of Holding Pencil.

fingers at the back of the stock of the T-square keep it close to the edge of the board, which is not easy to do at first starting, but with a little patience and perseverance every border line can be drawn with equal facility. It is important to note that all pencil lines upon a drawing should be thin; if made thick they cannot be inked over so neatly, and the paper will have a greasy



Fig. 56.—Line in Error.



Fig. 57.—Dotted Line.

feel to the pen. The indiarubber should be used very sparingly, and if possible only after a drawing is completely inked in.

A pencil line drawn in error should have a wavy mark across it (as in Fig. 56), and one drawn full, but intended to be inked in dotted, should be marked as in Fig. 57: this is instead of rubbing them out at the time. Another fundamental principle is always to draw a line far enough at the first attempt, but not to draw it beyond the distance it is known to be wanted. An unnecessary line takes time to draw, wastes the pencil point, and takes time to rub out; all matters of moment when excellence is in view.

The draughtsman will, at the onset, find it interesting and useful to test some of the instruments as to their essential qualities. For instance, a straightedge to be of use must be truly straight; the working edge of a T-square is a straightedge, and this may be tested by drawing with a fine chisel-shaped pencil-point a line as long as possible against the working edge of the T-square; then turn the blade over, and, setting the ends carefully to the line just drawn, draw another line against the

same edge adjacent to the line previously drawn. The principle of this test is shown in Fig. 58, where it will be seen that any irregularity in the edge is doubled in magnitude by the pencil lines. If the lines coincide exactly throughout their length, the edge is true; if they do not, the edge must be trued with a

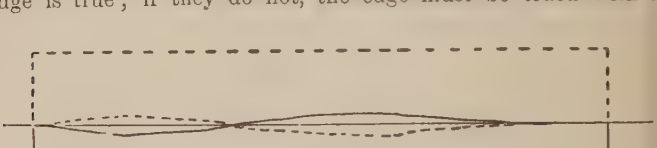

Fig. 58.—Testing Straightedge.

fine-set plane, or glasspaper wrapped round a flat piece of wood

The stock of the square should be exactly at right angles with the blade, but, as usually constructed, this is rather difficult to test without some true instrument of reference; and, paradoxical as it may seem, it does not matter if the stock is not exactly a

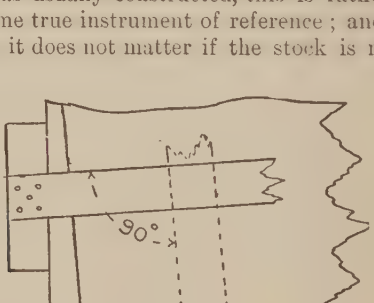

Fig. 59.—Untrue T-square makes Correct Angles.

right angles, as will be seen by Fig. 59, where, of course, th divergency is greatly exaggerated. In fact, the squareness the T-square is entirely unessential for any work, but the absolu squareness of the board is most important. It will be observe that if the paper be set by the T-square, all lines drawn upon

by an untrue square will still be parallel and perpendicular, so that a true drawing will be produced. If, however, the board be not square, a true T-square will not enable a square drawing to be made, as will be seen by Fig. 60, where the T-square is correct but the drawing-board is not square, causing the intended horizontal and vertical lines drawn upon it to have an angular error the same as the board.

The set-squares may next be tested. The end-grain edge and the long edge may be tested and trued up in the same way as the edge of the T-square blade; then, to test the right angle or square

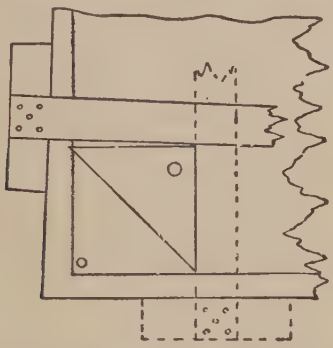

Fig. 60.—Untrue Board makes Incorrect Angles.

corner, hold the T-square firmly on the board, as shown in Fig. 61, and with the set-square against the top edge draw lines *a b*, *a c*, which will coincide if the squares are true, or may show any of the errors depicted in Fig. 61. This edge should then be trued up until the lines drawn upon reversing the set-square truly coincide. To straighten the edges of a set-square, lay a sheet of fine glasspaper on a level surface, place a wood block B with a square edge (see Fig. 62) on the paper, put the square S against the block, and rub the edge on the glasspaper until the angles are correct and the edges straight. The edges when very faulty may be planed with an iron smoothing-plane, and afterwards finished with glasspaper as described above. It is well to note that large set-squares produce better work than small ones, although the latter are more often used on account of their portability.

Now to test the drawing-board, and more particularly the working edges, which are the left-hand and bottom edges. There is one point in making a drawing-board that the inexperienced sometimes lose sight of, and that is the necessity of making the board perfectly rectangular. If this be done, the T-square may be shifted from one edge to an adjacent one, and lines drawn from the new position of the square will be at right angles to those drawn from the first position, although, as just explained, the T-square may be very far from square itself. First try the trued edge of the T-square along the edges of the board to see that they are neither hollow nor rounding, then rule a vertical line from the bottom edge, and, placing the T-square horizontal,

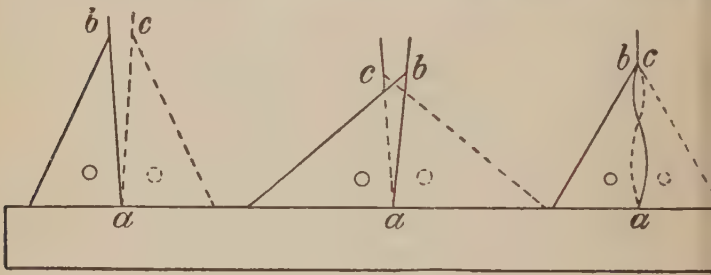

Fig. 61.—Testing Set-square.

draw a vertical line by means of the set-square, which should coincide with the vertical line previously drawn by the T-square; if it does not, the lower edge of the board should be shot, that is, planed true, afresh, and tried until the test shows no error. The board, T-square, and set-squares may now be considered to be in good working order and ready for use.

Before leaving this part of the subject, it may be useful to point out how parallel and perpendicular lines may be drawn when they are not in the same direction as the edges of the board. Fig. 63 shows the ordinary method used by draughtsmen; one set-square being laid down on the paper, the other is placed against it so that its long edge slides against the long edge of the former, and the two free edges give parallel and perpendicular lines as required. The carpenter and joiner may do this more readily with a stiff-jointed 2-ft. rule, using the drawing-board and T-square as shown in Fig. 64.

The testing and adjusting of the drawing-board, T-square, and et-squares having been satisfactorily accomplished, the draughts- nan may now test and adjust himself so that he may be able to o his own personal work with the same relative precision.

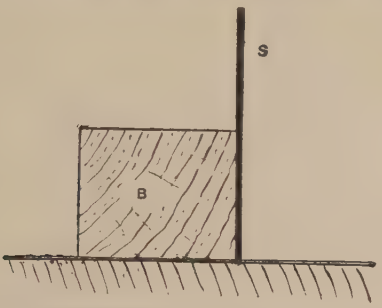

Fig. 62.—Straightening the Edge of a Set-square.

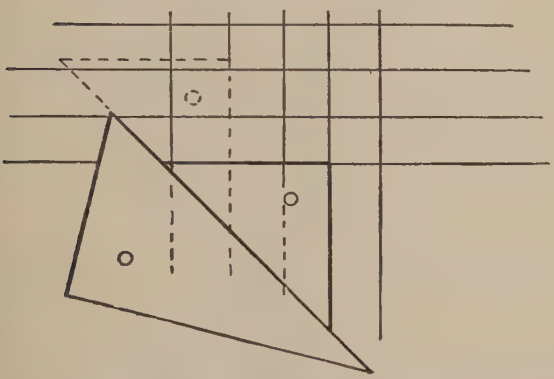

ig. 63.—Drawing Parallel and Perpendicular Lines by Set-squares.

Draw upon the paper a firm T, as in Fig. 65, each of the two nes being exactly 2 in. long. Now study it attentively from a stance; at first the vertical stroke will seem much longer than e horizontal one, but by comparing the parts carefully it will e seen that the first impression was not a true one. Now, with ne edge of a set-square, draw a straight line as nearly horizontal

as can be judged by the eye only, and 2 in. long. Mark what i judged to be the centre of its length, and then draw another lin

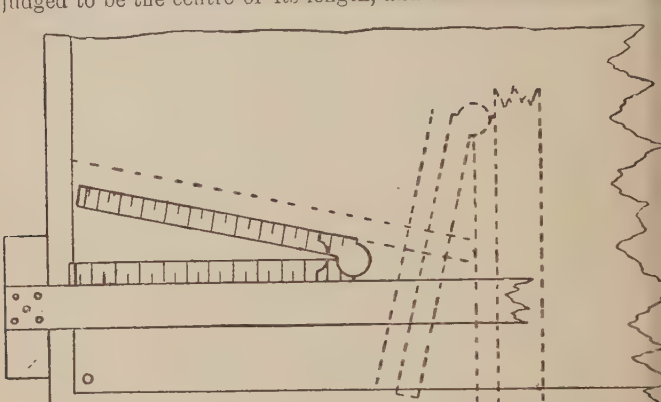

Fig. 64.—Drawing Parallel and Perpendicular Lines with T-squar and 2-ft. Rule.

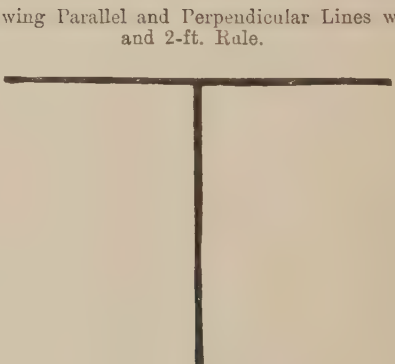

Fig. 65.—Equal Horizontal and Vertical Lines Appear Unequal

of the same length at what is estimated to be a right angle fr it. Test all these points by T-square and measurement, a

actise similar examples of judging lengths, central points, and gles, till the judgment will bear the test of measurement.

In the next example, Fig. 66, it requires some little practice detect the true relative position of the three white spots, as the e is easily deceived. In the drawing the white dots are

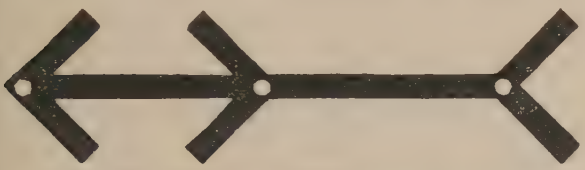

Fig. 66.—Equal Spaced Spots Appear Unequal.

iformly spaced, but, to most people, the distance on the right- and space looks much longer than that on the left, solely by ason of the lines drawn angleways confusing the judgment. gain, in Fig. 67, the two inner horizontal lines crossing the clined ones are exactly straight and parallel with each other, it to many persons they look curved and wider apart in the

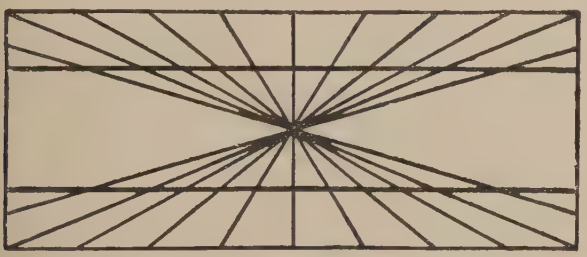

Fig. 67.—Two Parallel Straight Lines Appear Curved.

ntre. This same principle is shown more strikingly in Fig. 68, here the vertical lines are all truly parallel, although they look be alternately converging and diverging.

In Fig. 69 a true square is first drawn, and when part of the wer half is covered, it looks as if much more than the covered rt is missing. In Figs. 70 and 71 the two circles are precisely e same size, but the black on a white ground looks smaller an the white on a black ground. This appearance is caused

because the white surface reflects the light, while the dark surface absorbs it.

A curious test for the eyesight is shown by Fig. 72, which consists of two black dots, about ¼ in. diameter, printed upon the

Fig. 68.—Parallel Lines Appear to Converge and to Diverge.

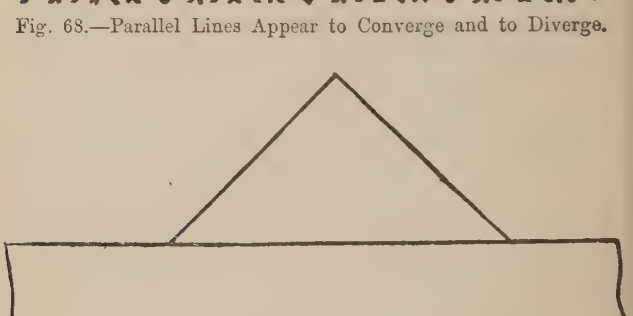

Fig. 69.—Square Partly Covered.

paper at a distance of 3 in. centre to centre. Shut the right eye and, with the left eye, look at the right-hand dot; on moving the paper nearer or farther there will be found one position, when the eye is about 9 in. from the paper, at which the left-hand dot vanishes; at all other positions both dots can be seen at the

ame time, although the eye is directed to the right-hand one nly. This is owing to a small part of the retina of the eye aving no power of vision, called the "blind spot," and it is hy sometimes, the head being held in a certain position, a imension figure will disappear from a drawing. On the other

Fig. 70.

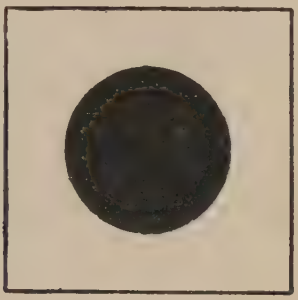

Fig. 71.

Figs. 70 and 71.—Circles of Equal Size Appear Unequal.

and, the eyes can sometimes see more than one would expect, as hen a stereoscopic view is held in the hand and gradually rought into position until the two pictures appear superposed, hen the vista of true perspective will give an air of solidity to ie view equal to any stereoscope. Composite photographs may e optically produced in this way from two separate cards of



Fig. 72.—Disappearing Dot Illustrating Blind Spot in the Eye.

rsons, showing the heads about the same size and position. ot only upon the drawing-board and in the workshop should e eye be educated ; the same kind of practice should be kept out-of-doors and in the workshop.

The set of examples illustrated by Figs. 73 to 75 may be ed over again when the lines are closer together, when any egularities will be found to show much more clearly. If the

lines are placed less than $\frac{1}{16}$ in. apart, they will appear, at a little distance, like an even tint of shading, and the closer they are the more difficult will it be to get the appearance quite uniform, but this is very good practice.

The following examples (Figs. 73 to 75) are selected out of a large number of possible combinations, as giving variety of practice while not appearing too difficult. They are, however, more difficult than they appear, so that they must be commenced with the determination to produce very neat and accurate drawings.

After drawing the border line in pencil, $\frac{3}{4}$ in. from each edge

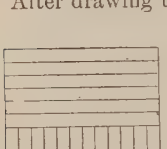

Fig. 73.

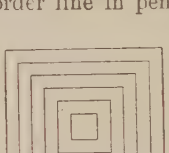

Fig. 74.

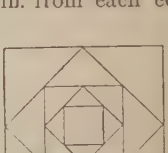

Fig. 75.

Figs. 73 to 75.—Square Figures for Practice in Drawing.

of the paper, as already described, find by measurement the centre of the paper, so that the second square (Fig. 74) may be placed in the middle, rule a horizontal line for the squares to rest upon, draw the middle one in outline first, and then the others, each measuring 3 in. along one side. The spaces between the border line and each of the squares should be equal. In the upper half of the first square (Fig. 73) mark off equal divisions of $\frac{1}{4}$ in. each, and draw horizontal lines; then, in the lower half mark off similar distances and draw vertical lines. In the second square (Fig. 74) equal distances must be set off from each of the sides, and parallel lines drawn, so as to make a number of complete squares. These should be drawn with a fine chisel-pointed pencil, and then tested by drawing diagonal lines from opposite corners. If the squares have been correctly set out, all the angles will be upon one or other of the diagonal lines. In the third square (Fig. 75) the inner squares are drawn with their angles tangent to the sides of the one next larger. If very fine pencil lines are drawn across opposite angles of the outer square, and then two other lines bisecting the sides, it will be found easy to join up the inner squares to the points so found.

The next lesson illustrates the method of drawing and inking nes. A border line may be pencilled round the paper $\frac{3}{4}$ in. rom each edge; then rule horizontal lines, the top one being bout 2 in. below the top border line. About 1 in. below, ark the position for the upper full line, and from this mark ff five more positions each $\frac{1}{2}$ in. distant from that above it.



Fig. 76.—Full Lines.

hen, through the two first positions, draw full lines (Fig. 76), in. long and with each end equidistant from the border. hrough the ends draw faint lines vertically downward, and then raw the dotted lines (Fig. 77) and dimension lines (Fig. 78), eir lengths being limited by the faint lines just mentioned. otted lines, as shown in Fig. 77, are used to represent hidden dges of surfaces; they are sometimes called broken lines, and



Fig. 77.—Dotted Lines.

onsist of alternate short strokes and spaces measuring about $\frac{1}{8}$ in. each. Dimension lines, as shown in Fig. 78, consist of open otted lines. These dimension lines are to guide the eye from rrow-head to arrow-head in reading dimensions, as shown in ig. 79; they should consist of strokes not more than $\frac{1}{16}$ in. long, nd not less than $\frac{1}{4}$ in. apart; in long dimension lines the strokes ay be $\frac{1}{2}$ in. apart. It will be worth while to measure these



Fig. 78.—Dimension Lines.

istances the first time of drawing them, but a very little practice ould enable a draughtsman to judge of the correct length with-ut actual measurement. When making finished drawings, in ractice it is found best, when inking in, to use straight blue nk lines terminated at the ends by black arrow-heads.

When it is desired to show the interior construction of any bject, an imaginary cut is made through it, and the representa-

tion of the cut surface is called a section. The direction of th cut is marked upon the original drawing by a line of sectio formed of strokes and dots placed alternately, with a letter a each end, as A B upon Fig. 80. This line is usually in red ink



Fig. 79.—Method of Showing Dimensions.

but as all the work in the present lessons is black and white thi dotted section line may be made the same as the other lines The horizontal graduated lines in Fig. 81 are meant to be d different thicknesses ; this is done when inking-in ; for the presen simply draw five thin pencil lines ½ in. apart.

Fig. 80.—Line of Section.

Before beginning to ink-in the figures that have been pencilled see that the drawing-pen is clean. Never let the ink dry betwee the nibs, but wipe the drawing-pens with a piece of soft rag afte using. In inking-in always try to improve upon the pencilling get an exact fit at all angles, and let tangent parts just touch- neither more nor less.



Fig. 81.—Graduated Lines.

The next process is to ink-in the straight lines. Take the draw ing-pen (Fig. 19, p. 24), open it about a sixteenth of an inch, the close it by the screw until daylight just shows between the nibs now hold it in the lips, and breathe between the nibs, then dip the carefully into the Indian-ink bottle so as just to touch the surfac of the liquid, when the ink will run up between the nibs, follow ing the moisture deposited by the breath without wetting th outside of the pen. Try on a separate piece of paper for the righ thickness of line. A piece of chamois leather or rag should b

kept handy to wipe the outsides of the nibs in case of ink being there, because if ink be allowed to get on the outside of the pen, a blotted line will be the consequence.

Now hold the drawing-pen as shown in Fig. 82 and carefully ink-in all the horizontal lines, both full and dotted, correcting, if possible, any slight irregularities that may have been made in pencilling. In drawing the graduated lines

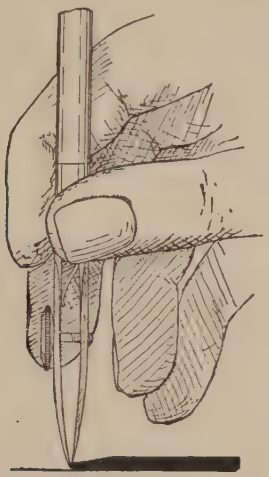

Fig. 82.—How to Hold a Ruling Pen.

(Fig. 81), begin with the thinnest, then with the middle finger, as shown in Fig. 82, turn the screw of the pen back, say, about a quarter of a revolution for each of the others, the last opening being about the right thickness for the border line. As the border line takes longer to dry it is very easy to smear, but of course this may be avoided by letting the ink dry while preparing the ink-leg for the compasses.

CHAPTER IV.

DRAWING CIRCULAR LINES.

Compass curves is the name given to all curves composed of circular arcs. They can be drawn by the compasses in one or more operations, and the name distinguishes them from lines of varying curvature, which are again divided into various classes according to their character. With compasses in hand, the con-

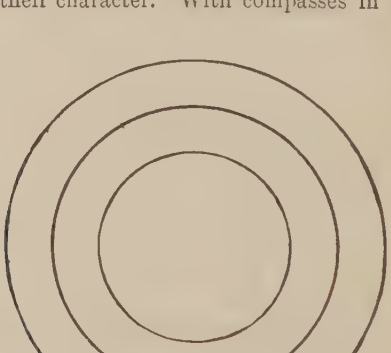

Fig. 83.—Concentric Circles.

struction of a circle is so simple that anyone can strike a circle of some sort ; but many persons who think they are draughtsmen cannot draw a good circle. Strike, describe, and draw are three terms used indifferently for the operation of *making* a circle.

To ensure good work : Hold the compasses by the top joint ; place the pencil or pen perpendicular to the paper and, sloping it slightly in the direction of motion, make the circle by one sweep of the compass. Now try to make three concentric circles, as shown at Fig. 83, on the paper by these rules, remembering

that concentric circles are those having the same centre, and proceeding as follows :—

As when drawing straight lines, first commence with a border line, three-quarters of an inch from the edge all round the paper, then draw vertical and horizontal centre lines, so that their intersection will show the point where the point of the compasses is to be placed. Open the compasses to 2 in., measured on one of the scales, and strike the outer circle. Then partially close the compasses to 1½ in. on the scale, using only the right hand for the compasses and the left to steady the scale, and describe the second circle. Then close further to 1 in. and draw

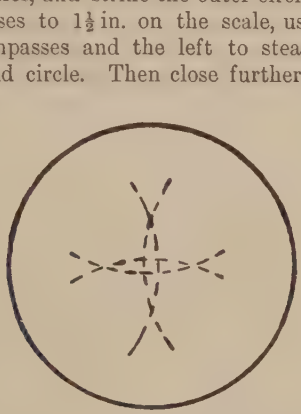

Fig. 84.—Finding Centre of Circle.

the inner circle. The illustrations printed in this book are half the size they are to be drawn.

The difficulty of estimating the point that is exactly the centre of a circle may be tested by taking a penny and marking the outline of a circle with it on the paper ; then mark where the centre is estimated to be, and afterwards test it by drawing short arcs from four opposite points by the compasses, as in Fig. 84. Following this, a useful practice would be to sketch a circle freehand and test it by finding the mean centre, and then striking a true circle by the compasses.

As a further lesson, the interesting work of drawing curves may be taken. The curves across the lower part of the diagram (Fig. 85, p. 54) are known as flat curves, because, having a large radius, they have not very much "bend" in them. To draw these, first put in a thin centre line down the paper, then mark the positions

where the curves cross the centre line ½ in. apart, and from the inner one measure 6 in. to point (Fig. 85), which is to be used as the centre. Open the compasses wide enough to make the largest curve first; see that the point of the compass pencil is chisel-shaped, as shown in Fig. 53, p. 38, and in the right direction to make a thin line; if the compass leg has a joint, bend it so that

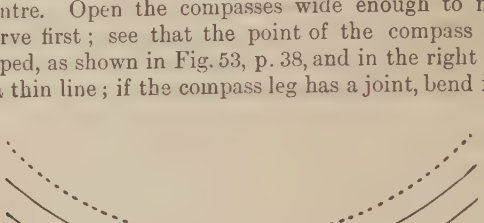

Fig. 85.—Flat Curves.

the pencil is at right angles to the paper, and then, holding the compasses by the top, as in Fig. 86, swing them round carefully to make the curve the required length. Do the same with the other two curves in Fig. 85, putting the dotted one in as a full

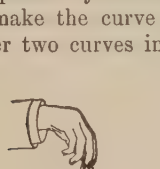

Fig. 86.—Holding Compasses.

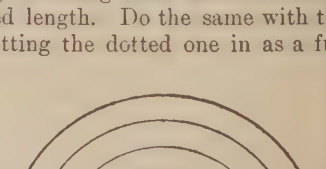

Fig. 87.—Sharp Curves.

line, and making a few short strokes across it, as shown in Fig. 57, p. 39, to indicate that it must be dotted when inking-in, as described on p. 39.

Large or flat curves are really more difficult to draw than small ones, although many think the contrary, but the fact is that any irregularity shows more in a small curve. Now very carefully mark the centre (Fig. 87), and measure off ½ in. distances along a thin horizontal line through which the small curves will be drawn, the largest of them being 3 in. radius. This completes the pencilling; but, to ensure neat work in inking, see that the terminations of all the lines and curves are clearly indicated

her by a thin pencil line drawn across their ends, or by being awn very neatly and terminated evenly.

Next try some pieces of circles, or arcs, as they are called. t them be concentric, as shown at Fig. 88, with radii of 3 in., in., and 4 in., and each 4 in. long, measuring from end to end

Fig. 88.—Concentric Arcs.

a straight line, that is, measuring the chord of the arc instead the arc itself. These might be called parallel curves, and, hough this is an expressive term and not likely to be misderstood, they are not a correct example of parallelism.

Now try three more arcs, but all struck with the same radius,



Fig. 89.—Arcs of Equal Radius.

at Fig. 89, say 3 in., and the same distance apart on the centre e, say $\frac{1}{2}$ in. These curves are exact counterparts of each other, hough they look much less regular than the concentric arcs, d an important principle is involved in the comparison.

To find the centre of any small compass curve as A B, Fig. 90, p. from points A and B strike arcs of the same radius intersecting *c* and *d*, and draw a line through the intersections cutting the at *e*. This line will pass through the centre. Then from nts *e* and B, with a rather smaller radius, strike arcs interting at *f* and *g*; draw a line through these intersections, and

where it cuts the previous line will be the required centre, a
shown at *h*.

Before drawing the circles (Figs. 91 to 93), a pair of centr

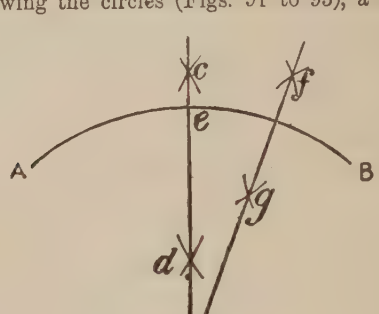

Fig. 90.—To Find the Centre of a Small Arc.

lines cutting each other at right angles must be drawn for eac
and it should be a stringent rule never to draw a circle under ar
circumstances without first having two centre lines to mark i
position. In the first circle (Fig. 91), mark off points ¼ in. apa



Fig. 91.



Fig. 92.



Fig. 93.

Figs. 91 to 93.—Circles for Practice.

along one of the diameters from the circumference to the centr
and then describe the concentric circles with the compasse
taking care not to bore a large hole through the paper with t
point. The compasses, if properly sharpened, should barely pen
trate the paper and leave no impression on the board.

To fill up the middle circle (Fig. 92), set the compasses to t
radius, and then, putting the point at the intersection of one

ıe centre lines with the circumference, mark across the circum· ·rence on each side ; do the same at each intersection of the ntre line with circumference, and it will be found that the rcumference is then divided into twelve equal parts. Now join ıch opposite joint by a line passing through the centre and the gure will be complete.

The last figure to be drawn (Fig. 93, p. 56) is the most difficult, but ıs the best effect, so it is worth taking some pains over. Draw ıe two centre lines, put in the large circle, and divide the hori- ontal diameter into ¼ in. spaces. Take the bow-pencil (Fig. 38, p. 31) r small compass (Fig. 36, p. 31), set it to ¼ in. radius, and then put in

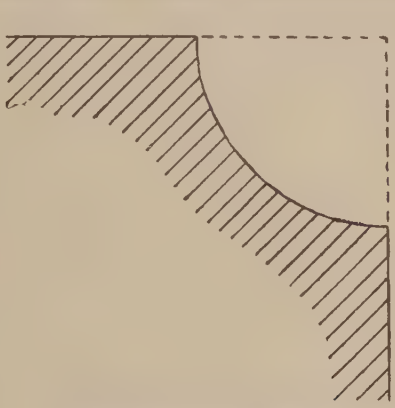

Fig. 94.—Old-fashioned Hollow Edge of Castings.

ıe smallest semicircle on each side. Then set it to ½ in. radius, ıd put in the next semicircle ; then to ¾ in. radius for the next vo semicircles, which should exactly meet at the centre. Now 1 in. radius, and, lastly, to 1¼ in. radius, checking the curves efore actually drawing them, by seeing how they fit with those ready drawn.

Curves applied to machinery and buildings, as a rule are troduced with an object in view. A favourite method of ıishing the edges of castings, until about thirty years ago, was run a hollow curve along them as in the illustration, Fig. 94. ıis is very easily drawn by opening the compasses to the quired radius and placing the point at the junction of the two

straight lines, as seen in the section. When engineers began to consider the why and the wherefore, and to see beauty only in that which was strictly adapted to strength or economy, they saw that this curve was even worse than a plain angle, for it gives two sharp edges to damage and be damaged, and a groove to hold the dirt.

A rounded angle (Fig. 95), whether internal or external, was found to produce a better arrangement of the crystallisation of the iron in cooling, it gave a stronger casting, was less liable to damage, and altogether more appropriate. This is perhaps

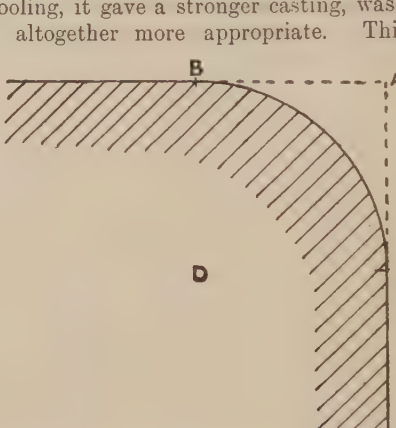

Fig. 95.—Modern Angle of Castings Internal and External.

the most important curve a beginner can have; though difficult to draw well if the centre has to be guessed at, it presents no difficulty and takes less time if the right method be followed. First decide upon the radius, say 2 in.; set the compasses to this, place the point at the intersection of the straight lines A, and mark with the compasses across each of the lines B and C. Then from the intersections of each of these marks, draw intersecting arcs within the lines to give the exact place, marked D, for the point of the compasses to draw the rounded angle. If care be taken it will be found that the curve exactly fits the straight lines, which is of course what the draughtsman should aim at.

A more advanced example, such as would occur in fitting a curve between the arm and boss of wheel, is shown at Fig. 96

a be the centre of the wheel, $a\,b$ the radius of the boss, say ., and $b\,c\,d$ part of the boss ; also let $d\,e$ be part of the arm. s required to join them by a curve of $1\frac{1}{2}$ in. radius. Open the passes $1\frac{1}{2}$ in., and from two points on the curve, and two on

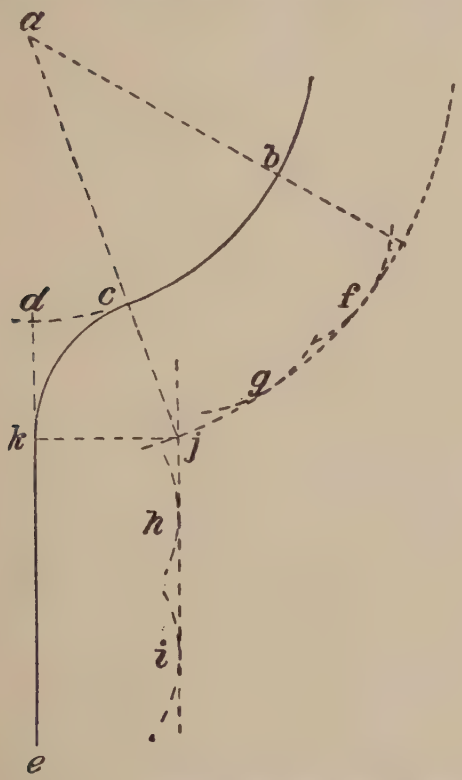

Fig. 96.—Curves Joining Arms and Boss of Wheel.

e straight line, draw short arcs as shown at $f\,g$, $h\,i$. Then aw a straight line tangent to the two arcs from the line, and th the compasses a concentric arc tangent to the two small cs from the curve. Where this new line and curve cross each her (j) will be the exact centre for the curve of $1\frac{1}{2}$ in. radius to

join the arm and the boss. It is important to note that the ex point of meeting of the two curves will be at *c* in the line joining their centres; and of the curve and straight line at where a perpendicular would fall from *j*.

The illustrations given in Figs. 94 to 96, pp. 57—59, sh the application of the simplest elements of practical geometry the production of good junctions in the outlines of a drawi

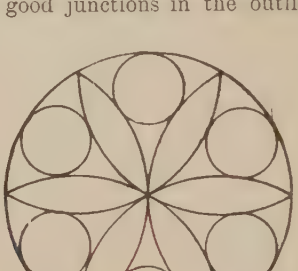

Fig. 97.—Example Requiring Accurate Drawing.

The study of practical geometry forms a very good grou work for a draughtsman, and in machine drawing is quite ind pensable; but for architectural drawing there is a great deal t may be omitted. One of the advantages pertaining to it is t it compels neat work, as the problems will not work out unl accurately set off.

The illustration shown at Fig. 97 is left without any expla tion; it will be found interesting to work out, and it will also a good example for showing accurate draughtsmanship.

Fig. 95, p. 58, shows how a square angle is rounded off wit given radius. After considerable practice the draughtsman can of guess the position of the centre of the curve fairly accurately, instead of prodding about to find a centre which will permit curve to meet the straight lines, it is better to use the geometri method, which is as follows: Produce the two lines till they m at A as shown dotted; then, with the meeting point A as centre a a radius equal to the radius of the required curve, cut each of two lines at B and C, and, from each of these two points as cent strike arcs that cut one another at D, which is the required cent

e tangent curve can then be drawn accurately and easily. With a le practice, this method is so much more rapid and exact than ssing at the centre that there is good reason for adopting it ays. Fig. 94, p. 57, is the opposite of Fig. 95, and is too simple need explanation.

Fig. 98.—Rounded Corners.

Fig. 99.—Parallel Lines joined by a Semicircle.

Fig. 98 shows the method just described applied to three aight lines forming two right ang es and having two adjacent ners rounded.

Fig. 99 shows how to deal with two parallel lines that are to joined tangentially by a semicircle. In this case bisect the ace between the two lines by a perpendicular line that must ntain the centre of the circle from which the required curve is

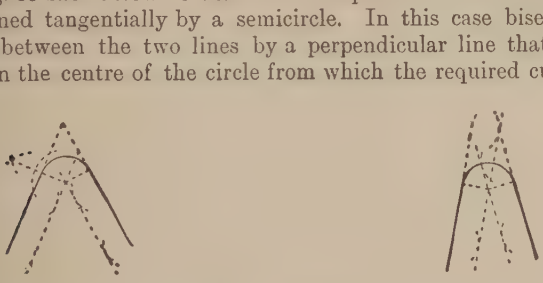

Fig. 100.—Angular Lines Joined by Circular Arcs.

rmed. Determine the extreme position of the curve and mark om it, along the centre line, a distance equal to half the distance tween the lines, and this mark will be the centre of the required cle.

Fig. 100 is more difficult, as in this figure the lines, which it is sired to join by a curve, are not at right angles. Therefore, side these, and at a distance from them equal to the radius of e curve which it is desired to use, draw two parallel lines. To

do this, take the radius in the compasses and strike two arcs some distance apart along the inside of each line. Tangent these draw the two inner straight lines shown dotted, and th intersection will give the centre required. The exact points junction of the straight lines with the curve can be found drawing perpendiculars from the centre to the straight lines the method shown on the left-hand side of Fig. 100.

The figure on the left side is exactly similar to the last, w the exception that it represents a sharper angle than that sho by the angle or corner in the right hand figure.

Fig. 101 shows the junction of a straight line and curve b

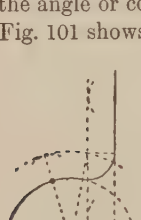

Fig. 101.

Fig. 102.

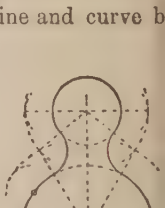

Fig. 103.

Figs. 101 to 103.—Examples of Curved Lines as Junctions.

smaller curve. In this example, after drawing the given strai line and circle, set the compasses to the required radius, and fi any point on the circumference of the circle describe a short outside it. From the centre of the circle draw a straight through this last point, and its intersection with the arc will g the radius of an arc concentric with the large circle which m be drawn towards the given line. Then, with the required rad again set off arcs from the given line to give a parallel line, a Figs. 99 and 100. The intersection of this parallel line with larger arc will give the centre to use for the connecting cu In every case it will be observed that the perpendicular line fi the centre of the junction curve to the line, or the line joining centres of the two curves, will give the exact termination of junction curve.

Fig. 102 is practically the same as Fig. 101, with different ra

Fig. 103 shows two circles of different size joined by

urves of equal radii, set off upon the same principle as Figs. 101 nd 102.

Fig. 104 shows a straight line cutting a circle and joined by mall curves on the inside. After drawing the circle and straight ne, take the required radius of connecting curve and draw a nort arc on the inside of large curve—say, on the centre line—nd from the main centre draw an arc concentric with the large rcle, but inside it. Then, with the required radius, obtain a line arallel to the given line, and the intersections of this parallel ne with the large arc will give the centres for the connecting urves.

Fig. 105 shows two given parallel straight lines which are to be

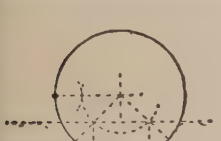

Fig. 104.—Curved Joins.

Fig. 105.—Ogee Curve.

oined by an og e or reversed curve. Select a point on one of ne lines from which the curves may start, draw a horizontal line nd also an inclined line, making an angle of 60° with it. The tter line produced to cut the other given straight line will mark ne termination of the curves. Bisect this inclined line, and it ill give the junction point between the two curves. Bisect each alf of the inclined line and produce the bisection to meet the orizontal lines, to give the centres for the curves. Before draw-ng the curves, join these centres, to see that a straight line will ass exactly through the junction of the two curves, and then put n the curves with a radius equal to half the length of inclined ne. This is a very useful curve, and is similar to those used for ross-over roads on railways. In architecture the best curves are roduced from conic sections or freehand Circular curves have a arsh appearance. There are, nevertheless, many cases where ney are necessary or desirable.

The remaining examples in this chapter (Figs. 106 to 113) are l well-known mouldings, whose beauty consists in their mplicity. Many beginners will appreciate the ability to make, this early stage, drawings that soon look architectural. There

are many cases where mouldings are intended purely for orna ment, as round the panels of a door; but there are other case where the mouldings form a definite addition to the strength, a at the ends of a cast-iron column.

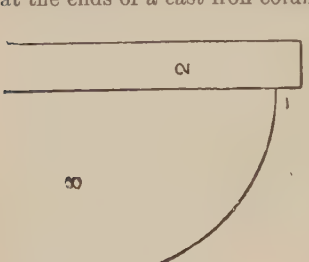

Fig. 106.—Ovolo or Quarter-round Moulding.

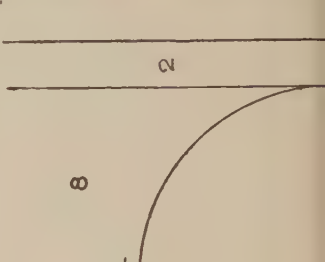

Fig. 107.—Cavetto or Hollow

Speaking broadly, mouldings may be divided into two classe known as Roman and Grecian, the former being compass curve and the latter derived from the conic sections. They are use

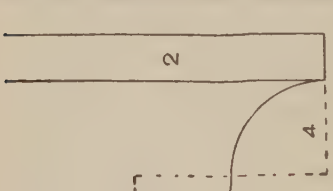

Fig. 108.—Cyma Recta or Ogee.

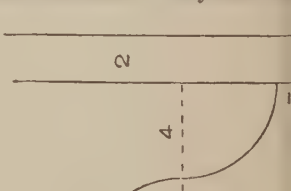

Fig. 109.—Cyma Reversa— Reversed Ogee.

generally for relieving straight lines by giving variety of shad or for lessening the abruptness of the junctions of various parts

In the examples shown at Figs. 106 to 113 a quarter of an in is taken as the unit, the figures marked on the illustration givi the number of quarter-inches in each piece. These must not

ken as fixed proportions, but merely as suitable sizes for the amples. It will be seen that every curve forms exactly a arter of a circle, and very neat junctions should be made where

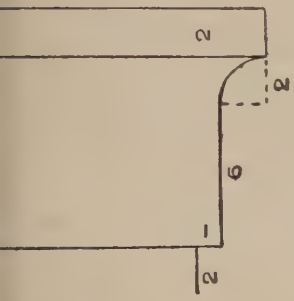

Fig. 110.—Scape Moulding.

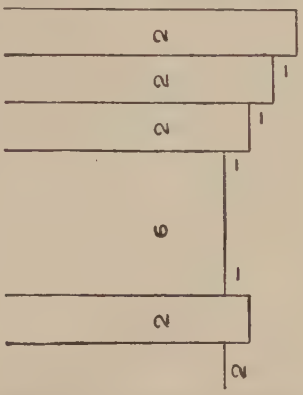

Fig. 111.—Fillets or Annulets.

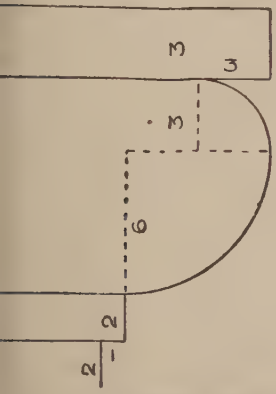

Fig. 112.—Quirked Ovolo.

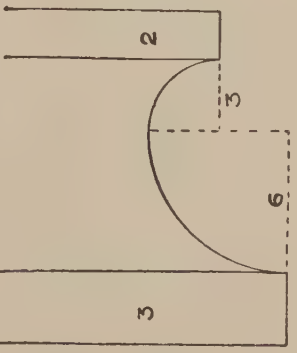

Fig. 113.—Scotia.

o curves meet. The dotted lines show that tangent curves vays meet upon the line joining their centres.

The heading to this drawing should be in block letters $\frac{5}{16}$ in. ep, and the descriptions in block letters $\frac{1}{8}$ in. deep, all upright.

It is better to avoid ornamental printing at least until so facility has been attained in making plain block letters, as other lettering can exceed this in clearness and neatness.

There are many other mouldings founded upon these or ma up by a combination of two or more, and it will be interesting examine a stock of mouldings or a pattern book of machine-ma mouldings, to see how the sections are made up. Attempts design a moulding should not be encouraged until a good gene knowledge has been obtained of those in use. It is one th to have a striking outline in section and quite another to see same thing in elevation; there is much scope for taste in select

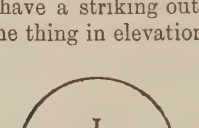

Fig. 114.—Semicircular Arch.

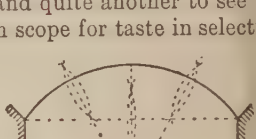

Fig. 115.—Segmental Arch

an appropriate moulding for any purpose, as there is also designing a piece of architectural work. The majority mouldings made up of compass curves are ugly, but there cases where they are appropriate, and that is the excuse making them.

If buildings containing arches of various shapes be exami it will be found that although every arch is made up of a gr number of lines for mouldings, etc., there is a type underly each different arrangement. Outlines of the commoner form arches are shown in Figs. 114 to 121. The curves, of course, sim show the types, the construction of the arch being on the li shown. In other words, every arch may be reduced to a sir line, the shape of which indicates the type of arch, and is re the foundation of its construction. In connection with the a there will always be the supports—either piers or abutment which receive the weight and thrust. The true termination the arch may sometimes be obscured, as in certain stone arc and at other times perfectly evident, as in brick arches. termination is the skewback, which should be always at ri angles to the direction of the curve ; or, when the curve is str from centres, the skewback is radial from the centre used for adjacent part of the curve. In the diagram given in the foll

ng eight figures the skewbacks and abutments are indicated for ach arch.

The first one (Fig. 114) is a semicircular arch of 3 ft. span—hat is of 1 ft. 6 in. radius—and is a full half circle; in this the kewback is horizontal, and it is popularly supposed that on that ccount there is no thrust, but it is a misapprehension, as there is thrust amounting approximately to one-fourth of the load. The semicircular arch occurs very largely in Norman architecture A.D. 1066-1189), and also in Classical architecture.

The next case (Fig. 115) is a very common form, but properly a egment arch, often called a jack arch, or circular arch, or segmental arch. It is to have a span of 4 ft. and a rise of 1 ft., and

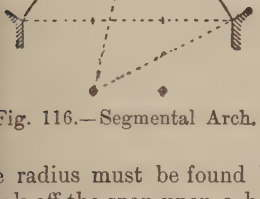

Fig. 116.—Segmental Arch.

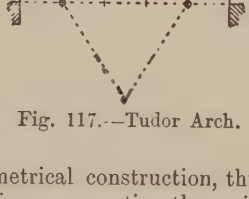

Fig. 117.—Tudor Arch.

ne radius must be found by a geometrical construction, thus: Mark off the span upon a horizontal line representing the springing line, and from that, upon a vertical centre line, mark off the ise; three points will then be given through which the curve nust pass. Take these points in pairs, and with any radius a ttle greater than half the distance between them draw intersecting arcs; through the points of intersection draw straight nes which will meet at a point giving the centre from which the rch curve is to be struck.

To set off a segmental arch (Fig. 116) divide the springing line nto three equal parts, and upon the under side of the middle hird construct a square, the lower corners of which will give the entres to be used. To set off the Tudor arch (Fig. 117) divide ne springing line into five equal parts; take three of these parts, easured downwards under the central division, for the length a rectangle, one division wide, whose lower corners will give ne centres for the middle portion of the arch; the sides of the rch have a radius of one division. Draw lines through the entres to mark the junctions of the curves, and put in the

curves so that they do not show a joint. Figs. 116 and 117 a sometimes called flat-pointed arches, to distinguish them fro the earlier lancet and equilateral arches (Figs. 119 and 120). inking-in these examples let the construction lines be very th and neat, and the outlines clear and bold. If any mouldin were shown to these arches they would be struck from the sa centres, so as to give parallel curves.

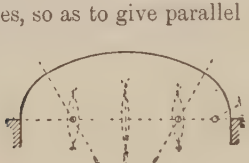

Fig. 118.—Elliptical Arch.

Fig. 119.—Lancet Arch.

A true elliptical arch cannot be struck from centres, as it is conic section, but a very fair one may be set out as shown Fig. 118. Divide the springing line into four equal parts, a upon the two middle ones construct an equilateral triangle; th the corners of the triangle will give the centres for the differe curves of which the arch is composed.

Fig. 120.—Equilateral Arch.

Fig. 121.—Ogee Arch.

The lancet arch (Fig. 119), so common in Early English arch tecture (A.D. 1189-1307), has the centres on the springing lin and the radius used is equal to one and a-half times the spa The equilateral arch (Fig. 120) is the easiest of all to draw, t radius being equal to the span. It was much used in t Geometrical Period, at the early part of the fourteenth centur

The next arch is drawn upon the same principles as the og curve shown in Fig. 121, and with the construction lines giv requires no further explanation. It is defective as a scientif

rch, but occurs often in the Decorated Period, towards the end f the fourteenth century. After that period the arches were ade flatter, examples of which are the segmental, or two-centred, nd the Tudor, or four-centred, arches.

This ink-leg of the compasses works very similarly to the ruling en that has been described in the previous chapter on p. 24, o that little further instruction is required. See that the ibs are square to the paper, hold the compasses by the joint

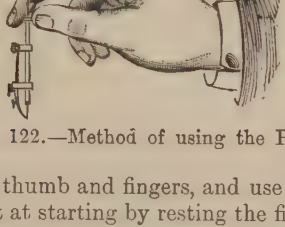

Fig. 122.—Method of using the Pump.

etween the right thumb and fingers, and use the left hand only o steady the point at starting by resting the fingers on the paper. Never use two hands to the compasses. The smaller curves are ot easy to put in with large compasses—a bow pen (Fig. 39, p. 31) r small compass (Fig. 36, p. 31) is generally used ; and for a umber of very small circles, such as rivet-heads, pump bows Fig. 40, p. 32) have a great advantage, and the method of using his instrument is shown by Fig. 122. Lines for the small rinting may now be ruled, and all the lettering put in neatly vith a steel writing pen.

CHAPTER V.

ELLIPTICAL CURVES.

In the last chapter circular curves were dealt with, and by a very easy transition we pass to elliptical curves, or ellipses, commonly called ovals—although strictly an oval is larger one end than the other, like a hen's egg (Latin *ovum*, an egg). The ellipse occurs frequently in machine drawing and sometimes also in civil engineering and architecture.

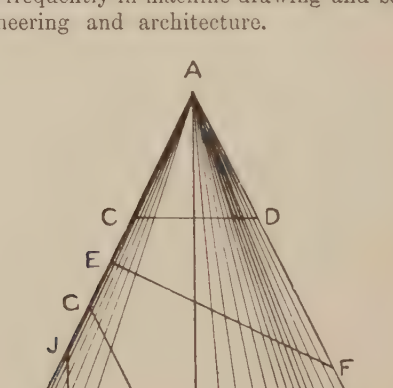

Fig. 123.—The Conic Sections. A B Triangle; C D Circle; E F Ellipse; G H Parabola; J K Hyperbola.

The principal curves are derived from conic sections, so it will be well now to study the different ways in which a cone may be cut in the way shown by Fig. 123. A vertical section passing through the apex of the cone, as A B, the cut surface will represent a plane triangle, and any horizontal section, as C D, will form a circle.

A section in any direction not horizontal, so long as it passes
y through the sloping sides of the cone, as E F, will form an
ose; if the section be nearly horizontal, the ellipse will be
rly a circle, and if it be nearly parallel with the slope, it will
long and narrow.

A section cutting anywhere through the base and parallel to
sloping surface, as G H, will form a parabola; while a vertical
ion, as J K, not passing through the apex will form a hyper-
a. These two may be called open curves, because they do not
n a closed figure, unless the straight base be taken as part of
figure. It will help to impress the derivation of the different
ves on the mind if the cone be drawn and the lines of the
ion marked on it. The cone may also be shaded by lines as
wn, observing that on the left the shading is narrow and

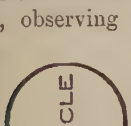

Fig. 124.



Fig. 125.

Fig. 126.

kest at the outer edge, while on the right it is much broader,
darkest a little way off the edge and lighter towards each
, giving the effect of reflected light on the right-hand side.

Whenever a circle is viewed otherwise than at right angles to
plane it appears as an ellipse, though of course its real shape
ains unaltered. Wheels, pulleys, drums, collars, couplings, and
ny other parts, act the same as the penny referred to in the last
on, but they form as many ellipses as they have circles in their
struction. Besides these, there are cases of actual ellipses, as in
elliptical holes cut for handholes in machine framings, elliptical
ring, elliptical arches, elliptical flower-beds, etc. A penny held
at arm's length towards a window will show different shapes
ording to its position. The full view will be a circle as
. 124, and then by turning it slowly the circle will become
ellipse, retaining the full depth but getting gradually less in
th, as Fig. 125, and ultimately showing only a straight line, as
. 126. Every intermediate position that can be taken between
s. 124 and 126 will give an ellipse, so that there is no fixed

proportion between the two diameters; thus an ellipse may obtained of any required length and width.

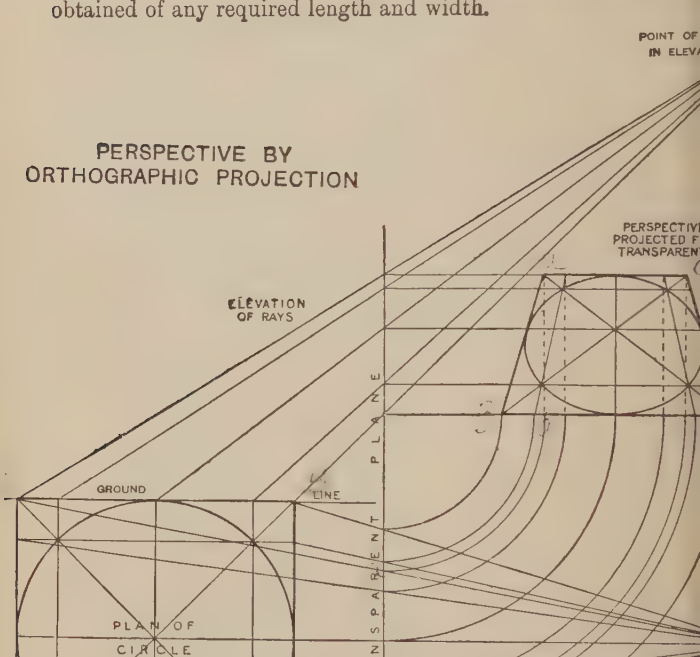

Fig. 127.—Ellipse Projected from a Circle.

It has been contended that, although the perspective view a circle is something like an ellipse, it would quickly be detect as "out of drawing," but it will be found that the statement correct. The centre lines of the circle will not remain the cent lines of the ellipse, and this is where the misunderstanding aris Fig. 127 shows a circle in perspective, with the enclosing squa its diagonals, and centre lines. This will be found to be a tr ellipse. This figure also shows in one view how perspecti

presentations may be derived from ordinary projection such as ery draughtsman is in the habit of using, and gives an portunity of testing whether a circle in perspective is a true ipse.

In the lower left-hand corner a square is drawn and a circle scribed ; the diagonals of the square are then drawn, and where ey cut the circle other lines parallel with the sides are drawn. arallel with two of the sides a line is drawn to represent the ansparent plane or surface which is to receive the picture, and yond this a point is selected to represent the position of spectator point of sight. The top edge of the square is made coincident ith the ground line for the elevation, and a height is assumed for

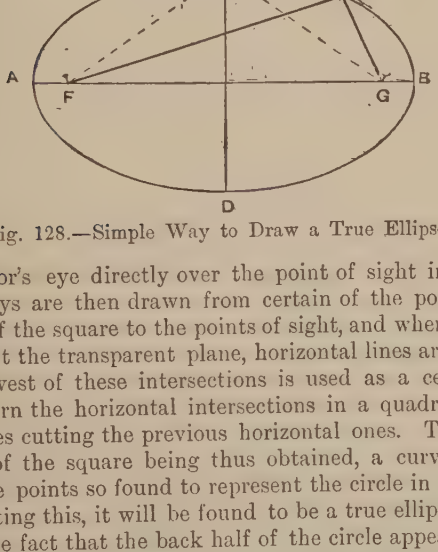

Fig. 128.—Simple Way to Draw a True Ellipse.

ne spectator's eye directly over the point of sight in the plan. ines or rays are then drawn from certain of the points on the oundary of the square to the points of sight, and where the eleva- on rays cut the transparent plane, horizontal lines are projected, nd the lowest of these intersections is used as a centre round hich to turn the horizontal intersections in a quadrant to give ertical lines cutting the previous horizontal ones. The perspec- ve view of the square being thus obtained, a curve is drawn hrough the points so found to represent the circle in perspective, nd, on testing this, it will be found to be a true ellipse, notwith- tanding the fact that the back half of the circle appears so much maller (because more distant) than the front half.

A simple way to draw a true ellipse is shown at Fig. 128. 'irst draw the major and minor axes, as A B and C D respectively. 'hen from C or D as centre, with half the length of A B in the com- asses, cut A B in the points F and G. These are the two foci.

Take a piece of string as long as G C+C F, and fasten the ends b pins at F and G. With a pencil, as shown, stretch the string, and keeping the pencil in the angle thus formed, swing it round bot above and below A B to form the curve required.

Perhaps the easiest way to set off an ellipse on a drawing i from two circles as shown in Fig. 129. Draw two centre lines

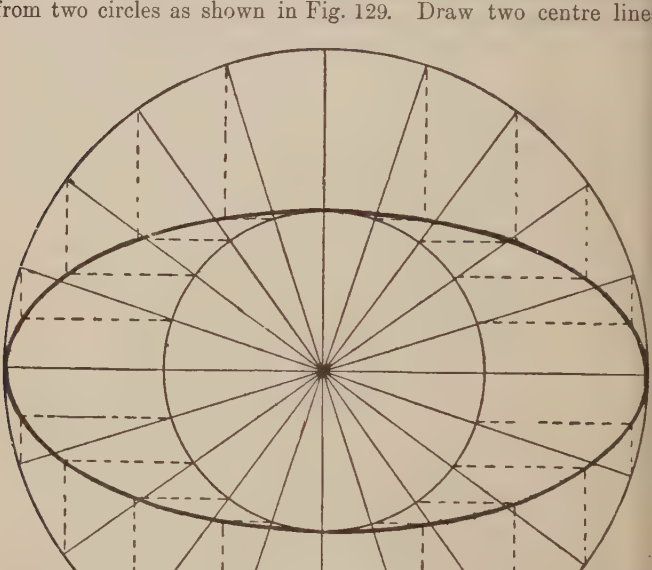

Fig. 129.—Ellipse Constructed from two Circles.

and describe circles equal to the major and minor axes of the required ellipse, say 7 in. and $3\frac{1}{2}$ in.; then draw radii in any position, but preferably say every fifteen degrees (15°). If vertical and horizontal lines be now drawn from each radius where it is cut by the two circles, these lines will intersect at a point in the circumference of the ellipse, and the points may be joined by using a French curve as before described.

An approximate method of drawing an ellipse with compasses

tch up the curve is shown at Fig. 130. Divide the major axis nto three equal parts by the points C and D, and with each of e points as centres, radius equal to A C or D B, describe the l circles shown, cutting one another in the points E and F. s of these circles form parts of the ellipse, the remainders of ircles being shown dotted. To determine the extent of the lines from each point of intersection, draw lines through the res C and D to cut the circles. Then from centres F and E, radius equal to F G or E H, draw tangent arcs to complete the se, as shown.

The same method can be applied to draw an ellipse of different

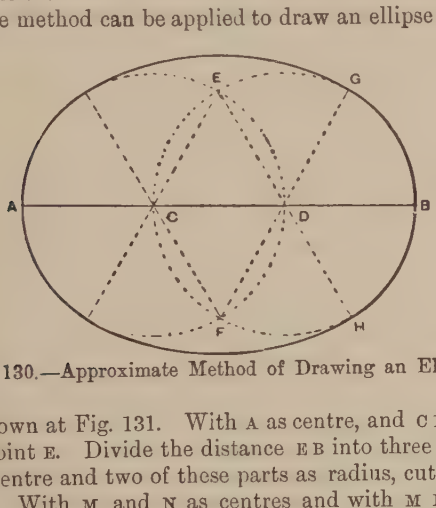

Fig. 130.—Approximate Method of Drawing an Ellipse.

be as shown at Fig. 131. With A as centre, and C D as radius, k the point E. Divide the distance E B into three equal parts. h O as centre and two of these parts as radius, cut line A B in nd N. With M and N as centres and with M N as radius, ribe arcs intersecting in P and Q. With P and Q as centres P D as radius, describe arcs T D V and R C S, and from M and N, radius M A, describe arcs R A T and S B V to complete the se. Lines drawn from P and Q through M and N show where arcs join.

The method about to be described is not very scientific, but it ounded on accurate principles, and is both interesting and ful. Suppose we want an ellipse (Fig. 132), 9 in. long by 6 in. e, which would be described by a mathematician as an ellipse se transverse and conjugate diameters are respectively 9 in. 6 in. First draw two centre lines at right angles to each er and rather longer than the above dimensions, then measure

off carefully from their intersection in each direction the requi semi-diameter. Mark the horizontal line A, the vertical lin the half minor axis $a\,b$, and the half major axis $b\,c$. N

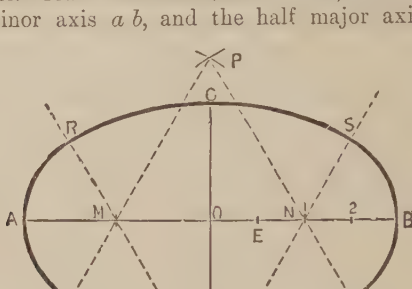

Fig. 131.—Another Approximate Method of Drawing an Ellipse

prepare a slip of writing or drawing paper (Fig. 133) with edge quite smooth and even ; make a mark on this edge n one end, and sketch a hand pointing against the mark. Th

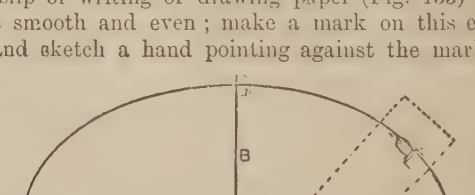

Fig. 132.—Drawing Ellipse with Paper Trammel.

measure off a distance equal to the semi-diameter $a\,b$ and ma another mark, putting A against it ; next measure off from same point a distance equal to the semi-diameter $b\,c$, puttin against it. This paper trammel is now complete, and ready service in constructing the ellipse ; it is shown in course of on the drawing (Fig. 132) by dotted lines.

If point A of the trammel be kept on the A line of the figure, d B on the B line, the hand will show where a pencil dot is to made to give a point in the curve of the ellipse. Of course, vill be wise to go steadily round and put the dots about ¼ in. art, seeing that they look even before joining them up. When

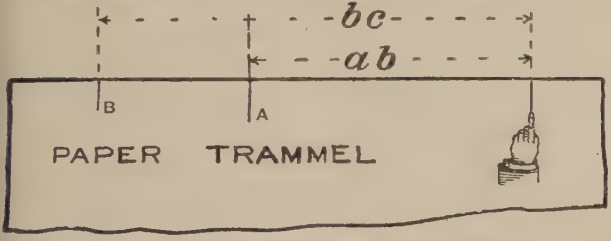

Fig. 133.—Paper Trammel for Drawing Ellipses.

s is done, a light thin line should be sketched continuously rough all the dots, endeavouring at the same time to correct y irregularities. When the pencil curve looks all right, it may inked in with the assistance of a French curve, such as is ustrated on p. 36. This thin slip of wood must be used with ution, finding a part that will fit the curve, say, from *d* to *e*

Fig. 134.—Use of French Curve.

ig. 134), and drawing only from *f* to *g*, so that there is always piece at each end that appears to fit but is not used. By this ethod an ellipse will be obtained as regular in its outline as a cle drawn with compasses. It is worth taking some pains er it, because a good drawing of a machine may be spoilt by me little piece of curve, elliptical or otherwise, looking thick d ragged compared with others put in by compasses.

The method used by joiners and patternmakers to strike an ipse is shown in Fig. 135. In place of the paper trammel used Fig. 132 a piece of lath is taken, with a pencil inserted at ☞,

and French nails or stout pins at A and B. Then two straig edges are placed against the major and minor axes so that trammel may move along by the sliding of the pins over the lir and each quarter of the ellipse can be struck in a continu curve. The focus of an ellipse bears somewhat the same r tionship to the curve as the centre of a circle does to the cir but in the ellipse there are two of these centres or foci.

These are the points where the gardener puts pegs in ground when he throws a loop of string over them to mak

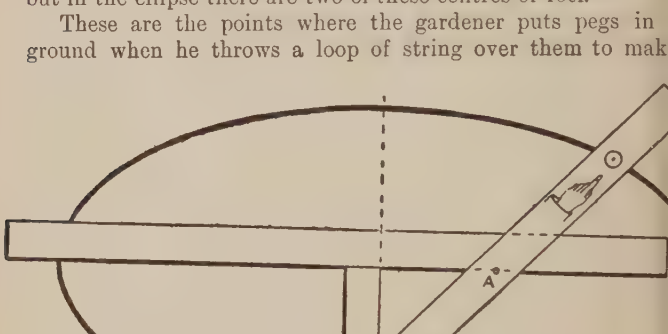

Fig. 135.—Patternmakers' Method of Drawing Ellipses.

so-called oval bed, although he will have to make several tr before he can hit upon a suitable proportion, through not know the proper method of setting about the work, which is done in way shown by Fig. 136. First set out the two centre lines decide what the two diameters shall be; then take the dista O B for radius, and with a string and couple of pegs for compa from the centres C and D strike arcs intersecting on the line A the points F_1 F_2; then F_1 and F_2 are the foci of the required elli Drive pegs in at these points, and take a piece of string long enc to go right round F_1 C F_2, tie the ends to make it continuous, sl over the pegs F_1 and F_2, and then with a stick P, starting at C whole ellipse can be struck in one continuous curve. There i need to go into the garden in order to practise this method; pins and a piece of cotton on a sheet of writing paper demonstrate the problem equally well.

Brick arches are generally formed to the segment of a circle, d frequently occupy the exact half circle, when they are called

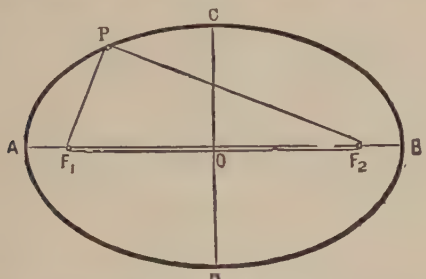

Fig. 136.—Gardener's Method of Constructing an Ellipse.

micircular arches. In the ordinary way, an arch crosses at ght angles to the opening it spans, but in the case of a railway

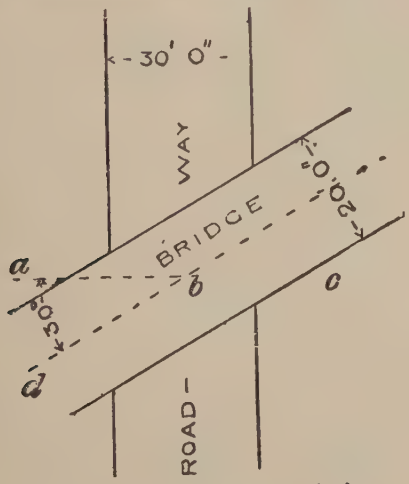

Fig. 137.—Plan of Skew Arch.

rossing a road diagonally, or a road crossing a canal similarly, a kew bridge is necessitated. In the accompanying plan (Fig. 137), bridge is shown crossing a roadway with an angle of skew at

a b d of 30 degrees. The plan does not show whether it i
girder bridge or an arched bridge, but it would very likely be

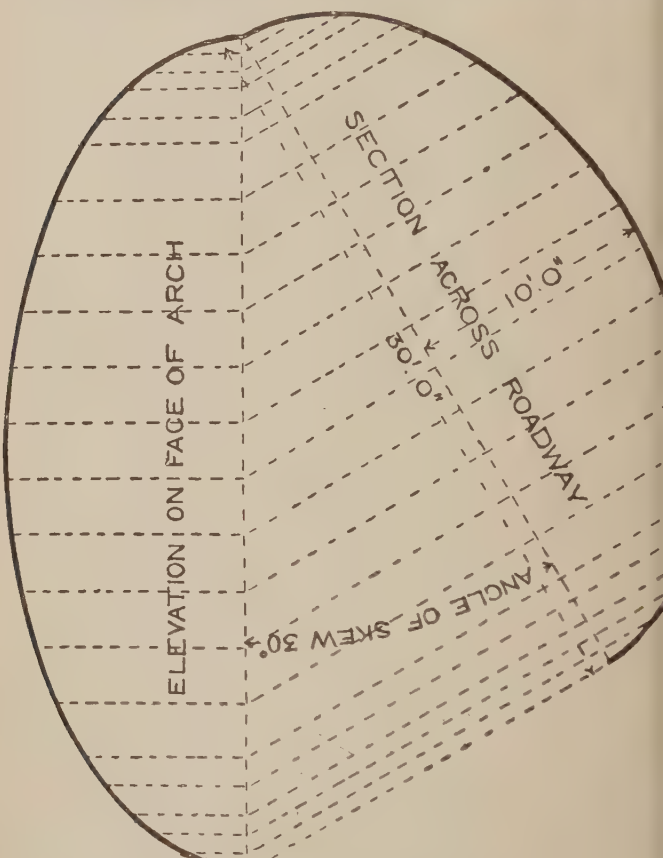

Fig. 138.—Elevation of Skew Arch.

brick arch having a semicircular soffit, that is, the section straig
across the road in the direction *a b c* will show a semicircul
outline on the underside.

In whatever way the arch may be built, whether with spi

rses, as in a proper oblique arch, or in plain rings stopped off they reach the face, as in some modern arches, the actual vation on the face of the arch will be a semi-ellipse. We are, vever, not tied to the semicircle for the normal section ; we y have a segment of a circle, or a semi-ellipse, or any other line which may be preferred, as the method of working given the diagram answers equally for all shapes. As the reader learnt to draw an ellipse, it will give the most practice to ume the normal section to be a semi-ellipse, and then the true vation on face of arch will be another semi-ellipse with a ger major axis. To obtain this elevation (Fig. 138), draw a izontal line, and at one end set off the angle of skew 30 grees, and cut off the new line to a length of 30 ft., according the scale it is intended to adopt, say $\frac{1}{4}$ in. to 1 ft. Then ect that line, and set off at right angles to it from the centre a tance of 10 ft. to represent the rise of the arch, and by one the preceding methods construct a semi-ellipse to show the tion across roadway.

It often happens that very flat curves, or those with large lius, have to be drawn, and these the compasses will not reach. me compasses, as described on p. 23, have a lengthening bar at will enable curves of 12 in. to 15 in. to be drawn, but this y not be sufficient. Then a trammel may be used, consisting a lath with a sliding point and sliding pencil, enabling curves to, say, 10 ft. radius to be drawn. There are, however, many ses where it is not convenient to use a trammel or any such strument owing to the absence of a place to rest upon for the ntre, and some more compact and ready means must be found.

In Fig. 139 let A B be the span and C D the rise of the required cular arc. With centre A and radius A B describe arc B E H, d from centre B with radius B A describe arc A F G. Through draw A D E and B D F. Along the curves A G and B H at each le of E and F set off any convenient number of equal parts in the points thus marked on the arcs with the centres from hich the arcs were struck, then the intersections of the lines om E H with those from F A will give the required points for the rve from A to D, and the intersection of the lines from E B th those from F G will give the points for the part of the rve D B.

This results in a nearly true circular curve, but there are ny cases where the curve need not be truly circular, and, as

a fact, when the rise is not more than one-sixth of the span it almost impossible to distinguish between a circular arc and parabola. This being so, we may adopt an easier metho (Fig. 140), which gives clearer intersections. Let K L be th

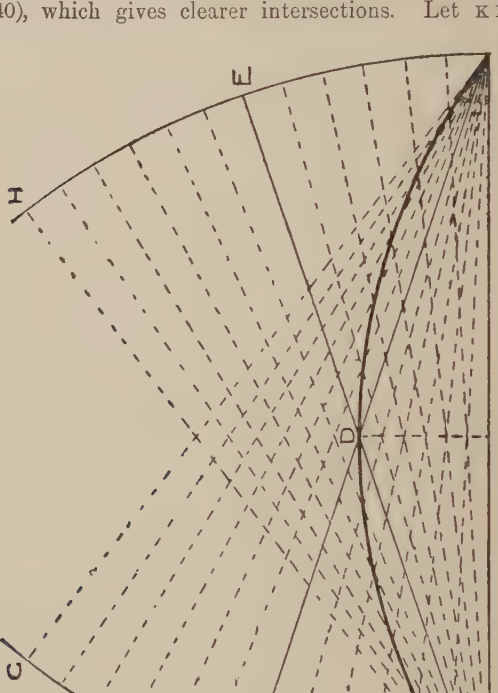

Fig. 139.—Circular Method of Setting Out a Flat, or Camber Arc.

span and M N the rise of the required curve ; set K O perpendicul to K L and equal to twice M N, so that the point O lies in L produced. Divide O K into any number of equal parts, a draw lines toward point L ; divide K M into the same numbe and draw vertical lines ; the intersections will give points in t curve from K to N. For the curve from N to L repeat the operati

on that side—viz. by drawing the perpendicular at L, dividing it, and drawing lines towards K, then vertical lines on ML to give the intersections.

What is called a straight arch is very much used in brickwork over window openings. It is sometimes called a camber arch, because of the camber or slight curve given to the soffit. This camber is about $\frac{3}{4}$ in. to a span of 3 ft., or, say, $\frac{1}{4}$ in. per foot, and must be worked to by the bricklayer, but is not usually shown upon the drawings. Girders and girder bridges are made with a camber on the underside to improve the appearance; these also are not indicated on the drawing except by a written note, the

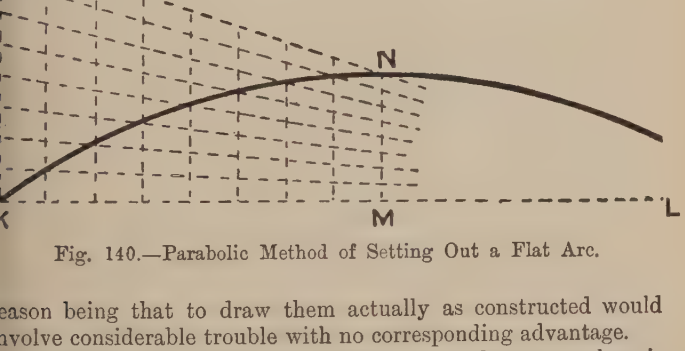

Fig. 140.—Parabolic Method of Setting Out a Flat Arc.

reason being that to draw them actually as constructed would involve considerable trouble with no corresponding advantage.

The parabola is such a very useful curve that no apology is needed in presenting some other methods of construction. It is the curve of equilibrium for an arch uniformly loaded across the span; it is also the curve of longitudinal stress in a girder loaded uniformly throughout its length. Besides these it enters in other ways into the shape of beams designed for uniform strength. The nature of the curve may be explained by supposing it to be the locus (that is, the successive positions or the route) of a travelling point, such that for any distances travelled in one direction it is displaced at right angles to that direction by an amount proportional to the square of the displacement first mentioned.

Useful methods of drawing a parabola are shown on the diagram (Figs. 141 or 142) for one half the curve, the other half being

similar. Draw horizontal and vertical lines representing the base and axis, mark off the semi-diameter and the height, and complete the rectangle. Divide the semi-diameter into twenty equal parts by vertical lines, and number them as shown. Now place a straight-edge or the side of a set-square in line with the lower left-hand corner of the figure and the point marked 10, and draw a line across the first division; from the termination of this line draw towards point 11 across *two* divisions, and from the new termination draw towards point 12 across *two more*

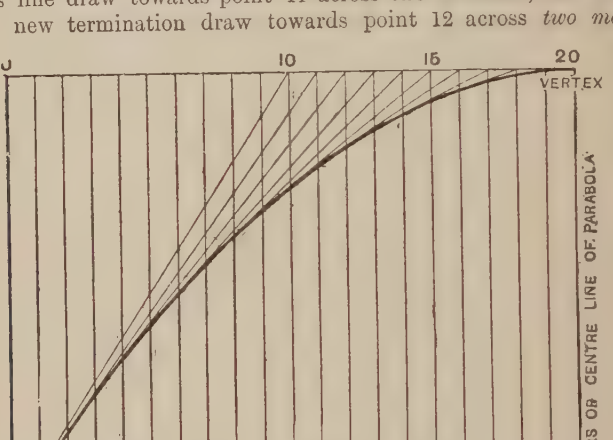

Fig. 141.—Parabola Constructed by Continuous Tangents.

divisions; and so on until point 19 is reached, when it will be found there is only one division to draw the last line across to point 20. By this means a parabola will have been formed approximately correct, but actually formed of short, straight lines. The tangent lines in the figure are shown drawn through to the top line, but in practice this is not necessary, and the vertical need not all be drawn through so long as they contain the curve and reach the top line between points 10 and 20.

The annexed diagram (Fig. 142) shows three methods of setting off a parabola, in one of which the law first stated is clearly shown; by the other methods it is not so evident. Draw

horizontal and vertical lines for the base and central height of the parabola and mark off a diameter of 12 in. and a height of 6 in. Complete the parallelogram, divide the base into sixteen equal parts, and draw vertical lines. Then for method 1 divide the vertical line at the extremity of the base into eight equal parts, the same number as in the semi-base, and from the vertex of the parabola draw lines radiating to these division points; the intersections with the vertical lines will give points in the curve which should then be sketched in neatly by hand and lined in with a French curve. If the lines are numbered as shown there will be no difficulty in marking the correct points for the curve.

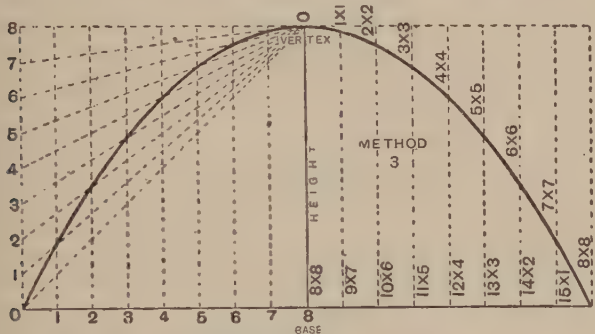

Fig. 142.—Three Methods of Constructing Parabola.

Method 2 is based upon the nature of the curve explained above, displacement at a distance of 1 being 1 squared $1^2 = 1 \times 1 = 1$; at a distance of $2 = 2^2 = 2 \times 2 = 4$; at a distance of $3 = 3^2 = 3 \times 3 = 9$, and so on, so that if we had a total height of sixty-four parts we should measure downwards from the top line, on each of the verticals, distances of 1 part, 4 parts, 9 parts, etc. As the total height is 6 in., we take $\frac{1}{64}$ of 6 in., $\frac{4}{64}$ of 6 in., $\frac{9}{64}$ of 6 in., and so on, *i.e.* $\frac{3}{32}$, $\frac{1}{32}$, $\frac{7}{32}$ of an inch, etc., and then draw the curve through. Method 3 is the complement of the last, and they are both very interesting because of the peculiar repetition of figures making it easy to remember the order. The total height is sixty-four parts, because we have eight divisions in the semi-parabola, and $8 \times 8 = 64$. If we had taken twelve divisions we should have had 144 parts in the height; the second

method would have commenced with 0, 1, 4, 9, etc., 144ths, and have continued beyond 8 × 8 up to 12 × 12 144ths. So in the third method with twelve divisions we should commence with 12 × 12 and have continued 13 × 11, 14 × 10, 15 × 9, etc., to 23 × 1, and 24 × 0.

Water spouting from an orifice, a shot fired from a gun, or a stone thrown from the hand, all describe parabolic curves in falling to the ground, and the line of flight is called the trajectory. In this connection it may be interesting to note that a ball fired from a level gun over a horizontal piece of ground would describe a parabola, and would reach the ground in the same time as a ball simply dropped from the mouth of a gun, the reason being that the fall of both is caused by the force of gravity acting equally on them.

The hyperbola is another of the conic curves. It is the curve formed on each of the faces in chamfering the bright hexagonal nuts used in machine construction. Sometimes a neat draughtsman will discover that the compass curve commonly used for showing the chamfering in the elevation of a nut cannot be made to fit the 45° line at the corner, but he may not know that this is because the curve is a hyperbola and that only an approximation can be drawn by the compasses. When steam expands in the cylinder of a steam engine the pressure is reduced, and if a horizontal line be drawn to represent the stroke of the piston and the vertical heights representing the pressure as it changes be set off upon it, the points will approximate to a hyperbola hence the expression "hyperbolic expansion curve."

On comparing this figure with the parabola it will be seen that the legs, as they may be called, of the hyperbola are straighter and that the curved part of the former is narrower in proportion to the size.

There are several methods of setting off this curve, and the first (Fig. 143) illustrates one of its properties. Draw a horizontal line, called the asymptote, and set off any number of equal parts 1, 2, 3, etc., say 1½ in. each ; at 0 set up a perpendicular 8 in. long, or sixteen half-inches, giving point marked 16. This is to be the starting point of the curve. On point 1 set up half the height, or eight half inches, on point 2 set up four half-inches, on point 3 set up two half-inches, and so on for as many divisions as have been made, each height being half the preceding. Now if

ill be seen from this case that the hyperbola is a curve which ontinually approaches a straight line but never meets it, because, owever many divisions may be taken, the distance from the symptote is always half the last distance.

In the next figure (Fig. 144), two asymptotes are drawn at ight angles, and ½-in. squares marked off to facilitate the drawing f the curve. The axis of this hyperbola will be the diagonal of he figure, the curve being symmetrical on each side of it, so that his line passes through the vertex or highest part of the curve,

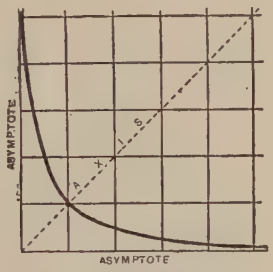

Fig. 144.—Hyperbola.

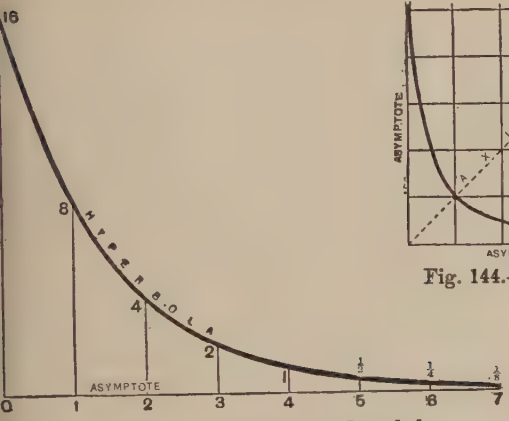

Fig. 143.—Hyperbola.

and the two sides or legs may be produced infinitely, but after about one more division each way the curve becomes practically a straight line.

To set out a hyperbola to fill a given rectangle (Fig. 145), draw a horizontal line A B, 6 in. long, representing the base of a hyperbola, and a vertical line C D bisecting it, 4 in. long, for the height to the vertex D. Produce C D, making D E equal to C D. Divide the base A B into any even number of equal parts, and the vertical lines above A and B each into half the number of parts; draw the converging lines as shown, and a curve drawn through the intersections thus formed will be a hyperbola.

The foundation for screw threads and for spiral staircases is

the helix. If a piece of paper be cut to the shape of a long righ angled triangle and rolled round a cylinder as in Fig. 146, the t edge of the paper will form the helix, and the pitch is the heig reached in going once round. This helix is sometimes describe as an inclined plane wrapped round a cylinder, which is practi ally what this experiment shows. Now, as in travelling up a inclined plane one continues rising at a regular rate, so on spiral staircase every step is actually the same height and widt but in a picture of such a staircase the steps look narrower the sides of the picture and wider in the middle, because t

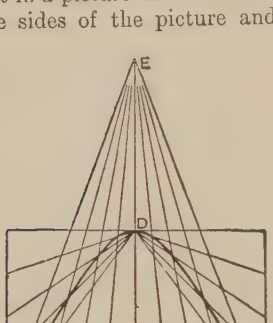

Fig. 145.—Hyperbola.

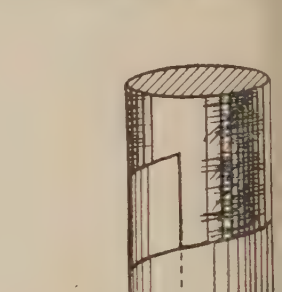

Fig. 146.—Helix.

outer edges are not in one plane; being bent round to cylindrical form, the sides are foreshortened.

This will be better understood after the curve is drawn as sho by Fig. 147. Commence with the centre line A B. From poin in it describe a semicircle D A E of 3-in. radius, and through C dr the base line D C E, which should be horizontal. From D and draw the vertical lines D F, E G, each 9 in. long, and then dr the upper horizontal line F B G. The rectangle D F G E repres the elevation of a cylinder. The semicircle D A E represents plan of the front half of the cylinder, and upon it are set out successive steps. With radius C D, mark off D L, A M, A N, a E O, then bisect D M, M L, L A, A O, O N, and N E; this will h given twelve equal divisions upon the semicircle from wh vertical lines must be drawn as shown. If the curve is to

m point D with a pitch of 4 in., it will rise half that, or 2 in. in front or visible half and 2 in. in the back or hidden half, and on for any number of turns of the spiral; therefore draw izontal lines, half pitch apart, through H, I, J, and K, as the ne curve will be found to repeat itself in each of these isions.

As twelve divisions have been made on the semicircle, so elve divisions must be made between D and H, and horizontal es drawn through as shown. This will give a series of inter-tions through which the curve must be drawn; one along and e up, two along and two up, and so on for the right points. nen this much of the curve has been put in, the remainder

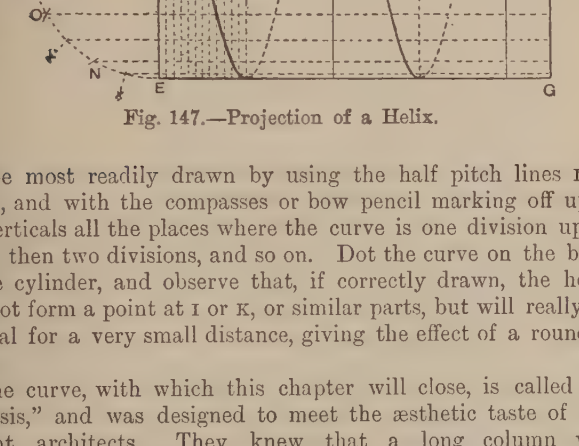

Fig. 147.—Projection of a Helix.

n be most readily drawn by using the half pitch lines I, J, d K, and with the compasses or bow pencil marking off upon e verticals all the places where the curve is one division up or wn, then two divisions, and so on. Dot the curve on the back the cylinder, and observe that, if correctly drawn, the helix l not form a point at I or K, or similar parts, but will really be rtical for a very small distance, giving the effect of a rounded rn.

The curve, with which this chapter will close, is called an ntasis," and was designed to meet the æsthetic taste of the cient architects. They knew that a long column was entifically inaccurate if made parallel, owing to the greater ight carried by the lower part, and they thought the straight per looked ugly, so they made their columns with a slight

swell in the diameter between the two ends. The optical e
of the entasis is to increase somewhat the height. Metal u
compression bulges before it gives way, and hence the bul
here gives the feeling of supporting a load and not of b

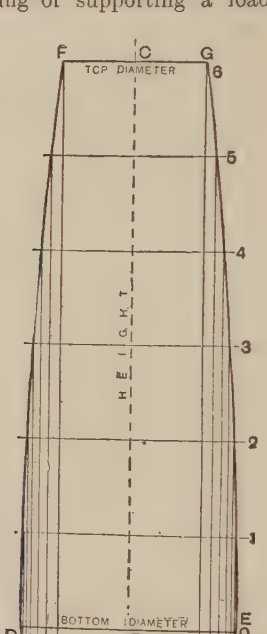

Fig. 148.—Entasis of Column.

merely ornamental; besides that, a column with a straight ta
appears to be slightly hollow at the sides.

In the illustration (Fig. 148), the diameters are taken v
large in proportion to the length, in order to show the met
and result more clearly. There are various ways of setting
this curve; the one shown is known as Tredgold's. Supp
the length between the mouldings of the cap and base to

., the top diameter 3 in., and the bottom diameter 4½ in.; e dimensions might represent a heavy cast-iron hollow nn to a scale of 1 in. to 1 ft., but the result is altogether tumpy for a stone column; nevertheless, the same principles y whatever the length may be. Draw the centre line A B C, ng B C equal to the length; then draw the two diameters nd F G. Upon D E construct a semicircle D A E, and from F G, drop perpendiculars to meet the semicircle in points H I; divide the arcs D H and I E into any convenient number of l parts, and the height B C into the same number of parts. v horizontal lines through the divisions on the centre line, vertical lines to meet them from the divisions on the semi- e; the intersections will give points in the entasis, and a ch curve may be used to obtain a properly flowing curve ugh the points.

'he curves described in this chapter have been specially ted for working on sheets of drawing paper, and when com- d the set of twelve sheets will certainly be interesting, and, hoped, will also be useful to the draughtsman.

CHAPTER VI.

PROJECTION.

It will be advisable to give some attention to projection b going on to shading and shadows. The method of putti plan below an elevation, and a section at the side of it as us practised by draughtsmen, is known technically as orthogra projection on vertical, horizontal, and profile planes. The ge idea of merely drawing the various parts exactly in the same in the different views, or opposite each other, is very simple

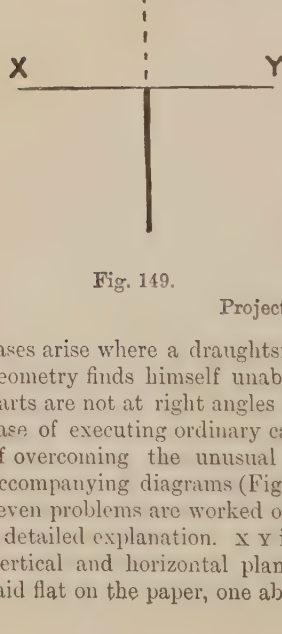

Fig. 149. Fig. 150.

Projections of Lines.

cases arise where a draughtsman who has not studied descr geometry finds himself unable to proceed, as, for instance, parts are not at right angles to one or other of the planes. ease of executing ordinary cases of projection, and the dif of overcoming the unusual cases, are well illustrated i accompanying diagrams (Figs. 149 to 155), in which the foll seven problems are worked out, but only the last two will r a detailed explanation. X Y is the line of intersection betwe vertical and horizontal planes, which are here supposed laid flat on the paper, one above and one below the line.

g. 149. A line $1\frac{1}{2}$ in. long, touching the vertical plane, and
nt angles to it, parallel with the horizontal plane and $1\frac{1}{2}$ in.
it.

g. 150. A line $1\frac{1}{2}$ in. long, touching the horizontal plane
right angles to it, parallel with the vertical plane, and $1\frac{3}{4}$ in.
it.

g. 151. A line $1\frac{1}{2}$ in. long, parallel with both planes, and
rom them.

g. 152. A line $1\frac{1}{2}$ in. long, parallel with the vertical plane
in. from it, $\frac{1}{2}$ in. above the horizontal plane, and making
gle of 45° with it.

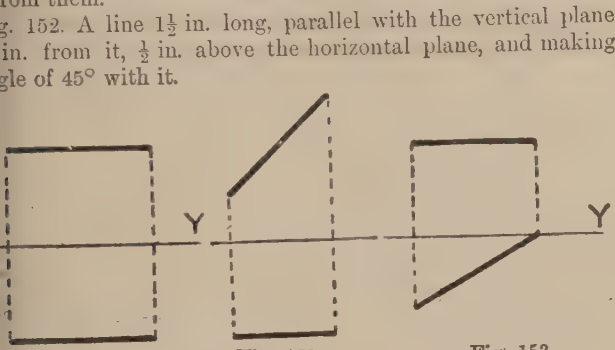

Fig. 151. Fig. 152. Fig. 153.

Projections of Lines.

g. 153. A line $1\frac{1}{2}$ in. long, parallel with the horizontal plane
in. above it, touching the vertical plane, and making an
of 30° with it.

g. 154. A line 6 in. long, touching the intersection of both
s, making an angle of 30° with the horizontal plane and 25°
the vertical plane.

g. 155. An oblique plane cuts the horizontal and vertical
s, making an angle of 60° with the former and 45° with the
; show the traces of its intersection.

Fig. 149 the length of line is measured from X Y in the
and the height from X Y in the elevation. In Fig. 150 the
se. In Fig. 151 the length is measured in either plane, and
istance in both. In Fig. 152 the length of line is measured
e vertical plane, where its full length can alone be seen. In
153 the length is measured in the horizontal plane for the
reason. In Fig. 154 the line is inclined to both planes, and
ot be measured off directly, as in the previous cases. First
ure the required length of line $a\,b$ on X Y, then from point a,

with radius $a\,b$, describe the arc $c\,b\,d$, making $c\,a\,b$ 30°, $b\,a\,d$ 25°. Then $a\,c$ represents the line at an angle of 0 deg from the vertical plane, and $a\,d$ the line at 0 degrees from horizontal plane. In each case the line has to swing round vertical axis through a to reach its required position; all know at present is that one end of the line will be at a and other somewhere in the lines $c\,e$ and $d\,f$, parallel with X Y.

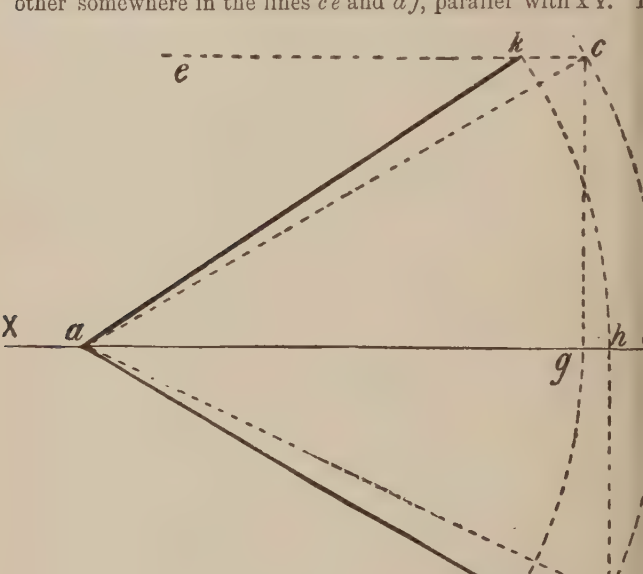

Fig. 154.—Projection of Line.

perpendiculars from c and d, cutting X Y in g and h, then will represent the line in plan when raised up to the requ angle from the horizontal plane, but coinciding with the ver plane. Now by radius $a\,g$ swing it round to cut $f\,d$ in poi then $a\,i$ will be the true plan of the line. In the same way represents the elevation of the line when lying on the horizo plane, but making the required angle with the vertical. from the centre a with a radius $a\,h$ describe the arc $h\,k$, cut

point k, then $a\,k$ will represent the true elevation of the under the required conditions. If correctly drawn, point k t to be vertically over point i.

ig. 155 presents a rather more difficult case. The principle

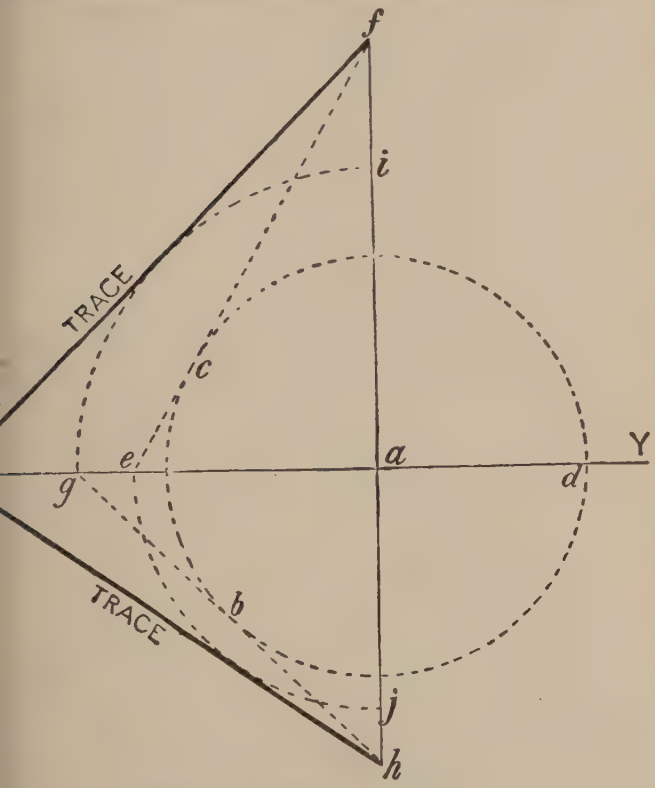

Fig. 155.—Projection of Line.

n which it is to be constructed is to assume a sphere whose is X Y, to the surface of which the required plane shall be ent. Draw a line at right angles to X Y, cutting it in any t a. From point a as a centre with any radius describe the e $b\,c\,d$ to represent the sphere just mentioned. Draw lines $e\,f$

and $g\,h$ tangent to the circle at c and b, and making the requi angles $f\,e\,a$ 60° and $a\,g\,h$ 45°. From a, with radius describe the arc $g\,i$, and from a, with radius $a\,e$, describe arc $e\,j$, then from points f and h, tangent to these last two curv draw the required traces $f\,k$, $h\,k$, meeting accurately in point when properly drawn. The rationale of the process is that g and $e\,j\,b$ are parts of a conical surface to which the plane tangent. It must be noted that the sum of the two giv angles must always be between 90° and 180°; at these extre ties the traces of the plane will be parallel with X Y when combined angle is 90°, and perpendicular to it when the combi angle is 180°.

For working drawings of buildings or machines the ordina

Fig. 156.—Brick in Angular Projection.

Fig. 157.—Shaded Sketch of a Brick in Angular Projection

plan, elevation, and section are best suited, and are clea understood by most, if not all, persons requiring to use th To persons unacquainted with draughtsmen's work they con only a vague idea of what they are intended to represent, a this is why perspective drawings are so much in vogue representing the complete view. Perspectives are simply rep sentations of objects as they would appear in a good photogra Formerly any printed illustration had first to be drawn out hand, so that its accuracy was largely dependent on the skill the draughtsman; the difficulty was most pronounced in case of machines, as any old journal or catalogue will testify. N photographs can be adapted for reproduction, and illustrations machines are produced with exactness and at very small cost.

A still simpler method of projection may be applied to sm details, which is often incorrectly called isometrical projecti

ictly, it is pseudo-isometrical (that is, false isometrical), but is ıveniently known as "angular projection." It is based on ceedingly simple rules, which may be summarised as follows: rizontal measurements are taken along lines inclined at 30° the base line, and vertical measurements on vertical lines. is will be made clear by taking the drawing of a brick (Fig. 156) , 9 in. by 4½ in. by 3 in. (that is, large enough to include thick-ss of joints) to a scale of half full size.

Let one corner of the brick (Fig. 156, p. 96) touch the base line, en draw a vertical line cut off 3 in. long, and lines inclined to the se 30° each way cut off 4½ in. and 9 in. long. Draw vertical es from the ends of the inclined ones, and inclined lines from

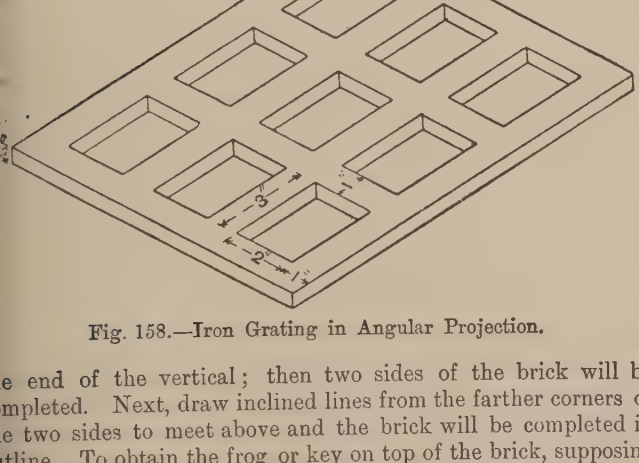

Fig. 158.—Iron Grating in Angular Projection.

e end of the vertical; then two sides of the brick will be mpleted. Next, draw inclined lines from the farther corners of e two sides to meet above and the brick will be completed in tline. To obtain the frog or key on top of the brick, supposing e flat margin to be ¾ in., measure ¾ in. from each angle and aw intersecting lines. To obtain the curves at the angles of the og in hand-made bricks, suppose them to be in reality ½-in. dius, the compasses may be used at radii of ¼ in. and ¾ in., as own; this is necessary to give the effect produced by viewing e curves on an inclined surface.

An angular projection has the advantage of appealing more rectly to the uneducated eye than the ordinary plan and eleva-

tion do. It should never be back-lined as ordinary plans are, the reason that relief is already effected, and back lines wo only reduce the effect. Angular projections may, however, coloured, and shaded if desired, as in Fig. 157. In further ill tration of the subject, a small cast-iron grating is shown (Fig. 1 ½ in. thick, bars and margin 1 in. wide, openings 3 in. by 2 in.

The angular projection, shown above, has the advantage o either perspective or true isometrical projection, that an ordin 2-ft. rule may be used upon the drawing to ascertain any of dimensions. For showing the details of joints in carpentry joinery, angular projection is especially appropriate, and it soon be found by the draughtsman that the angular direction 30 degrees each way for the horizontal lines need not be adhe to when some other angle will be more convenient. Conveni and simple as this is for details, it would not be suitable to t the place of perspective for complete views of houses, as the would then revolt from what would appear to be distortion. eye is so accustomed to true perspective in nature and the fa accurate representations of photographs and artistic sketches, tha house in angular projection would appear to be swelled behind, because where one expects to find the taper, no ta would be given. If the simplest possible outline of a ho be drawn in angular projection, it will serve to show the met by which any required points are found, so that any other c that may arise may be worked out on the same principles.

Draw first a plain front and side elevation (Figs. 159 and 1 so as to get the various parts in their right proportions, th remembering that vertical lines remain vertical, while horizon lines are drawn at 30° from the horizontal in either direction, difficulty will be found in completing the lower portion of house, the measurements being taken in the same direction the various lines are drawn. For the roof it will be seen tha the position of the ridge can be found, the hips will simply drawn up from the angles to meet it. Bisect the eaves line the visible end of the house and draw a line through at 30° fr the horizontal to meet the other side ; bisect this line and off half the length of ridge on each side of the bi-section, and fr the extremities of the ridge length draw vertical lines, cutt them off at a height equal to the height of ridge above eaves seen in elevation, and join the ends. This will give the ridge its and, the ends being joined to the four corners, the hips are produc

To put on the chimney stack, observe first that the penetration the roof in the front elevation is obtained by noting the tance vertically down from the ridge to where the sides cut the f planes in the end elevation. Then draw a vertical line from

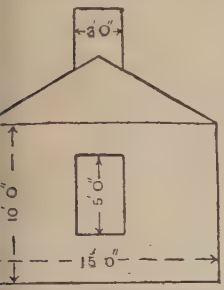

ig. 159.—Side Elevation.

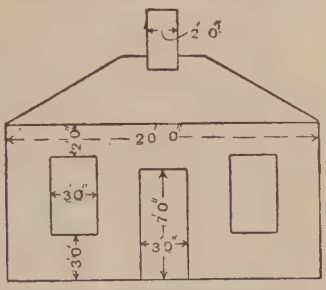

Fig 160.—Front Elevation.

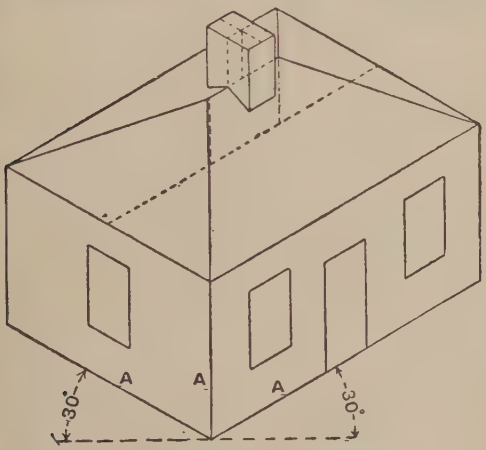

Fig. 161.—Angular Projection.

centre of the ridge in the angular projection, cut it off to the ght of the chimney stack, and the top point will be the centre pper end of stack. Through this point draw centre lines at each way and mark off the width and breadth of the stack, l through the four points thus found draw four lines parallel

with the two centre lines. Now draw vertical lines downw from the three near corners and cut them off equal in length the height of the stack on the end elevation. Drop a verti

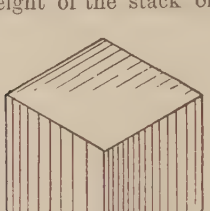

Fig. 162.—Sketch of Cube.

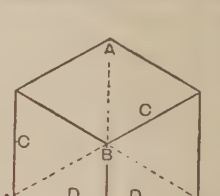

Fig. 163.—Geometrical Constructio of a Cube.

line from the centre line at top of stack down the wide face meet the ridge, and join up the intersection lines as shown Fig. 161.

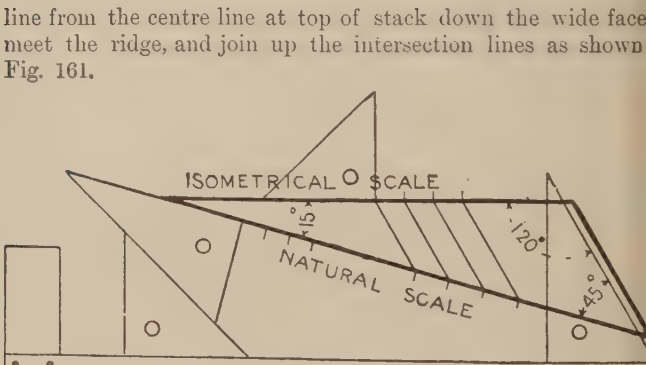

Fig. 164.—Method of Constructing Isometric Scale.

Before concluding this chapter on angular projection, it be interesting to see the principles and application of true metrical projection. It is based upon orthographic projectio that is, the rays of light proceeding from the outlines of object travel in parallel lines, and not in converging lines as perspective. In this it very much resembles the angular jection just illustrated, but it differs from that in having

elined lines all foreshortened to make a true projection. For stance, if a cube of 3-in. side be drawn in isometrical projec-on, the edges will be foreshortened to about $2\frac{3}{8}$ in. to make a

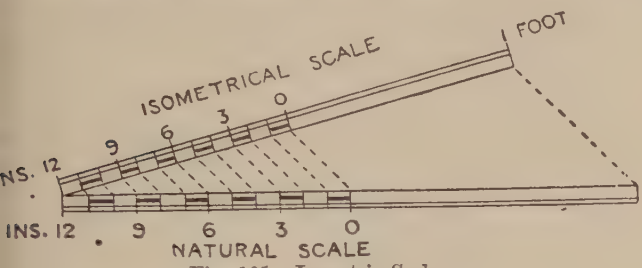

Fig. 165.—Isometric Scale.

ue representation ; or, more accurately, the natural scale is to e isometrical as 1 to $\sqrt{\frac{2}{6}}$ or, roughly, as 11 to 9. In this ethod the object is supposed to be tilted up to show three ces ; or, taking a cube as best illustrating the principles, it is

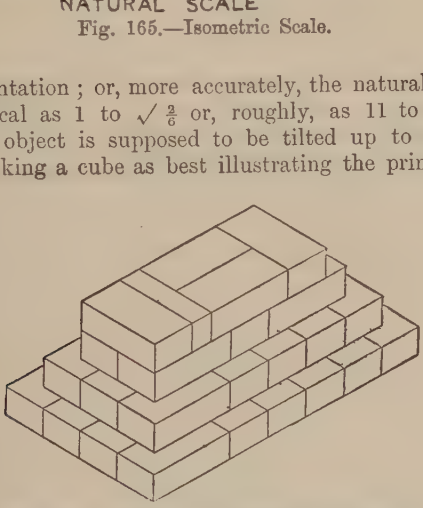

Fig. 166.—Example of Isometric Projection.

laced so that a direct line from the eye passes diagonally hrough the cube as shown in shaded sketch (Fig. 162), or eometrically by the outline (Fig. 163). Certain terms are sed in describing the different parts of the figure ; they are -A A, isometric axes ; B, the regulating point ; C C C, isometric nes ; D D, isometric planes. The scale may be constructed eadily by the use of T and set squares as shown, the sketch

(Fig. 164) giving the method, and Fig. 165 the result. As example of the application, the end of a one-brick wall shown (Fig. 166), from which it will be seen that there is advantage over common angular projection, for which an ordina scale can be used.

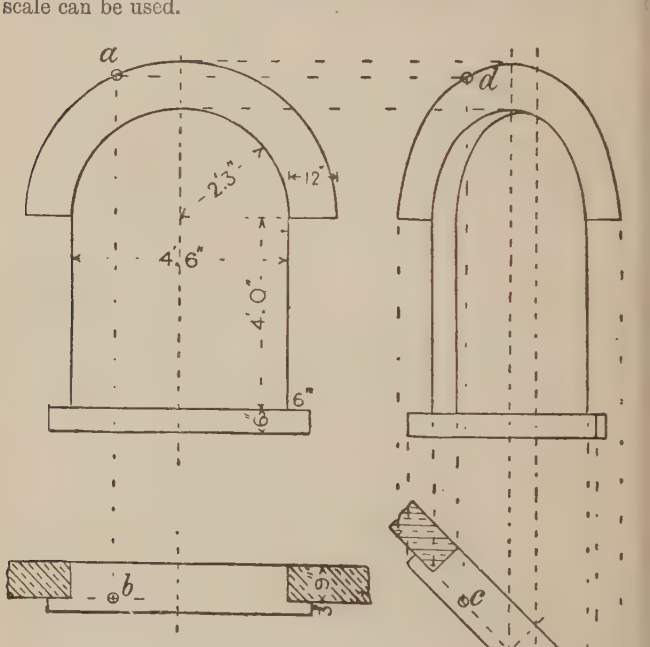

Fig. 167.—Method of Projection at an Angle of 45°.

In drawing an elevation, difficulty sometimes is experienc when one face of the work, or one side of the building, is n square to the front or parallel with it. Common instances a shown on the accompanying diagram (Fig. 167), and the meth of projection scarcely requires any explanation. Draw first t natural elevation and plan of the window opening to the requir scale (Fig. 167). Then assuming that the wall makes an angle

degrees with the spectator, draw the plan of it, marking the ntre line, and also a cross centre line for face of arch. Project es upward from each angle, and also from the centre line at ce of and back of arch. Then from the elevation project lines om each point to intersect those drawn from the angled plan, d draw in the straight outlines.

The circular curves in the elevation will become elliptical in

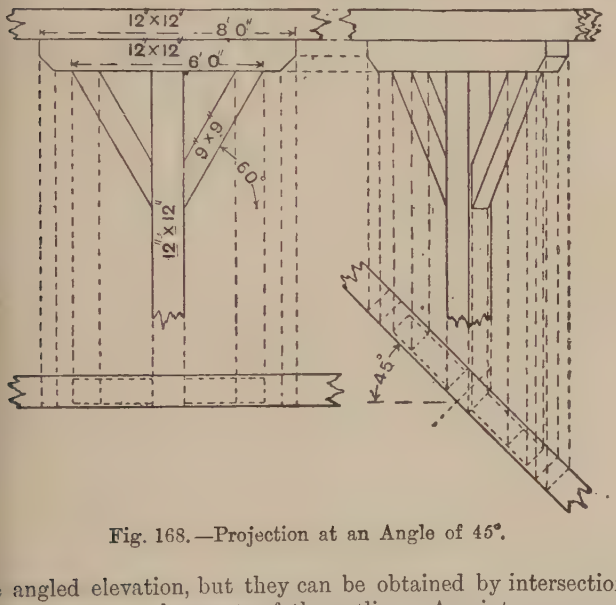

Fig. 168.—Projection at an Angle of 45°.

e angled elevation, but they can be obtained by intersections, e same as any other parts of the outline. A point on any part any curve in the elevation as *a*, being projected down to the an as *b*, transferred to the angled plan as *c*, and projected wards to intersect at *d*, with the horizontal projection from the me point, shows the method by which the whole outline may obtained; a sufficient number of points being found, the rve is sketched through by hand and afterwards inked in ith the aid of a French curve, such as is described on p. 36.

The illustration (Fig. 168), showing part of a gantry, is upon e same principles, and there can hardly be found any difficulty working it out according to the copy.

CHAPTER VII.

BACK-LINING DRAWINGS.

THE following seven figures deal with the back-lining of dra
ings. The ordinary plan or elevation of an object often seems
the novice nothing more than a mass of lines, while, even to o
experienced in reading drawings, some little study is necessa
when dealing with the representation of a new object.
mechanical drawing, if left in outline and uncoloured, requires
expert to understand it, unless it is some very simple subje
There is nothing to indicate which parts are round and whi
are flat, which stand out and which recede, so that so
acquaintance with the object represented is necessary to be a
to "read" the drawing. A simple method of removing t
difficulty is to "back-line" the drawing—that is, to thicken t
outline on the shady side of all projections. This, however, h
to be done by rule in order to obtain the greatest advantage fr
its use.

For uniformity, the direction of the light is always suppos
to come from the top left-hand corner, and to strike the paper
an angle of 45°. The arrow on p. 105 may be supposed to b
plan of a ray of light, and if one of the short sides of a 45° s
square be placed on this line perpendicular to the surface of
paper with the point towards the arrow-head, the long side
the set-square will represent the ray.

If a solid, such as a cube, be supposed to stand on the pa
in these rays of light, the sides nearest the top left-hand cor
will be bright, and the opposite sides dark and casting shado
Wherever there is an edge casting a shadow, the line represent
that edge is thickened.

The examples shown in Figs. 169 to 172 introduce the proj
tion of plans and elevations from each other. If a simple b
like a cube of 2-in. side, is placed in front of the eye, with
side "full-face," then the elevation is seen; to look down on
of it will show the plan, but there will be no difference in the
views except a difference of position. Upon the drawing pa

e upper part is used for elevations and the lower part for plans, e corresponding views being placed exactly one under the other, e corresponding points being "projected," or drawn with the encil and square.

Suppose the 2 in. cube to be cut into halves horizontally, and ne upper half of the cube to be removed, and the lower half to e turned round so that a corner will be nearest the eye, and nat a smaller cube—say ½ in.—be placed on the top of it in a milar position to that occupied by the cube in Fig. 169, then the levation and plan will give the two views shown in Fig. 170. hese should be carefully studied, and the meaning of projection

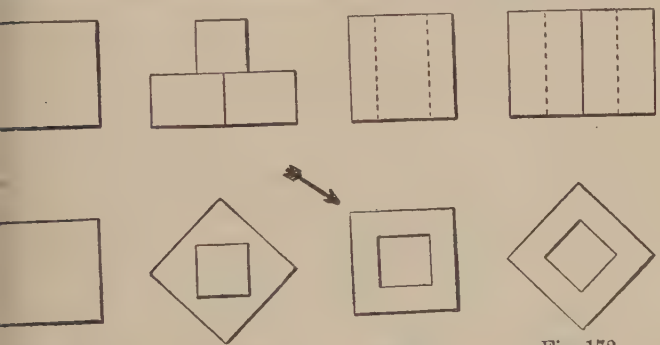

Fig. 169. Fig. 170. Fig. 171. Fig. 172.

Projections of Plans and Elevations of Rectangular Objects.

ested by trying various points, and having recourse to other bjects, if necessary, to illustrate the different appearances of plan and elevation.

The next pair (Fig. 171) shows a cube in the same position as that in Fig. 169, but having the interior cut out by a hole ½ in. square made through it, as shown in the plan. In the elevation the hole cannot be seen, but its position can be indicated by dotted lines; and this shows one advantage a drawing has over a picture: the inside of an object can be shown as well as the outside.

In Fig. 172 the hollow cube is turned diagonally, so that an edge is presented in the elevation. By this time the construction of the various figures will be pretty well understood, and they may now be drawn in pencil, all lines being thin. The

elevations of the diagonally placed figures must be projecte from the plans to get the right width, and it is well to test th plans themselves to see that they are correct before drawing th elevations. The principle of the test is that in any rectangula figure the two diagonals are equal. In inking-in, the outlin may be made thin first, and then the additional thickness adde on to the outside (that is, the side the shadow is), or the thic lines may be put in direct. The following rules may be given :- Lines representing surfaces casting a shadow should be thick lines representing edges only casting a shadow should be mediun and all other lines thin.

Referring to Fig. 170 in the elevations, the right-hand line the small cube represents a surface as well as an edge ; it is surface edgeways and casts a shadow : therefore it is made thic The under side of the large half-cube represents two edges and o surface, and casts a shadow ; therefore it is thick. The midd line and the right-hand line of this half-cube represent edges onl as the surfaces themselves are visible, and the lines are made medium thickness between that of the thin and the thick line All the other lines of this figure are usually made thin. Whe any doubt exists, imagine the drawings to be solid objects an move the set-square over them.

After the previous illustrations the following three figures wi be comparatively easy, as they illustrate only an extension the same principles. They show the application of back-linin to curved surfaces, Fig. 173 being a cylinder, Fig. 174 a sma cylinder on top of a larger, and Fig. 175 a cylinder with a ho through it.

In Figs. 170 to 172 has been shown how relief is given to fl surfaces representing rectangular objects, but there are tw lines about which some doubt may have been felt—the righ hand top edge of the lower part of the elevation (Fig. 170) an the same part of the elevation in Fig. 172. Although these lin are part of the boundary of surfaces in the shade, they do n strictly come under the definition of edges casting shadows, an are left thin. It will be observed that the back lines—or shado lines, as they are sometimes called—are applied as if the obje itself were moved on the paper in plan and elevation, whereas in practical geometry, the rule is to consider the object immo able and the paper bent at right angles, between the plan an elevation, to receive the projections of the various points on th

line. The latter method must be followed when a systematic dy of shadows is made, and then the shadows in plan are jected diagonally upward from the bottom left-hand corner. e method shown in the series of illustrations (Figs. 173 to 175) is ch simpler and more convenient.

In Fig. 173 is shown a cylinder 3 in. long and 3 in. diameter; Fig. 174 a cylinder 3 in. diameter and 1½ in. long, with another in. diameter and 1½ in. long standing upon it; and in Fig. 175 ylinder similar to that in Fig. 173, with a 1½ in. hole through The plans must be drawn first, each circle being struck from

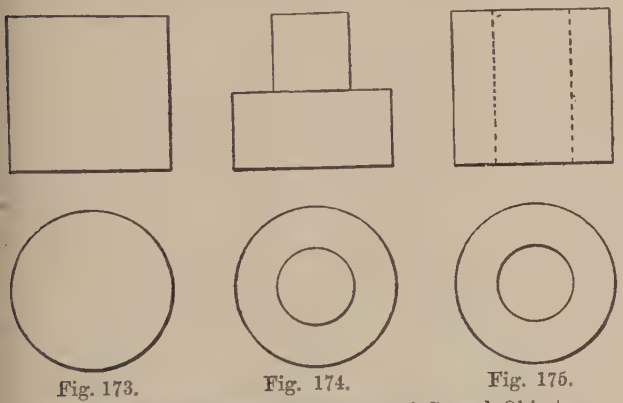

Fig. 173. Fig. 174. Fig. 175.

Projections of Plans and Elevations of Curved Objects.

e intersection of two centre lines, and then the elevations pro- cted from them. It is better to ink-in with all thin lines and add the back lines afterwards; they are then more likely to correctly placed outside the outline. In the elevations the ttom lines represent surfaces, and cast shadows, so that they ll be made thick. The right-hand lines represent edges only— at is, the extreme projecting parts of the curves—and cast adows; therefore they will be made of medium thickness and e remaining lines thin. In the plans the lines all represent rfaces, but only parts of the lines cast shadows. The thick nes require to be eased off into thin ones without showing any ruptness, an operation which requires some little skill.

Instead of opening the nib of the compasses to make a thicker

curve, they should remain as for a thin line, and the centre sho be shifted from the intersecting point of the two centre li downwards to the right at an angle of 45°, about the hundre of an inch, so that the drawing of a second half circle will giv thickening that dies off gradually at the opposite 45°. Repeat this about three times will give a line of the required thickn and properly eased off at the ends. The thicker line beco tapering because the radius is virtually increased in the direction only, remaining practically unaltered in a direction right angles to the shifting centre.

The difference between a projection and a recess are clea shown in the difference between the inner circles of Fig. 174

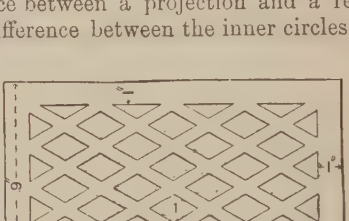

Fig. 176.—Cast Iron Grating.

Fig. 175, the edge casting the shadow being thickened in each c If much difficulty is experienced in producing neatly the cur with one side thickened, it will be found very good practice draw, say, a dozen concentric circles, with $\frac{1}{4}$ in. differen between the radii, and back-line them all.

Geometrical solids, such as those shown in the last se figures, are better adapted for illustrating principles than ordin objects are, but they are not so interesting. But having lea the method of back-lining, the knowledge can be applied to s drawings as it may be desirable to improve, without the lab of shading and colouring. Fig. 176 shows a small perfora grating of cast iron arranged in diagonal bars with lozenge-sha spaces. The rim or frame of the grating is 1 in. wide, the $\frac{1}{2}$ in. wide and 1 in. apart; the thickness, not shown, is $\frac{1}{2}$ in., the over-all dimensions are 14 in. by 9 in. The illustration i be re-drawn full size.

Commence as usual with the border line, then take 9 in

he scale or dividers, and mark where to put the bottom line the grating on the paper, allowing room for the heading and cement of scale. Rule in this line with the T-square, measure length so as to leave it central on the paper, and then put in double lines for the 1 in. width of rim. Now draw diagonals oss the grating from the inside corners; and on looking at illustration it will be seen that these diagonals pass along the tre of two of the bars, and give the direction of all the others. is very easy to go wrong, but if correctly set off, there will be ctly half-lozenges all round the outside, and the distance ween the points will be exactly equal to the distance between points of the whole lozenges in the interior.

If there were bars in one direction only, very few would make y mistake in the measurements, but the bars crossing each ier cause many to measure the 1 in. distance apart along one the lines of the other set of bars, instead of at right angles to e bars which are being set out. At first sight it may appear at the dimension 1 in. between the bars near the centre of the ustration is twisted out of place; it is, however, correctly aced, and shows the direction in which the measurement must taken. Being full-size, the drawing does not require a scale the bottom, but the dimensions should be figured in, as they tablish the precise size required, and to some extent render the ork independent of the accuracy of the drawing.

In most specifications of work to be done, a clause is inserted ating that—"Where any discrepancy exists between the scale of drawing and the figured dimensions, the latter are to be worked , unless obviously incorrect." When the back-lines are put itside the solid parts, accurate measurements can be taken from ie drawing with as much facility as if all the lines were thin; it to be useful, this rule must have no exception. If the bars the illustration had been at an angle of 45°, instead of about)°, as at present, only those going upwards from left to right ould be entitled to back-lines, although generally the others ould have them also for the sake of effect; in that case the ower sides of the other bars would receive the back-lines, lthough having no more right to them than the upper sides.

Owing to the thickening up of the thin lines unavoidable in rinting, there may be some doubt, in looking at the illustration, s to which lines are there intended to be back-lined; but if the rating be looked upon as an actual object resting on the paper

with the light shining down diagonally from above the
left-hand corner, it will be evident which lines would c
shadows.

Reversing the type of illustration given in Fig. 176, a cov
plate of the style known as "chequered," for placing over
opening such as a valve-pit, manhole, etc., may be drawn. T
chequers, or raised pieces, are to prevent slipping, and give a fi
foothold when passing over it. In this case only one corner
the plate is shown on the drawing; the remainder being app
ently broken away. This is a method frequently adopted
drawings when there is much repetition work about the obje
and the drawing is desired upon a large scale. The outs

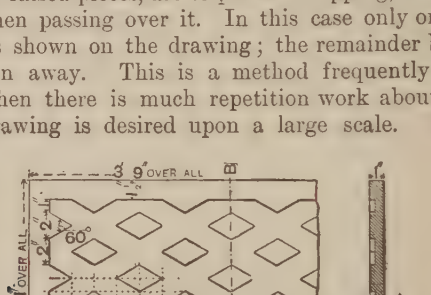

Fig. 177.—Chequered Plate.

dimensions show that the whole plate is 3 ft. 9 in. by 2 ft. 11
and calculation will show that this will allow for six chequers
length and eight in width. Another method sometimes adopt
is to show the outline of the whole plate to a small scale, wit
few of the chequers in one corner, and perhaps a single cheq
full-size with the dimensions to it.

A section is the surface exposed by an imaginary cut, and
"section on line A B" shows the surface that would be exposed
that particular part. The hatching or diagonal lines show the
surface, the projecting parts on the left being the chequers t
are cut through, and the light parts between them, the ends
the other chequers seen in the distance. The chequers stand
$\frac{5}{16}$ in., the total thickness being 1 in.

In making this drawing (Fig. 177) commence with the top li
and follow with the left side; set off the width of rim or pl
edge, then divide the inner edge of left-hand side all the w
down according to the dimensions given, bearing in mind

uired scale. Then with the 60° and 30° set-square, set off the jecting points or half-chequers, and see by the T-square that y all come in line.

From this stage onwards there are various methods of work- ; perhaps, on the whole, the following will be the best :— om the inside of the rim draw horizontal lines 1 in. apart (to scale required), and vertical lines $1\frac{3}{4}$ in. apart, similar to the that are shown by dotted lines on the illustration. Then by ning the proper intersecting points as many chequers can be wn as may be desired, and the lines rubbed out after the equers are inked in. When part of the figure is broken away, re is no precise limit—that is, half a chequer more or less in her direction makes no difference. Put on the "line of sec- n," A B, and then draw the section, observing that all points the section correspond horizontally with all points on the e A B.

This drawing should be back-lined similarly to Fig. 176, but e lozenges being now projections instead of recesses the back- es will be reversed. Upon a comparison of the two illustra- ns (p. 108 and p. 110) it will be seen that back-lining a drawing t only gives relief and variety to it, but helps also to explain e shape of the object represented.

The two following illustrations show a method of indicating e proportions of a structure by multiples of some unit. The it in this case is the depth of the fillet in the base moulding of e pilaster (Fig. 178). A pilaster differs from a column in being flat projection from a wall instead of a detached cylindrical nstruction, although both may be of the same general style d character. The size of the drawing depends upon the size opted for the unit, which may here be one-eighth of an inch. taking a larger or smaller length for the unit, the whole sign will be proportionately enlarged or reduced without affect- g the relationship of the parts to each other. Very much the me thing may be done by measuring a drawing with the wrong ale, and reading all the dimensions larger or smaller, as the se may be, from which the new drawing is constructed. The ork given in Figs. 178 and 179 will be a very good test of ability ; requires a good eye and a steady hand to produce some of the rts, as any irregularity will be easily detected.

Begin with the plan of the pilaster (Fig. 178) and note that y measurements required which are not on that view may be

found on the elevation. The section lines in the plan show th it is, as plans very often are, a sectional plan—that is, not tak as it would appear when looking down above the summit of t structure, but from some intermediate height. The mitres the plan at the external angles are produced by the junctions the straight mouldings. The bottom of the plinth is not bac lined, because it would of necessity stand on something of larg area, and that would prevent a shadow being cast : it is sho standing on the ground. The semicircular flutings in the pilast

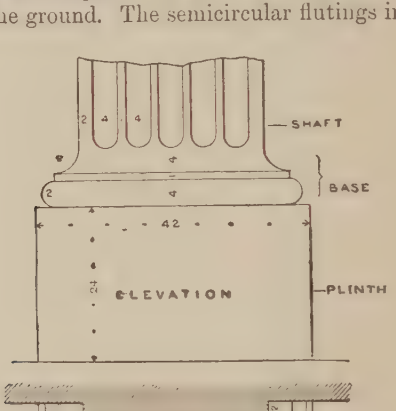

Fig. 178.—Fluted Pilaster.

4 units wide, are separated by narrow fillets, or flat surface unit wide, and they are terminated at each end in the elevat by semicircles. The lower end only is shown, for want of spac

The column (Fig. 179) has similar flutes, say twenty in round the whole circumference, which will make it about 32 un in diameter. These should be set off in the plan and projec into elevation. At this point a great difference will be seen compared with the pilaster (Fig. 178), although the flutes are reality the same size, they are foreshortened, or turned sidewa towards the sides of the column, and appear much closer. T involves a special difficulty at the lower end of each flute, wh

semicircle will become elliptical, with one axis shortened
e and more. The semi-ellipses will be all the same height as
semicircle, and the width will be given by the projection
n plan. The curves themselves must be drawn very neatly
hand, so that their outline may be precisely similar to the
er outlines. Sometimes an expert draughtsman may be found
o can put them in with the bow-pen, but generally, if instru-
nts are used, the curves will be steady and uniform, but badly
ped, while if put in by hand the curves will be unsteady and
gular in thickness, but better-shaped. In back-lining this

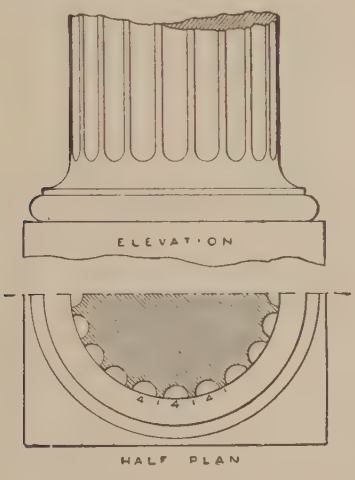

Fig. 179.—Fluted Column.

wing, observe that the thickening of the curves is regulated
the 45° set-square, which shows where the line alters its
racter.

It should be remembered that, although the illustrations
printed when they appear in this book, yet they were all
ginally drawn by hand, and that any difference of quality is
avour of the original; every effort should therefore be made
nake drawings at least equal to the copy from which they are
en, and then good substantial progress may be expected.

CHAPTER VIII.

DRAWING TO SCALE AND PREPARING MAPS.

MECHANICAL drawings are usually made to a given scal regulated by the relative size of the drawing paper as co pared with the object to be represented, and it will be unde stood at once that only comparatively small objects can drawn to actual size, as the draughtsman is limited conditions of space and by considerations of convenien in handling. For example, in plans of buildings, map surveys, and in fact the great majority of the instanc in which drawing is employed, it becomes necessary reduce the representation of the object. In cases of minu mechanism it is desirable to increase the scale of them as to show construction clearly.

The scale of a drawing is the proportion the representati bears to the actual object. A drawing is said to be "to scal when all parts are in strict proportion to the original; and ev rough sketches should be approximately to scale, or they w give a distorted representation which may convey a wro impression. When a drawing is made to the same size as t object represented, it is said to be full size, while, if all t dimensions of the object are represented by distances on t drawing that are half full size, the drawing is said to be half f size. Since ordinary working drawings represent surfaces, n contents, the representation of an object with its length a breadth each reduced to, say, half the full dimensions would rea be quarter full size regarding area represented. Lengths, n areas, are, however, measured, and the drawing is said to be h full size.

When it is proposed to produce a drawing of anythi that measures more than two or three feet across, the dra ing must almost of necessity be smaller than the object; a in order that the object may be reproduced faithfully, t reduction must be in every way proportionate. To whatev extent the representation of the object is diminished or i

eased, the relative proportion of every part of the drawing the corresponding part of the object must remain uniform roughout in order to produce a working drawing. In nstructing a drawing either to a smaller or larger scale artificial scale of measurement must be provided which all bear the same relationship to standard length as the awing is to bear to the real object.

The scale of a drawing, then, is the proportion lengths on the awing bear to lengths on the object, and if a drawing measured n. in any dimension, and it were known that that dimension as asured on the object was 1 ft., the scale of the drawing would dently be 3 in. = 1 ft., or $\frac{3}{12} = \frac{1}{4}$ full size. All drawings, even en fully dimensioned, should have the scale stated, preferably der the title or heading, and if a detail, to show it more clearly, drawn to a larger scale, the new scale should be mentioned ar the detail drawing.

Scales are named according to the fraction they represent the object to be drawn. For mechanical and building awings, the following scales are generally used:—3 in. to foot (Fig. 180), $1\frac{1}{2}$ in. to a foot, $\frac{3}{4}$ in. to a foot (Fig. 182). ese scales are popular in the workshop, because they may measured conveniently with an ordinary mechanic's rule; n., $\frac{1}{8}$ in., and $\frac{1}{16}$ in. representing 1 in. on the first, second, d third scales respectively. Again, 1 in. to the foot ig. 181) would be $\frac{1}{12}$ of the full-sized object, and the scales ould be known as $\frac{1}{12}$, and so on. This method of naming e scales is general for students' work, but in the workshop e prevailing practice is to call the above scale "inch" d others "inch and a half," etc.

The scales shown in the accompanying examples are not reproced to the full size marked upon them, owing to considerations space; they should therefore be drawn again for use and actice. As an example, the construction of Fig. 180, a scale n. to 1 ft = $\frac{1}{4}$, will be described. Three feet to this scale are own, but the limits to which the scale is to be set out must pend on circumstances. Commence by drawing two lines 9 in. g and about $\frac{3}{16}$ in. or $\frac{1}{4}$ in. apart. Divide this length into 3-in. rts, each of which will represent a foot. The first division ould then be further divided into twelve equal parts, each $\frac{3}{12}$ in. $\frac{1}{4}$ in. long; these represent inches, and may be subdivided o half inches and quarter inches, the latter dimension on this

scale being represented by a length of $\frac{1}{4} = \frac{1}{16}$ in. The first foo

divided as just described, should be marked off in lengths of 3 i as shown, starting with 12 in., and working forward to 0 in. T other divisions on the scale may be left open, as shown. T scale may be completed by drawing lines close to the top a bottom lengths, with alternate divisions marked by thick centr lines, as shown (Fig. 180).



Fig. 180.—Quarter Scale.

There is a special reason for numbering the feet forwa and the inches backward as shown. For instance: to measu 1 ft. 9 in., or 1′ 9″, open the compasses from the division mark 1 ft. to the division marked 9 in. If the inches had been mark in the same direction as the feet, and the feet had commenced the left-hand end, as they are sometimes carelessly set off, th the scale would be found very confusing to measure from. It better to number the inches 3, 6, 9 and 12 only than every one.

Fig. 181.—Twelfth Scale.

The proportion between the length of 1 ft. on the scale a 1 ft. of the actual object gives the ratio of the two things, a stated as a fraction, gives the representative fraction. In t case of 3 in. to 1 ft. the representative fraction is $\frac{1}{4}$. This always put on foreign drawings, so that the proportion may understood by anyone unacquainted with the language; but English drawings it is not generally found. It will be observ that the thick lines through the centre of the scale, are placed alternate spaces. The first foot divided into inches is natura heavy looking, so call this dark; then the next foot from 0 t will be left light, and 1 to 2 will be made dark, and so on; th backwards in the same way with the inches dark and lig alternately.

The next scale shown (Fig. 181) is suitable for larger objects

or smaller drawings, the scale being generally selected according to the size of the object; it is set off similarly to the last, making 6 in. long altogether, and dividing the first foot into inches. It may be marked off easily from a scale with twelfths of an inch, or the following construction may be readily adopted: At the commencement of the scale draw a line at an angle of, say, 30° to 45°; take the dividers and set them rather less than $\frac{1}{8}$ in. apart, then along this line prick off twelve divisions; join the last one



Fig. 182.—Forty-eighth Scale.

with the end of the first foot, and from the other points draw lines parallel to this one, which will give the twelfths of an inch required on the scale.

In the next example (Fig. 182), $\frac{1}{4}$ in. to 1 ft., the smallest dimension that can be conveniently marked is 3 in., so the first foot can be divided into four parts only, and in the final example of 10 ft. to 1 in., only feet can be shown. These will want extra care, and a fine point to the pencil. Fig. 183 shows a scale of 1 in. to 10 ft.



Fig. 183.—One-hundred-and-twentieth Scale.

Cardboard scales containing all the divisions generally required can now be obtained so cheaply that many scarcely ever use any others, but persons who have to work with them constantly prefer boxwood, while those who can afford it obtain ivory scales, because they are clean and lasting and, what is of more importance, their divisions are generally more accurate. For ordinary purposes a drawing will be good enough if constructed by such a scale, and the size written on, as 3 in. to 1 ft., or whatever the proportion may be between the drawing and the real object; but, for very accurate work, such as civil engineering or ordnance survey work, the scale should be constructed, or copied line for line, at the foot of the drawing, so that, as the paper shrinks or swells with the weather, the scale will vary exactly as the drawing does, and be a true measure for it.



Fig. 184.—Ninety-sixth Scale.



Fig. 185.—Two-thousand-five-hundredth Scale.

In working drawings of great importance it is usual to make scale on the lower border line before commencing the work, so at the atmospheric changes may affect the drawing and the ale equally; but in ordinary work the scale is made after the awing, simply for the purpose of ensuring that it is always at

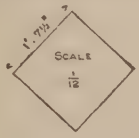

Fig. 186.—Square.

Fig. 187.—Circle.

Examples of Scale Drawings.

and when the drawing is in use. These scales are made with ight variations according to their size, which will be evident n comparing the various illustrations given in this book as xamples.

The correct method of plotting a scale upon a drawing nay be illustrated by the accompanying examples, Fig. 184

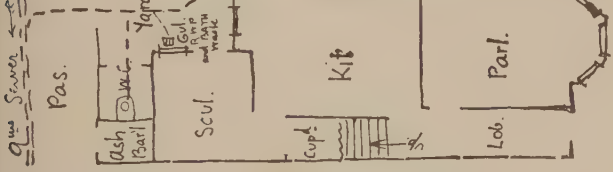

Fig. 188.—Sketch Plan of a House.

showing a scale plotted to $\frac{1}{8}$ in. to a foot, and showing a length of 70 ft., and Fig. 185 a scale plotted to $\frac{1}{2500}$ (Ordnance scale), showing a length of 2,000 ft. Each scale should be plotted with a fractional part on the left of zero, so that distances like 23 ft. on the first scale and 375 ft. on the second scale may be measured by placing the dividers on the respective figures. The accompanying scales are reduced to half size for printing.

In addition to scales, a square (Fig. 186) and a circle (Fig. 187) are shown, and as an exercise each is to be drawn to the scale

mentioned upon it. Scales in common use for architectur drawing are $\frac{1}{8}$ in. and $\frac{1}{4}$ in. to 1 ft. for plans, elevations, an sections, and $\frac{3}{4}$ in., 1 in., $1\frac{1}{2}$ in., and 3 in. to 1 ft. for details, an

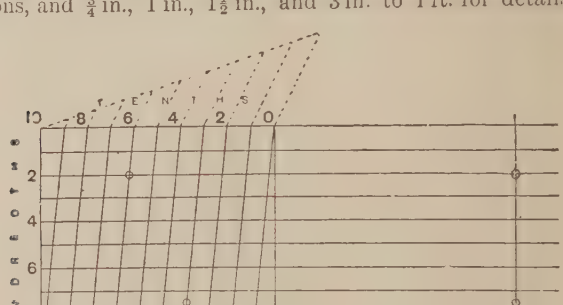

Fig. 189.—Diagonal Scale for Accurate Measurements.

full size for mouldings. In machine drawing, $\frac{1}{2}$ in., 1 in., $1\frac{1}{2}$ i and 3 in. to 1 ft. for general plans; $1\frac{1}{2}$ in. and 3 in., half size a full size, for details. In other branches smaller scales a common, as 100 ft., 50 ft., 40 ft., 20 ft., and 10 ft. to 1 in. in civ



Fig. 190.—Scale Showing Tenths and Hundredths.

engineering; 88 ft. to 1 in., 3 chains to 1 in., etc., in land surve ing. Sometimes, in order to get an even representative fractio some peculiar scales are used for maps—for example, 25·344 i to 1 mile is used because it gives the representative fraction $\frac{1}{25000}$, as shown in Figs. 185 and 193.

Drawings that often come under notice include plans houses. These are generally drawn $\frac{1}{96}$ of full size—that i on a scale of $\frac{1}{8}$ in. to 1 ft. Upon this scale it is possible show the size and shape of every room, the position of eve door, fireplace, and window, stairs and landings, slopston gully, bath, water-closet, cupboard, down-pipe, gutter, etc

A drawing of this kind, with all the thicknesses of ls, etc., shown accurately, takes some time to produce; for note-taking elaboration is hardly necessary; but a id sketch of a house, as shown at Fig. 188, would be lligible to anyone familiar with buildings.

Plans of land are drawn to a small scale, from which the n marks are necessarily omitted, and in which the feet, n they are represented at all, have their ciphers left out. large tracts of land a scale of 6 in. to the mile is often d; for smaller portions, a scale of 1 in. to a chain is mmonly employed.

In cases, where fine divisions are required, the diagonal le is generally adopted. In drawing one for the first time, s better to make it a large one, as then the construction be followed more readily; say, the illustration shown by . 189 is first drawn with 5 in. for the unit. The division he first space on the upper line into ten equal parts may made by stepping ten times with the spring dividers, or metrically, as shown, and must be repeated at the tom. Similar divisions are then to be made on the left-nd vertical line, all the horizontal lines drawn through, l the vertical lines at each 5 in. The diagonal lines must xt be put in, the first of them reaching from zero on the top e to the end of the first division on the bottom line, and others parallel to it, so that, as each diagonal crosses a izontal line, it leaves a space increasing by hundredths he unit.

In the third line down will be found two small circles, distance from centre to centre being 1·62, measured thus: the right from the zero line is one unit, the sixth diagonal e on the left from the zero shows six-tenths, and the second e down from the top shows two-hundredths contained ween the zero line and the first diagonal. The two circles the third space from the bottom represent 1·375, being dway between 1·37 and 1·38. The smaller scale, illustrated Fig. 190, is like those that appear upon the machine-made les, and will now be understood without further descrip-n.

In the case of a map or plan, for example, the artificial le may have an actual length of, say, 5 in., which at the ne time represent a distance of ten miles in the drawing.

In this instance the scale would be divided into ten e parts, each indicating miles, while by subdividing on these divisions into eight equal parts, furlongs would represented. Here an actual length of half an inch is un stood to represent one mile, and the map or plan would described as being drawn to a scale of half an inch to mile. Another way in which this fact may be state this:—The number of half inches in a mile is 1760 × 12 × 2 = 126,720; and as this number of half-inches is re sented by one half-inch, it is evident that the drawin

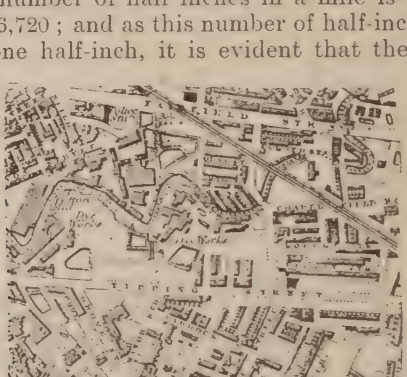

Fig. 191.—Scale $\frac{1}{10560}$: 1 in. = 880 ft.; 6 in. = 1 mile.

only $\frac{1}{12672}$ the size of the real object it is intended to sh This sum $\frac{1}{12672}$ is known as the representative fractio the scale, and sometimes is used to indicate any partic scale instead of the previous expression.

The value of scale drawings is particularly shown in maps issued from time to time by the Ordnance Sur These have not all been drawn to one uniform scale, it ha always happened that before the map of the whole cou could be completed upon any one scale, the discovery of s defect or the suggestion of some improvement has ind the Department to begin afresh upon a different scale.

Speaking generally, the whole country has been mapped upon a scale of 1 inch to the mile, and also on a scale 6 inches to the mile (see Fig. 191). Maps on this scale too small to represent anything but the barest outlines very large schemes, and here they need not be further cribed.

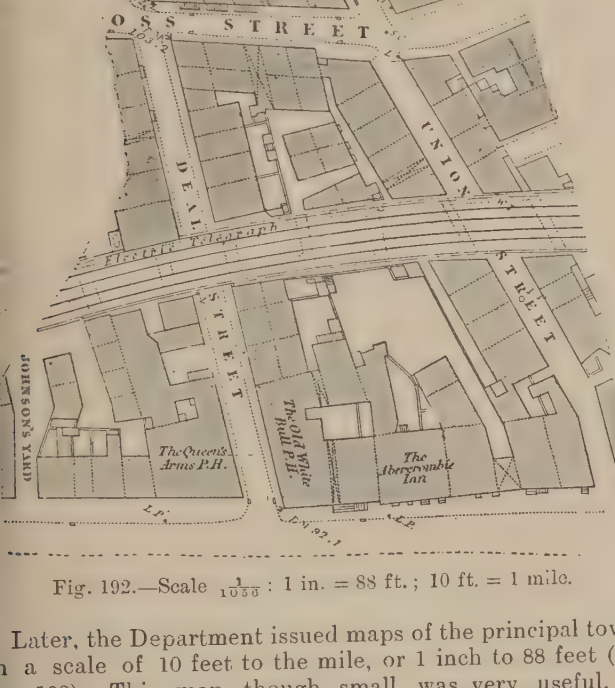

Fig. 192.—Scale $\frac{1}{1056}$: 1 in. = 88 ft.; 10 ft. = 1 mile.

Later, the Department issued maps of the principal towns n a scale of 10 feet to the mile, or 1 inch to 88 feet (see g. 192). This map, though small, was very useful. It as very clearly printed from engraved plates, and was a ork of art as compared with the maps issued at the present me. This scale, however, has been abandoned, and the epartment now publish town maps on the following scales namely, 25·344 inches to the mile, or 1 inch to 208·33 feet, $\frac{1}{2500}$ full size (Fig. 193), and 10·56 feet to the mile, or inch to 41·66 feet, or $\frac{1}{500}$ full size (Fig. 194). This last

map is exceedingly useful, the scale being large enough
show upon the map man-holes, sewer ventilators, gull
lamps, etc.; and by its aid can be laid down schemes for
drainage of even a single house. The sheets of these m
measure about 38 inches by 25 inches, and can be purcha
plain or coloured.

The accompanying illustration shows a small portion

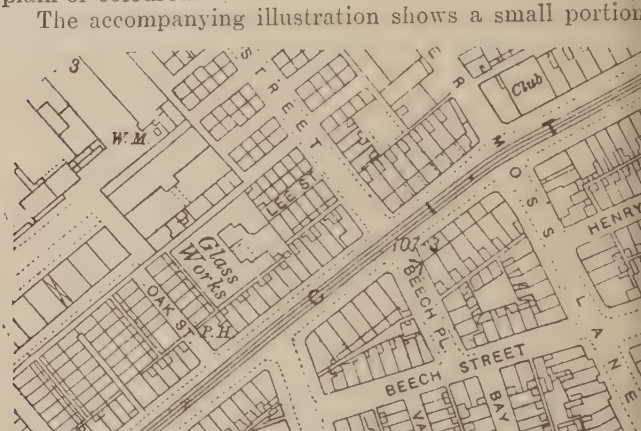

Fig. 193.—Scale $\frac{1}{1500}$: 1 in. = 208·33 ft.; 25·344 in. = 1 mile.

the $\frac{1}{500}$ Ordnance map. At the corner of the house a be
mark has been cut (these are usually about 1 ft. 6 in. ab
the surface of the ground), and the figures indicate that
point is at a height of 89·55 ft. above Ordnance datum.
Ordnance datum is an imaginary horizontal plane extend
over the whole country at the same height as the aver
mean level of the sea at Liverpool. This datum was f
by the surveyors of the Ordnance Department, and the le
of districts are marked on the Ordnance maps as being
many feet above the Ordnance datum; that is, above
average sea-level at Liverpool. The figure in the road
indicates that the road at that point is about 87·7 ft. ab
the datum, the second place of decimals not being give

Figs. 191 to 194 illustrate plans of streets, and these awings show what the street would look like as seen from balloon. All these are drawn to scale so that the lengths d widths can be measured from the plan. Kerb-lines are ually represented by dotted lines. Ordinary colours used the roadway are sepia or pale indigo; footpaths, pale rnt sienna; buildings, crimson lake or indigo. Lines of wers are shown by blue lines or thick black lines.

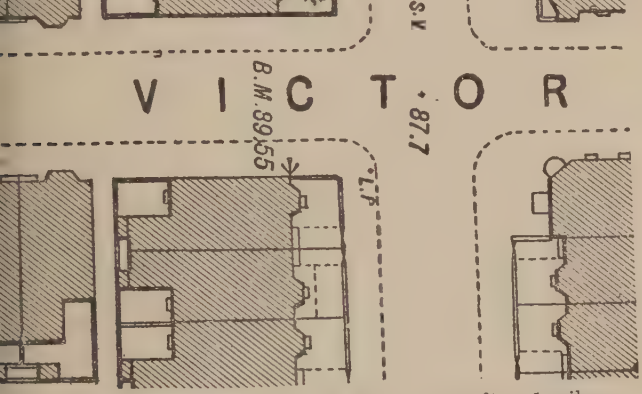

Fig. 194.—Scale $\frac{1}{500}$: 1 in. = 41·66 ft.; 10·56 ft. = 1 mile.

A drawing showing what the street would look like if all ne side of the street were excavated away, the spectator oking squarely at the face of the excavation, would be alled a section. The drawing would then show the setts at ne top, the ballast underneath, earth beneath that again, nd, lower down still, the gas and water mains and sewers. n sections for new streets that are to be made, the present rface of the ground is indicated by a more or less crooked ne. The finished level and the formation level are gener- lly indicated by coloured lines, and the sewer is shown at s proper depth and inclination.

CHAPTER IX.

COLOURING DRAWINGS.

Colour is a very considerable aid to "reading" a drawin particularly when different materials occur adjacent to ea other. Architectural and mechanical drawings are intend for use rather than for decoration, and the colouring is us chiefly to denote the different kinds of material, but there no valid reason why a drawing should not be neatly finish as well as accurate in draughtmanship and colouring. T colours not only emphasise the separate pieces by contra but custom has decided that certain materials shall be rep sented by certain colours, some being almost the natu tint of the material, and others purely conventional. It more important that parts in section should be colour than parts in elevation; a section is always an imagina cut, and the colour is put upon the cut surface because oth wise it is not so easy to recognise as it would be in t elevation. A true section can be seen only by "men vision," while an elevation is subject to ordinary visio The list on p. 138 gives selections from the practice of t best engineers' and architects' offices, and is the standa adopted by many. Some of the colours may be replac by less expensive ones, such as yellow ochre for Rom ochre, neutral tint for Payne's grey, or neutral tint with little crimson lake for violet carmine.

The extremes of good and bad drawing and colouri are commonly to be found in architects' offices as contrast with civil engineers' work. Some of the faults are runni all lines beyond the proper junction, making them a unnecessarily broken and very thick, ruling ink lines cl above and below and even through the printing, maki letters of such fantastic shapes that reading is difficult, a even extending the same style to the dimension figur using crimson lake in colouring elevations instead of one the numerous reds having the natural tint of red bricks

using Prussian blue for anything but wrought iron, etc. etail drawing sent out from an architect's office, that red a wrought-iron girder resting on a cast-iron column ding on a stone base, had all the parts coloured with a tint of Prussian blue on the score of custom, so that the of colour at all was of no advantage whatever in dis- uishing the material; moreover, Prussian blue is a harsh ur at the best of times, and should be avoided whenever ible. Many draughtsmen have a natural talent for g suitable colours, and putting them on in a suitable ner, but others must go through the drudgery of careful

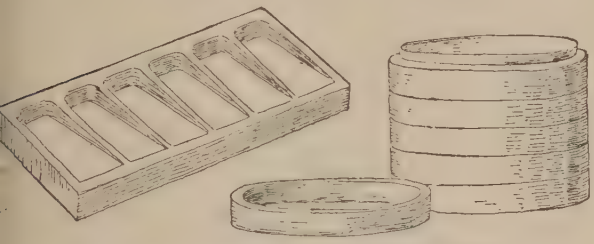

Fig. 195.—Slant and Saucers for Colours.

ctice according to rule. A perfectly uniform tint such as ired on an engineer's drawing is not required on an hitect's drawing, and still less on that for use by a lder; but unless the draughtsman learns first to lay on lat and uniform wash of any tint, he is not likely to be e to put on an appropriate rough tint. For water-colour tching a flat tile with shallow recesses is suitable for ing the colours, but this is quite unsuited for a draughts- n's use. He should invariably use the nests of round cers fitting one on the other, as shown by Fig. 195, of a e to hold as much colour as would be required to com- tely finish the colouring of any one material on one sheet. e saucers should be kept covered while in use, and washed when done with. The lightest tints should, as a rule, put on first, and the brush should always be of ample e. Colour brushes should be kept scrupulously clean, er put in the mouth, always washed after using, the sur-

plus moisture shaken out, and then put away in the box not laid on a dusty shelf to dry.

In giving on p. 138 a list of the colours used in archi tural and mechanical drawings, it may be said that colours adopted vary according to circumstances, and i difficult to lay down general rules. The practice in so

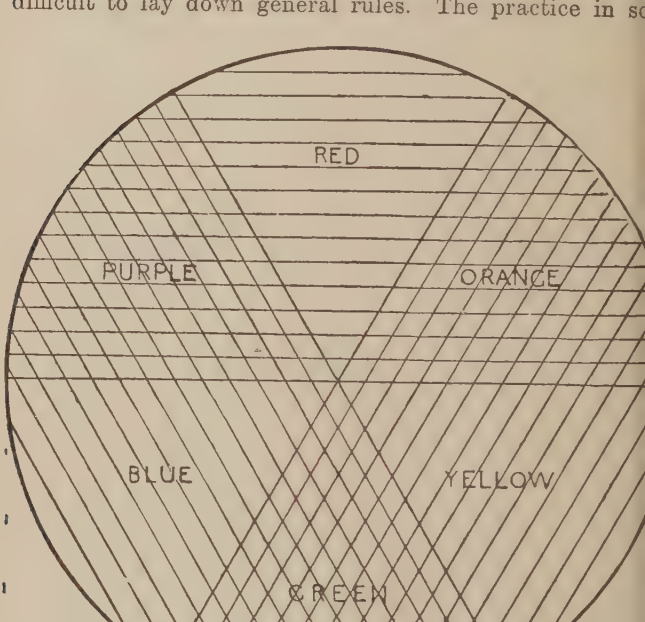

Fig. 196.—Primary Colours and Secondary Tints.

good offices is to use a very pale sepia for York stone elevation, pale Payne's grey for Portland or Bath ston pale indigo for granite with ink dots, and darker tints the same colours for the sections. Architects, who oug as a body to have an eye for colour, sometimes offend using harsh and unnecessary colours on their drawin

ıe in some form or other is much used by architects to resent stone, but it should be used very sparingly, so as resemble the natural tint of the stone rather than the ventional representation. For a red sandstone, a pale t of light red, Indian red, Venetian red, or burnt ochre ght be used, depending upon the general elevation colour. r cement in any form in elevations, pale Indian ink or e Payne's grey is generally used, with or without dots l markings. Windows may be coloured with black lian ink, or washed Prussian blue, Prussian green, or yne's grey, according to circumstances. A plain tint all er is the simplest, but a good artistic effect may be ob- ned with the exercise of a little skill.

A little practice in the laying of colours one over another l be useful for impressing on the memory the general ect of combination and also a knowledge of the primary ours and their secondaries. Nearly all water-colours transparent, and a medium tint of any one colour, if d over another after it is dry, will allow the first colour show through. A more intimate combination may be de by mixing the colours together in the same palette l putting them on with the brush in one operation.

It should be noted that a draughtsman never speaks of ainting" his drawing; the term is frequently misused, t it should be colouring or tinting.

If a circle (Fig. 196) and a square (Fig. 197) be set out and oured as marked in the accompanying diagrams, some of results of combination may be easily produced. Prepare separate saucers some Prussian blue, crimson lake, and mboge to medium tints of about equal intensity; these the so-called primary colours. In Fig. 196 the half-circle rked purple, red, and orange should be coloured first with int of crimson lake; as soon as it is dry the half-circle rked purple, blue, and green should be covered with a t of Prussian blue; and the half-circle marked orange, llow, and green should be covered lastly with a fairly ong tint of gamboge. Where the pairs of colours are perposed, the secondary tints of purple, orange, and green l be found to have been made by the combination. Each tion of colour in the circle will be complementary to one opposite it—that is, it will be in extreme contrast,

and it is a physiological fact that when the eye is fatigu
by looking at one of them it will be rested by looking at th
opposite.

If a square of 7 in. side be divided into parallel colum

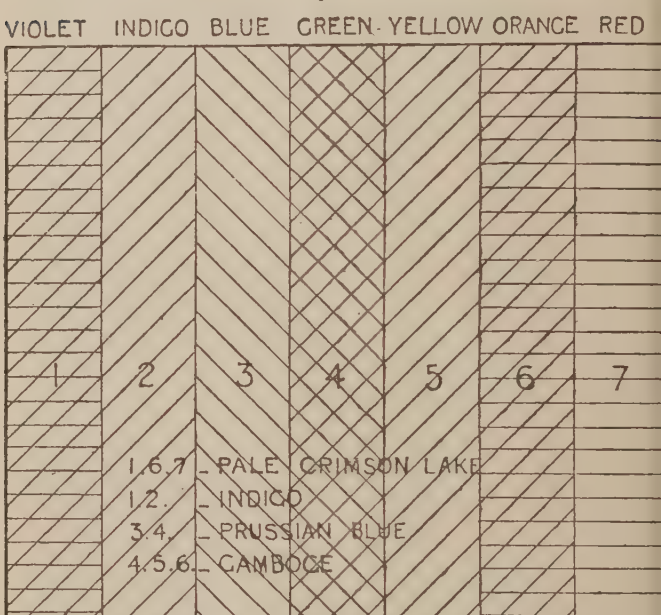

Fig. 197.—Colours of the Spectrum.

of 1 in. each and numbered as shown in Fig. 197, and equ
tints of crimson lake, indigo, Prussian blue, and gambo
be prepared, the various rainbow colours named upon t
columns may approximately be produced as follows: Ti
the columns numbered 1, 6, and 7 with crimson lake, 1 and
with indigo, 3 and 4 with Prussian blue, and 4, 5, and 6 w

amboge. The lines drawn across the diagrams show the xtent of each colour. If care be taken to put on even tints nd not to go beyond the outline, this recreation of colouring ill enable the practical work to be carried out efficiently.

In practical colouring for draughtsmen's work (see Fig. 97) the first point to note is that the colour in any one space ust not overlap the boundaries; it must be of the right nt, and laid on perfectly flat or uniform. To do this re-uires skill that can only be acquired by practice. Use a et of colour saucers, in one of them put a little clean water, ut not much, as a teaspoonful will colour a square foot; ub in it gently the end of a hard-cake colour, until it is dark nough, and then stand the colour up on its dry end. Use brush about $\frac{1}{4}$ in. diameter and $\frac{3}{4}$ in. long, rinse it in clean ater, and pass it through the saucer to mix the colour until looks perfectly uniform, without points or marks near the dges, and above all without chips in it.

Wipe the brush lightly on the edge of the saucer to remove he surplus colour, and hold it as described for a lead pencil hen about to draw a vertical line; commence at the top ft hand of the space to be coloured; pass the brush down-ards, then along the top, then down by short strokes from he top to the length of the first stroke, and so carry the olour downwards for the whole width, finishing at the ottom right-hand corner.

To produce good and uniform colouring, never damp the aper before commencing, re-fill the brush often, gently iping it on the edge of the saucer each time. The margin f the colour must not dry before the next stroke reaches , and a part once coloured must never be retouched, even nough it looks uneven. Retouching is a fruitful source of ailure; for colour, looking uneven when wet, may dry even, ut if touched again when partially dried it is certain to show neven when dry.

There is an advantage in having plenty of colour in the rush, but when nearing the bottom boundary the amount ust be reduced, so that there is not a pool left at the lower rner. By regulating the amount of colour any slight xcess may be picked up with the brush by simply raising slowly, point last, from the corner. The brush should not e wiped in any way, but simply washed in clean water when

done with, or before use with another colour. It will so be found that with a given amount of colour in the bru more or less of it may be left behind as the brush is allow to trail or is used sideways, and it is by unconscious adju ments of this kind that a good colourist produces unifor results.

It is useful to remember that sections of materials a always coloured with a dark tint, but the term dark is on relative; for instance, with dark Prussian blue for wrough iron, it should be quite easy to read ordinary dimensi figures. Dark tints are more difficult to lay on evenly tha light ones, but the same method is adopted. Another sour of difficulty in sections is that to produce the best results very narrow white margin should be left uncoloured on t top and left of each portion, where rays of light from t top left-hand corner of the paper would strike upon ther This custom enables the number of plates to be more readi seen in large girders, and makes all sections more effective

The colours for tinting woodwork on a drawing may eith be plain, or, if time and other circumstances permit, ma be laid on in imitation of the natural grain, although, to certain extent, all colouring on mechanical and architectur drawings is conventional. For the plain tints the followi may be used: Fir and deal used in the rough, raw sien or gamboge; for the same if wrought and for pitch pin burnt sienna; for oak, burnt umber or sepia; for mahogan light red. If graining is to be attempted, each kind of woo requires three gradations of colour for elevation and sectio

Suppose an example be attempted of wrought fir or de as in the accompanying diagram, a pale tint of burnt sien must be laid uniformly over the front and side elevatio (Figs. 198 and 199), including the splintered ends, then darker tint must be mixed and laid uniformly over the en grain and cross-section pieces. This darker tint will be t one used for the graining on the front and side elevation and in mixing this colour it would be well to compare piece of the actual wood represented, as the accompanyi illustration, as printed, is necessarily much too black to gi the right effect. Two brushes will be needed, one for t colour and one with plain water for softening the inner ed of the graining lines as they are put on. The water bru

Fig. 198.—Front Elevation Showing Deal or Fir.

Fig. 199.—Side Elevation Showing Deal or Fir.

Fig. 201.—End Grain.

should be wiped on the edge of the glass or gallipòt containing clean water, leaving the brush wet, but not full charged, and every minute or two it must be rinsed in th water to keep it clean.

The so-called heart part in a board showing good grai appears in wider pieces than the other part, and more fille up at the ends, while the grain towards the edge appear narrower and in lines closer together. The heart grain als gets more and more pointed as it leaves the central piece until it runs out into nearly straight lines or widens agai into a fresh piece of heart. The outer edge of the grainin in elevation should be sharp and clear, while the inner edge

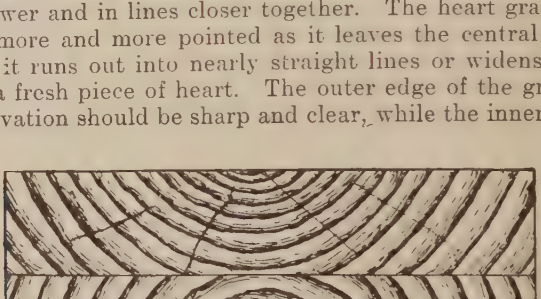

Fig. 200.—End Grain.

should be softened off with the water brush in a graduate tint, so that it shall be difficult to see where the colour ends In doing this, care must be taken not to overlap the shar edge of the inner line. It is rather better to work from th middle of the board outwards than to put in the outer grai first. In the side elevation (Fig. 199) the grain is show by single lines slightly waved, and all softened on the lowe edge.

The elevations having been completed, the colour shoul now be mixed in its third degree of intensity for the part showing end grain or cross section (Figs. 200 and 201). N distinction is made between these two conditions. The ring showing the annual growth of the tree may be lightly pen cilled if desired, but it is just as well to proceed at once wit the colour, making the rings dark on the outer edge, an softening the inner edge with the water brush. After th rings are dry, about three radial lines may be put in a

ndom without any softening. These may look like heart akes, but they are really to give more effect and to relieve e monotony of the circles.

There are other methods of indicating section parts of oodwork on small drawings; the ordinary way is simply put in diagonal lines of colour with the brush, reversing e direction of adjacent pieces. Engineers sometimes rule the colour with the drawing pen, using alternately thick d thin lines. Architects often colour round inside the tline, and then put diagonal lines across. Samples of all ese methods are shown in Fig. 202, as nearly as can be ven in print, with black ink.

Oak differs very much from fir and deal in the nature of s grain, and is much more difficult to represent. In most ses it will be sufficient to use a plain tint of burnt umber sepia, light for elevation (Figs. 203 and 204), and ark for section (Figs. 205 and 206), but there are always me aspiring draughtsmen who want to get the best result om their labour, and they may be glad of a few hints. The fference of grain will be better understood after a short escription of the trees themselves. Fir and deal have a oft, straight grain with comparatively wide and regular nnual rings more or less strongly marked, darker on the ıter edge of each, and with the medullary rays not showing. ak has narrow, close, and irregular annual rings, with the edullary rays, or felt, or flower, or silver grain strongly arked both on the end and face. The medullary rays are ard plates of flattened cells more or less radial, but running mewhat irregularly in the length of the tree, so that when board is cut to show the "flower" they appear as small ard slabs of a lighter colour and solid texture, averaging erhaps $1\frac{1}{2}$ in. by $\frac{1}{4}$ in. broader in the middle and slightly urved.

In order to show these rays on a drawing in water-colours ne surface must be tinted with pale burnt umber, leaving he light spaces, and one side of these may be softened off ith the water brush to imitate nature more closely. The olour then being mixed a little darker, the rest of the raining may be put on, which is little more than a series f broken lines without softening. The same colour will be sed for the underneath tint on the end grain; and then,

Fig. 202.—Various Cross Sections for Fir.

Fig. 203.—Front Elevation Showing Oak.

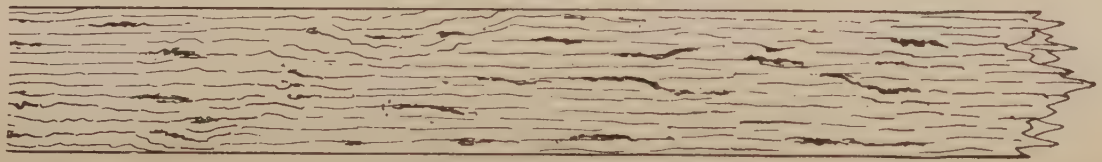

Fig. 204.—Side Elevation Showing Oak.

ixing it still darker and using a fine-pointed brush, the nd grain may be put on in thin dark lines, broken fre- uently, and placed rather close together. When this is

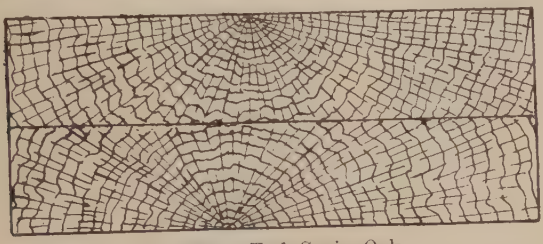

Fig. 205.—End Grain Oak.

lone the medullary rays may be put on with the same brush and colour, keeping them fairly radial, but somewhat

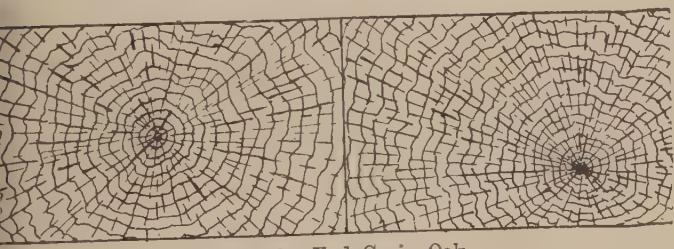

Fig. 206.—End Grain Oak.

irregular and broken, and adding other lines as the work progresses towards the outer edge. The smaller pieces of

Fig. 207.—Various Cross Sections for Oak.

oak are coloured (as shown by Fig. 207) conventionally in the same way as described for fir and deal, the only difference being that burnt umber is used for oak.

DISTINCTIVE COLOURS GENERALLY USED IN ARCHITECTURAL AND MECHANICAL DRAWING.

Banks (Steep).—Shaded with graduated warm sepia, darkest a top of bank , vertical hill-shading in Indian ink or dark sepia.

Brass.—Gamboge with yellow ochre or burnt sienna.

Bricks (Blue).—Elevation, indigo and Indian ink ; sectio indigo. (Red).—Elevation, light red (pale) ; section, Indian re (dark).

Brickwork (New).—Elevation. Roman ochre ; section, crin son lake. (Old).—Elevation, Indian ink (pale) ; section, India ink (dark).

Buildings (Brick or Stone).—Crimson lake. (Wood).—Sepia

Cast Iron.—Payne's grey ; neutral tint.

Chain.—Elevation, Prussian blue (dot and stroke) ; section, r colour.

Concrete.—Sepia with black marks ; or indigo, or Payne grey with black marks and small light spots left.

Copper.—Gamboge with lake ; elevation, crimson lake ar burnt sienna ; section, crimson lake and burnt sienna (dark).

Earth.—Burnt umber or warm sepia, left jagged at edges ; sepia, light and dark.

Electric-bell Wires.—Yellow.

Fields and Vacant Lands.—White.

Fir and Deal (rough).—Elevation, burnt sienna or gamboge section, burnt sienna (edged round and hatched).

Fir and Deal (wrought).—Elevation, burnt sienna (pale section, burnt sienna (dark rings).

Footpaths (Flagged).—Yellow ochre.

Glass.—Green ; Prussian blue ; neutral tint.

Glass Roofs.—Cross-hatching of Prussian blue.

Granite.—Purple madder ; pale Indian ink.

Greenheart.—Elevation, indigo and gamboge ; section, indig and gamboge (dark).

Gun-metal.—Elevation, Indian yellow ; section, Indian yello (dark).

Lead.—Indigo ; indigo with Indian ink.

Leather.—Elevation, burnt umber (very pale) ; section, bur umber (dark).

Mahogany.—Elevation, light red and burnt sienna ; sectio light red and burnt sienna (dark).

Meadows and Cultivated Grass.—Prussian green; Hooker's
en.
Oak.—Elevation, burnt umber (pale); section, burnt umber
k).
Pipes (Cold-water).—Prussian blue. (Gas).—Indigo with lake.
ot-water).—Crimson lake. (Rain-water).—Elevation, Prussian
e (outline); section, Prussian blue (outline). (Soil).—Eleva-
n, burnt sienna; section, burnt sienna (outline).
Plaster.—Payne's grey. Plaster and Cement.—Elevation,
lian ink (pale); section, Indian ink (dark).
Railways.—Neutral tint between the rails of each track.
Rope.—Elevation, burnt sienna (dot and stroke); section, no
our.
Rosewood.—Burnt sienna with lake.
Sewers and Drains.—Prussian blue.
Skies (in perspectives).—Cobalt blue.
Slate.—Elevation, Payne's grey; section, Payne's grey (dark).
Steel.—Elevation, violet carmine (very pale); section, violet
rmine (dark); or indigo with a little lake.
Stone.—Yellow ochre; gamboge with Indian red and burnt
nber; sepia; Prussian blue. Representing stone in section by
russian blue is to be avoided, though in common use. Prussian
ue should be retained entirely for wrought-iron work.
Stone Dressings.—Elevation, French blue (very pale), section
rench blue (dark).
Streets (Paved).—Neutral tint.
Timber (Existing).—Elevation, Indian ink (pale); section
ndian ink (etched).
Tubes (Speaking).—Green.
Water.—Elevation, Prussian blue (washed); section, Prussian
lue (lines). Water may have graduated blue edges.
Windows Inside.—Elevation, French blue (pale); section,
Hooker's green, No. 2 (dark).
Windows Outside.—Elevation, Payne's grey (dark); section,
Hooker's green, No. 2 (dark).
Wrought-iron (Bright).—Elevation, Prussian blue (very pale);
ection, Prussian blue (dark). (Rough).—Payne's grey.
York and Soft Stone.—Elevation, sepia (very pale); section,
epia.
Zinc.—Elevation, French blue (very pale); section, French
lue (dark).

CHAPTER X.

MAKING A DRAWING.

All the general principles upon which the drawings are c
structed have been dealt with, and any attentive reader who
worked out enlarged copies of the diagrams will have made
substantial progress towards becoming a skilled draughtsm

In commencing a drawing the first thing is to decide wh
abouts on the paper the various elevations, plans, and sect
will be disposed, and of what size they can be drawn, so as
find sufficient room for them and their descriptions. The s
having been once determined, it is well to make a pe
memorandum of it in one corner of the margin, for it o
happens that a drawing has to be left uncompleted for sev
days, when the note will save the trouble of trying over var
scales, in case the original one has been forgotten. The p
of a building or piece of machinery are usually placed dire
above or below the elevations, so that the various features
be projected from one to the other by the use of the T squ
End elevations are placed to the right or left of the n
elevation, in accordance with the side which they represent.

There is one simple and general rule which is to be obse
in making any drawing, and that is to commence with the n
dimensions first, and draw them in their correct positions be
filling in the smaller details. If this be not attended to, a
number of small details are added one to another without
setting out the total length they are to occupy, it will gene
be found that some slight errors in each measurement whi
is impossible to avoid have accumulated so as to make a dec
discrepancy.

As an example, suppose a front elevation of a building
to be set out, containing a doorway in the centre, with t
windows on each side. When the widths and spaces are
set out separately, commencing at one end, and measuring
from the termination of the last, it will be seen that, altho
each measurement may be within one fraction of the co

ension, the total may be as much as fifteen fractions in error. The correct method would be to set off first the total length of the building, then to find the centre and set off the width of the doorway, and afterwards to fill in the windows and spaces.

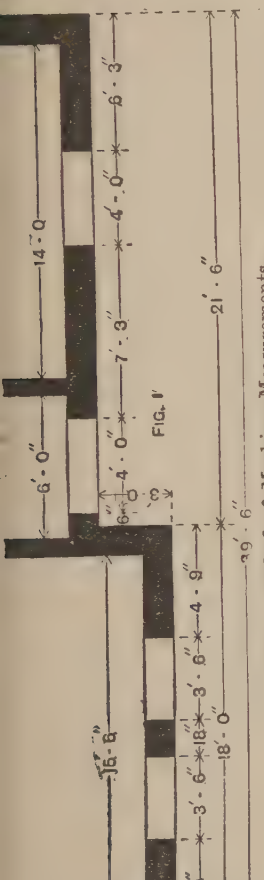

Fig. 208.—Method of Marking Measurements.

Suppose Fig. 208 to be the plan of the front of a small villa. An "over-all" measurement of 39′—6″ should first be put on the drawing, and then be subdivided as shown, into 18′—0″ for the projecting portion and 21′—6″ for the recessed part. These measurements should be again subdivided, showing the lengths of brickwork, widths of openings, etc.; and a line of measurements inside gives the thicknesses of the walls, dimensions of rooms, etc. The distance that the part projects should also be noted as shown by 3′—0″. The inside measurements and the smaller dimensions should exactly agree with the "over-all" measurement given.

In drawing pencil lines they should always be drawn longer than the actual length of the line to be inked in, so that the exact point of intersection with other lines can be better seen. When the drawing has been inked in these extra lengths, of course, have to be cleaned off with indiarubber, as well as a great many other pencil lines which are necessary in the process of making the drawing, but which form no part of the finished draw-

ing. These "construction lines," as they are called, shou be drawn as lightly as possible, so as to be easily removed wi out greatly damaging the surface of the paper. When drawi circles or arcs of circles with the compasses, a little pencil ma should be made round the centre-point, so that it can be fou without any trouble when it is desired to draw it in ink. It useless to draw in pencil every one of a long series of circles arcs which are all alike; it will be more expeditious to ma the centres only after drawing the first one or two, for in t inking-in of the drawing, when the compasses are once set to t correct radius, the centres will be all that is required to dr them in full.

Every working drawing, when it leaves the draughtsm should be carefully and completely figured. A little time spe thus in figuring the builder's tracings so that the sizes of wind openings, thicknesses of walls, etc., are clearly stated, will sa the architect and clerk of works worry and inconvenience wh the building is in progress. It is well for the lines along wh the measurements are given to be drawn in colour. The ti ′ and ″, those well-known signs for feet and inches, should clearly shown, and a short dash between the feet and inches ke the figures clearly apart as 6′—10″. A measurement of f only should always have a cipher in the place of the inch as 25′—0″. The arrow-heads, showing where the dimensi apply, should always be carefully and clearly marked th |<——10′-6″——>|.

Vertical measurements showing the height of rooms best figured from floor to floor, never from floor to ceiling, allowance should be made for the depth of the floor. T height of the windows should always be figured from the of the sill to the underside of the head, and their position fr the level of the floor to the top of the sill, this giving exac the opening in the brickwork. If a drawing is carefu figured on the lines here indicated, it is much easier for workmen to carry out the work correctly, and much lab in superintending is saved to the architect and contractor.

The next example for practice shows that some substan progress has been made, and, while apparently working only detached fragments in previous examples, a framework of kn ledge and skill has been built up that can now be applied practical uses.

Fig. 209 shows a small plan of an irregular piece of ground, unded by straight lines and containing a cottage. This would called a block plan, because the cottage is shown as a solid ock—without details. It will be seen that every part of the an is "triangulated," which means that each junction point has ree dimensions to fix it, upon the same principle as large rveys are carried out.

This block plan of a cottage and grounds is intended for actice in drawing to a scale of 1 in. to 8 ft. Before commencg, ascertain the extreme length and height of the drawing, so

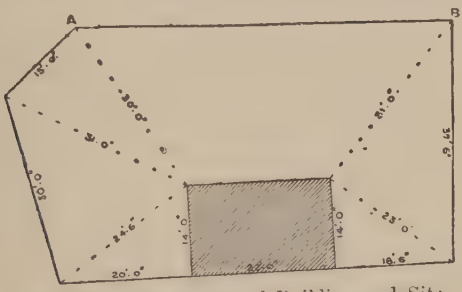

Fig. 209.—Block Plan of Building and Site.

hat the base line may be drawn in a convenient position upon he paper. Mark off along the base the lengths shown, and, with he extreme left of the line as a centre, mark with the compasses n arc of radius on the scale equal to 24 ft. 6 in. Similarly, with he mark 20 ft. from the left-hand end of the base line as centre, trike an arc of 14 ft. radius to cut the first arc, and the intersection of these arcs will fix one corner of the cottage. The right end of the line may be dealt with similarly, and the plan of the cottage completed with straight lines. Then from the left end of the base line strike an arc of 30 ft. radius, and from that corner of the cottage first found strike arcs of 31 ft. and 30 ft. radius, the 31 ft. radius cutting the first 30 ft. radius, and the intersection of these arcs will fix one of the angular points of the garden ground. From this angular point an arc of 15 ft. radius, may be struck; this, intersecting the second 30 ft. radius, will obtain the point A. The point B may be found similarly, and the plan finished by connecting A to B by a straight

line. The length A B, measured on the scale, should indica 58 ft. 6 in. on an accurate drawing.

In practically measuring any piece of ground for the purpo of making a plan, there are one or two principles to bear in mi —first, the lines upon which the measurements are taken must so arranged that it is not possible to make a mistake witho discovering it in "plotting" or "drawing to scale." For instanc in the present case, if the measurement 30 ft. from A had be taken as 29 ft., then A B would scale shorter than 58 ft. 6 in., a thus it would be known that there was some error; and any oth wrong dimension would, in the same way, distort the figure, that the last line would not work in correctly. Another princi is that where several small measurements occur in one line,



Fig. 210.—Measuring an Angle.



Fig. 211.—Scale for Plan shown at Fig. 209

piers and panels in a wall, a general dimension over all should given, which should agree with the sum of the separate measu ments. Thus the over-all dimension of the base line in Fig. 2 might have been shown, as it is the sum of the running dime sions, or 20 ft. + 32 ft. + 18 ft. 6 in. = 70 ft 6 in. Sometimes, order to obtain the angle one wall makes with another, a spec measurement is taken across the angle at a little distance fr the junction, instead of taking the whole length and the distan between the ends. This is shown in Fig. 210.

The cottage may be covered, as here illustrated, with lines an angle of 45°, called "hatching," to show that it is a buildi If the scale were smaller, it might be covered over solid wit tint of dark Indian ink; and if the drawing were coloured would be tinted with crimson lake, while the garden grou might be coloured green.

Now make a neat scale of feet (Fig. 211) on the lower bor line, showing 10 ft. by units and 50 ft. by tens, the units be numbered backwards.

It is a good rule as far as possible to limit the writing o drawing; but, whenever writing is done, it must, first of all,

adable, and with this object it is well to use plain block letters
r headings, and italics for descriptive notes. Architects very
ten obscure their printing on plans by inventing new letters,
aking them of microscopical size, placing them between ink
es, and finally skewering them with another line through the

A B C D E F G H I J K L M N O
P Q R S T U V W X Y Z &c.

Fig. 212.—Sample Block Letters.

Fig. 213.—Enlarged Drawing of the Letter G.

ntre, all upon the false idea of this being artistic. The first
quirement of the printing upon a drawing is that it should be
adable ; therefore, let it be neat and distinct.

1 2 3 4 5 6 7 8 9 0

Fig. 214.—Samples of Figures.

The heading for the drawing shown at Fig. 209 may be
BLOCK PLAN OF COTTAGE AND GARDEN GROUND."
t is rather a long one, and the letter G occurs so often that a
pecial enlarged view of this letter is given at Fig. 213, with the
ircles completed by dotted lines for comparison, to show exactly
he shape that is recommended for this letter.

A sample of the block letters for headings is given at Fig. 212 ;
hey may be drawn in single thin lines or thickened to a maxi-
num of $\frac{1}{16}$ in., and on the size of paper recommended—viz., 13 in.
y 21 in., their height should not exceed $\frac{5}{16}$ in. for short headings,
r $\frac{1}{4}$ in. for long headings. Figures appearing in the heading
Fig. 214) should be the same size as the letters, but as dimensions
n the drawing they should not be more than $\frac{1}{8}$ in. deep, nor less
han $\frac{1}{12}$ in. When dimensions are put upon a drawing, the
listance to which they extend should be carefully shown by
lotted lines, with arrow heads at the extremities, keeping the
ractions level, as shown (Fig. 79, p. 50), and with the small figures
wo-thirds the size of the large ones. The feet should be marked by
a single accent thus, ′, and the inches by a double accent thus, ″

with a full stop on the line between the figures. If the dime sions consist of an even number of feet, then inches should represented by . O''. The omission has led to serious mistakes practical work, which should always be guarded against, and, n withstanding the examples of text-books and the practice of so examiners, this is an important point always observed by practi draughtsmen.

After inking in all the figures, pencil out the heading ve carefully, making the letters a little thicker than those used Fig. 212; G, R, S, C, and M will be found the most difficult. T distance apart of the letters should not be quite uniform, l should be such as will look uniform. For example: an I betwe M and N would require more than the usual space to look righ on the other hand, a T between L and J would require to sligh overlap to give the right effect. The junction points of A, M, V, and W should not be sharp, but the same width as the thi ness of the strokes.

Leave ½ in. between the words of the heading, it is then mu easier to read than if cramped closer together or spaced wi apart. Remember that the printing—being thicker—will ta longer to dry, and be careful not to use the indiarubber too so It will be observed that the guide lines for the square, and cen lines for the circle, as described above, have not been inked in, they would spoil the effect of the drawing, but on machine dra ings it is usual to put the centre lines in red, using a lit crimson lake for the purpose.

The example on p. 147 shows the usual arrangement of set of drawings for a house, but in this case the house is of t smallest possible dimensions, and contains one room only. It about as simple an illustration as can be imagined, but it w form a stepping-stone towards the making of elaborate drawin A scale of one-eighth of an inch to one foot is the usual scale complete buildings, upon sheets of imperial paper, 30 in. by 22 with details to various larger scales according to the subject, 1 in., 1½ in., 3 in., and 6 in. to 1 ft., and full size for mouldings.

In drawing the present example, begin with the plan (Fig. 21 as is usual in all ordinary cases, and from that project the fr elevation (Fig. 216), then the side elevation (Fig. 217), ba elevation (Fig. 218), and sections (Figs. 219 and 220). Wh finished and inked in, the drawing may be coloured, carefully f lowing the directions given in the chapter dealing with that subje

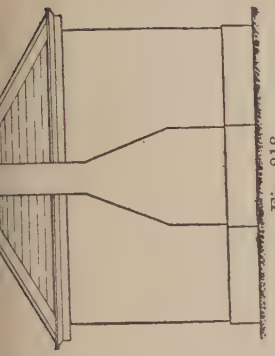

Fig. 218

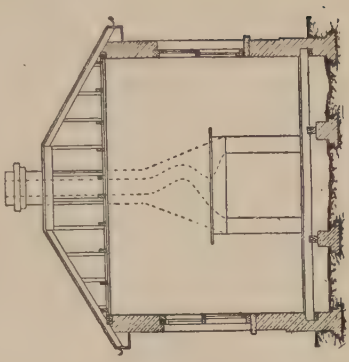

Fig. 219

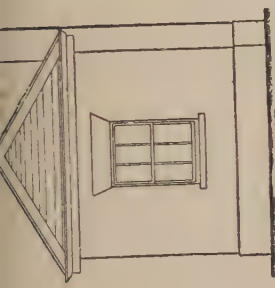

Fig. 217

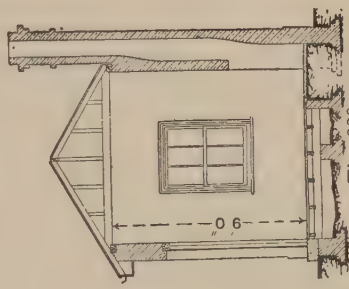

Fig. 220

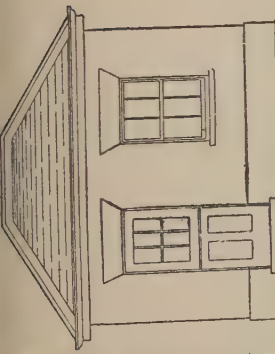

Fig. 216

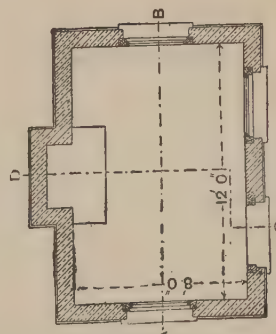

Fig. 215

Figs. 215 to 220.—Usual Arrangement of a set of Drawings of a House.

A draughtsman, before he begins to make his own desig or to draw from actual solid objects, generally makes copi of existing drawings. When these consist of straight rec angular outlines, no particular difficulty is experienced, b when the outline is irregular a beginner may be rather at loss to know how to proceed. For instance, the outline (Fi 221) would be copied as shown in Fig. 222. First a horizont line is drawn from point A, then an arc *a b* of any convenie radius is drawn from point A to cut the horizontal line A Select a starting point on the paper corresponding to point draw an arc with the same radius A *a*, and take the length

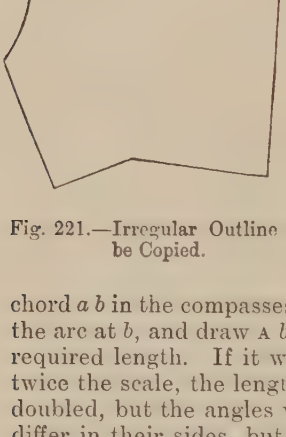

Fig. 221.—Irregular Outline to be Copied.

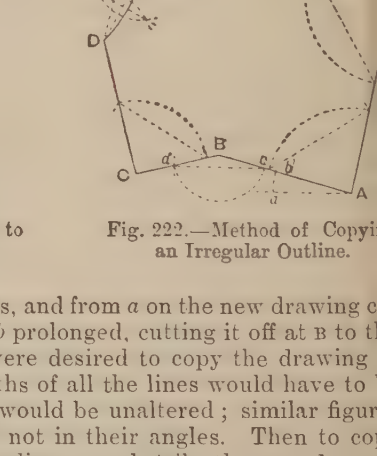

Fig. 222.—Method of Copyi an Irregular Outline.

chord *a b* in the compasses, and from *a* on the new drawing c the arc at *b*, and draw A *b* prolonged, cutting it off at B to t required length. If it were desired to copy the drawing twice the scale, the lengths of all the lines would have to doubled, but the angles would be unaltered; similar figur differ in their sides, but not in their angles. Then to co the angle at B, take any radius B *c* and strike the arc *c d*; up the new drawing do the same, cutting off the arc to the cho length *c d* and drawing B *c* the right length through *d*; t next angle at C is set off in exactly the same way. The cur D E following requires different treatment, so it will be l for the present and work resumed round the other way. Li A F will be obtained as the previous ones have been, and th a base line is drawn from F to E, leaving all the irregular o

e on one side of it. The angle and length of this base line ll be copied as before, while for the outline the method of stances and offsets will be used. Notice the salient points the curvature, that is, the most projecting points whether twards or inwards, as *e g n*; put in short lines at right gles to the base line to meet these points, then copy their ngths and distances from F E, obtaining points *e f g h*. rough these points lightly sketch a continuous curve, afterrds using a French curve and hard pencil for greater neatss. A similar base line, or chord line, may be drawn across e remaining portion D E its length, and the angles F E D are pied as before. This should bring point D exactly where D terminated; if it does not, it will be well to check the ork all through again. Assuming the outline from D to E be a compass curve, the centre may be found by first bicting the chord of the whole arc and then the chord of half ie arc, the intersection being the exact spot to put the point the compasses to draw the curve.

If a mere copy of Fig. 221 were desired, much shorter ethods might be adopted; the simplest would be a tracing tracing paper. To obtain a tracing from any drawing, lace it on the board with the main lines horizontal and ertical, lay the tracing paper upon it; then cut four pieces f blotting paper, each 2 in. square, fold them twice so as to ake pads 1 in. square, and place a drawing pin through one ad at each corner of the tracing paper to hold it firm and revent it from tearing. Then go over all the lines of the riginal with drawing pen or pencil, and the tracing will be omplete. If tracing linen is used instead of tracing paper, ads need not be used under the drawing pins.

Another mode of copying is to place the drawing over a lean sheet of paper and prick through all the junctions of the nes, and, on curves, some intermediate points also. Then emove the drawing and join up all the pricked points to natch the original. Another method is to lay a sheet of arbon paper, or a piece of blackleaded tracing paper, on the lank sheet, place the drawing over it, and then with a blunt oint, like a scriber rounded over at the end, trace firmly ver the outline of the drawing, which will transfer all the ines on to the blank sheet.

Where the drawing is complicated, or several copies are equired, the photographic method is the best way of copying,

giving either white lines on a blue ground, blue lines on white ground, or black lines on a white ground; the last-named result is the most expensive, but very much to be preferred. In order to be able to produce a good photograph the drawing must be in very black ink on bluish tracing paper, but a drawing on thin white drawing paper can be copied fairly well.

An instrument which is useful in certain cases for copying drawings is the three-legged compasses. It is like a pair of dividers with an extra leg pivoted at a right angle to the other two, and two of the legs being set upon points as A

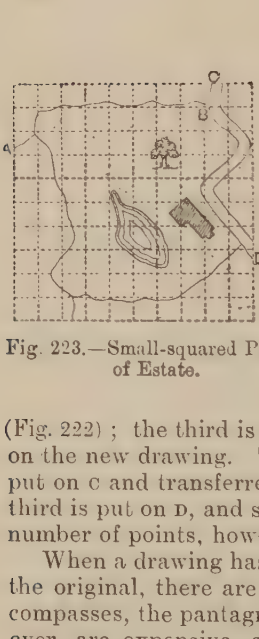

Fig. 223.—Small-squared Plan of Estate.

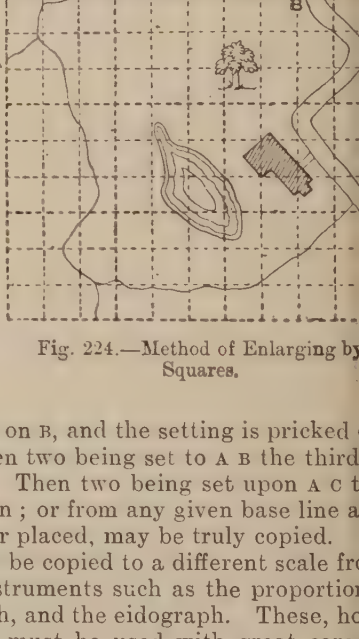

Fig. 224.—Method of Enlarging by Squares.

(Fig. 222); the third is set on B, and the setting is pricked on the new drawing. Then two being set to A B the third put on C and transferred. Then two being set upon A C the third is put on D, and so on; or from any given base line a number of points, however placed, may be truly copied.

When a drawing has to be copied to a different scale from the original, there are instruments such as the proportional compasses, the pantagraph, and the eidograph. These, however, are expensive, and must be used with great care to produce a good result. The use of the proportional compasses involves almost as much labour as constructing

awing from the commencement, but they are occasionally seful for straight-lined drawings. For estate plans the other vo instruments are more appropriate, but practically they an be used for making reduced copies only with any degree f accuracy.

The most draughtsmanlike method to employ for enlarging is that of copying by means of similar squares. Suppose, or instance, a plan drawn to a scale of 60 ft. to one inch has o be enlarged to a scale of 40 ft. to one inch, as shown in the ccompanying illustrations (Figs. 223 and 224). Find the argest convenient number that divides without remainder nto the two scales—in this case 20, where $40 \div 20 = 2$, and $60 \div 20 = 3$, so that 2 and 3 are the numbers required. Then draw lines horizontally and vertically over the original drawing (Fig. 223) $\frac{1}{3}$ in. apart—that is, three spaces to the inch, making every third line thicker than the others. For the enlargement (Fig. 224) the lines must be $\frac{1}{2}$ in. apart, or two spaces to the inch, and every third line must be thickened as before. As a record of the method, it will be advisable to rule in the squares with Prussian blue or crimson lake, but as their use is only temporary it is not customary for them to appear upon office drawings. Now begin at any part of the drawing, but preferably at the top left-hand corner, as at A on Fig. 223); notice at what proportion of the square the line starts, and then at the corresponding point on the blank form start a line. Notice the direction of the line, where it cuts the next side of the square, and what shape the intermediate portion is. Then follow the line along in the same way through each corresponding square until B is reached. Next go on from C to D in the same way, and so on until all the lines on the original appear upon the enlargement. After dealing in this way with each line, a general view should be taken of the whole, and any noticeable errors corrected, the sides of the buildings being ruled in to straighten them from the sketching.

If a finished drawing is required, the outlines may now be inked in, all the pencilling rubbed out, the different parts coloured or ruled in black and white, and the title put on. Sometimes, to avoid damage to the original, the squares are made upon tracing paper laid over it, and if the copy is only required to be upon tracing paper this might have underneath it a second sheet of tracing paper with suitable squares.

The illustrations on pp. 152 and 153 show convention signs in use for most of the objects usually indicated maps. Such conventional signs are in general use for com mon objects of all kinds.

Tracing forms an important branch of draughtsmen

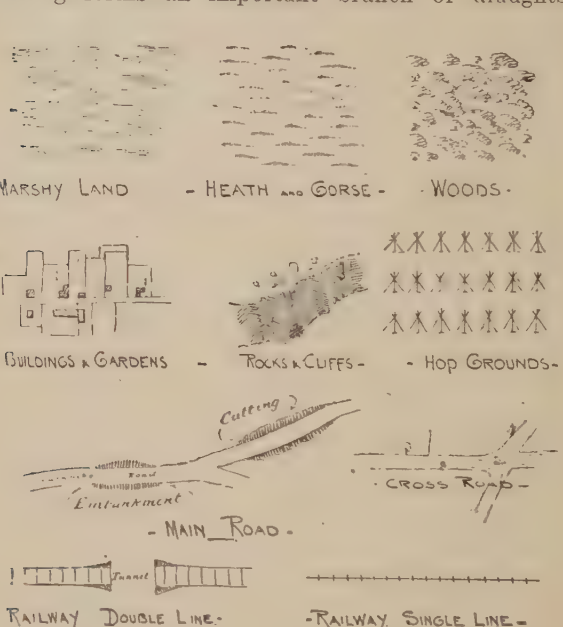

Fig. 225.—Conventional Signs used by Draughtsmen.

work. Tracings are made on either paper, cloth, or linen paper being used where strength is not important. Tracing paper and tracing cloth is sold in sheets and rolls of vary ing sizes and lengths. As a rule, the rolls are the more economical to buy. When tracings are required for repro

uction by any of the blue print processes, paper or cloth of blue tinge should be selected, as the lines come out clearer han when a yellow tinted material is used. As tracing oth generally stretches after being cut off the roll, it should e mounted a day before it is required, and stretched again

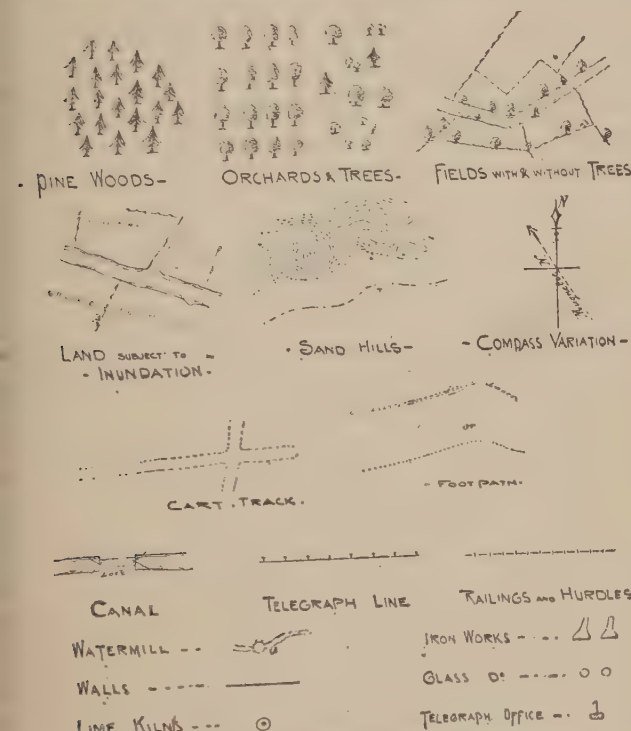

Fig. 226.—Conventional Signs used by Draughtsmen.

to remove the creases. In mounting the tracing paper or cloth over the drawing, pin down the centres first, and work up to the corners.

Tracings in pencil are often made for use in the workshops; when required only temporarily and not to be kept

as a record, or where they will not be subjected to muc handling, such tracings are quite sufficient for the purpos The sections should be tinted on the back of the tracing. is a good plan to use the pencil and tracing paper whe working out a design or a scheme ; for instance, the plan of first floor and successive storeys may be designed on tracin paper over the ground floor plan, and the movements working parts of machinery can be seen by making pap tracings of the several parts, and moving them to the pos tions they would occupy in actual work. Tracing paper also useful when designing ornamental work where any pa is repeated. A tracing is made with an H.B. pencil, th tracing turned over and placed on the drawing where th repetition is required, and the lines gone over with a fi pencil or tracing point, which will give a faint impressio of the drawing reversed on the paper beneath.

Indian—or, more properly, Chinese—ink is the best f tracing as well as for drawing. The hexagonal sticks, cos ing about 5s. each, are the best. A few drops of water shou be put into a 4-in. saucer, and the ink rubbed up on th with a circular motion, the object being to grind the particl thoroughly. It will take from ten to twenty minutes prepare a saucer of ink. A little experience will enable th operator to determine the required thickness, the consis ency of the liquid being judged from time to time by blowin on the surface. When too thin the ink will make a grey lin and if too thick will not flow freely from the pen. For dra ing on paper of which the surface has to be washed over wi colour, a little bichromate of potash should be rubbed u with the ink, a piece the size of a pin's head being used f a saucer ; but care must be taken with this material, for much is put in a yellow smear will stain the paper on ea side of the lines. If the tracing cloth or paper has a grea surface, a small quantity of prepared ox-gall or soap is rubb up with the ink ; but it is better, when possible, to avo using these, and to dust over the surface of the tracing wi whiting, all of which must be rubbed off with a clean dust The saucer containing the ink should be kept covered wi another saucer, which should be removed only for dippi in the pen. Liquid inks to be bought ready for use are ve convenient.

Drawings during progress should be protected from dust as much as possible, for in spite of all care that can be taken, it will be certain to be more or less soiled by the rubbing of the T square and set-squares. These should always be dusted before use, and when the drawing is not being worked on it should be covered over with a sheet of paper. Brown paper is commonly used for this purpose, and in most cases is suitable enough ; but for very fine work it is said to be objectionable, on account of its tarry nature. Newspaper is apt to leave the marks of printers' ink. If the drawing is one which is likely to occupy a long time before completion, a sheet of paper should be gummed or pinned to the board, covering the whole of the paper, and arranged so as to expose only the portion of the paper which is required for immediate use. This can be done either by folding back the paper or by cutting out small squares, and patching them up again when that portion is drawn. After the drawing is quite completed, it should be cut off the board with a sharp penknife and a steel straight-edge. A shoemaker's knife is a useful tool for this purpose, as well as for cutting cardboard and other work of a similar nature in the drawing-office.

INDEX.

Angles, Round, 60-63
Angular Projection, 97-100
—— ——, Brick Drawn in, 97
—— ——, Grating Drawn in, 98
—— ——, House Drawn in, 98-100
Annulets, 65
Antiquarian Size Paper, 14
Arc, Camber, 81-83
——, Drawing, 55
——, Finding Centre of, 55, 56
——, Flat, 81-83
——, Circular, 67
——, Elliptical, 68
——, Equilateral, 68
——, Flat-pointed, 68
——, Jack, 67
——, Lancet, 68
——, Ogee, 68
——, Segment, 67
Arch, Semi-circular, 66, 79
——, Semi-elliptic, 81
——, Skew, 79-81
——, Straight, 83
——, Tudor, 67
Arrow-heads on Drawings, 142
Asymptote, 86
Atlas Size Paper, 14
Back Lining, 104-113
—— —— Drawing of Chequered Cover-plate, 111
—— —— —— —— Cube, 104-106
—— —— —— —— Cylinder, 106-108
—— —— —— —— Grating, 109, 110
Banks, Colouring, on Drawings, 138
Bath Stone, Colouring, on Drawings, 128
Battens on Drawing-board, 11
Beam Compasses, 32, 81
—— ——, Home-made, 32-34
Bell Wires, Electric, Colouring, 138
Bisecting Compasses, 31
Block Lettering, 145, 146
—— Plan, 143, 144
Border Lines, 39
Bow Compasses, 31
Bows, Curve, 34
——, Pump, 32
——, Spring, 31, 32
Boxwood Scales, 117
Brass, Colouring, on Drawings, 138
Brick Buildings, Colouring, 138
—— Drawn in Angular Projection, 97
Bricks, Blue, Colouring, 138
—— Red, Colouring, 138
Brickwork, New, Colouring, 138
——, Old, Colouring, 138
Broken or Dotted Lines, 49
Brushes, Colour, 127
——, Filling, with Colour, 131
Builders' Working Drawings, 96
—— —— ——, Scales for, 115, 120
Building, Brick, Colouring, 138
——, Front Elevation of, 140, 141
——, Plan of, 141
——, Representing, Conventionally, 152
——, Stone, Colouring, 138
——, Wood, Colouring, 138
Camber Arc, 81-83
Canal, Representing, on Map, 153
——, —— Lock on, 153
Cardboard Scales, 117
Cart Track, Representing, on Map, 153
Cartridge Paper, 13
Cases of Instruments, 22, 23
Castings, Drawing Edges of, 57-60
Cast-iron, Colouring, on Drawing, 138
—— Column, 91
—— Grating in Angular Projection, 97
—— ——, Back Lining, 109, 110
—— ——, Drawing Plan of, 108, 109
Cavetto Moulding, 64
Cement, Colouring, on Drawing, 129
—— and Plaster, Colouring, 139
Chain, Colouring, on Drawings, 138
Chapel, Representing, 152
Chequered Cover-plate, Back Lining, 1
—— ——, Drawing, 110, 111
Chinese Ink, Rubbing up, 154
Church, Representing, on Map, 152
Circles, Finding Centres of, 53
—— for Practice, 56, 57
——, Projecting Ellipses from, 72, 73
——, Two, Constructing Ellipse from,
Circular Arch, 67
—— Lines, Drawing, 52-60
Clean Drawings, 155
Cleaning Ruling Pen, 25, 26
Cliffs, Representing, on Map, 152
Cloth, Tracing, 15, 152
——, ——, Mounting, 153
——, ——, Preparing Ink for, 154
Cloth-mounted Paper, 14
Cold-water Pipes, Colouring, 139
Columbia Size Paper, 14
Colour, Applying, to Drawings, 131
Colour Brushes, 127
——, Filling Brush with, 131

lour, Rubbing up, 131
– Saucers, 127
– Slants, 127
loured Drawings, Ink for use with, 154
louring Drawings, 126-137
——, Leaving Margin when, 132
lours, Combining, 129-131
—, Primary, 129-131
lumn, Fluted, Drawing, 111, 112
lumns, Tall, 89-91
mpass Variation, Representing, 153
mpasses, 28-34
—, Beam, 32, 81
—, ——, Home-made, 32-34
—, Bisecting, 31
—, Bow, 31
—, Curves made with, 52-60
—, Electrum, 29
—, Hair Dividers, 33
—, Holding, 53, 69
—, Leg Joints of, 29
—, Needle-pointed, 28, 29
—, Plain-pointed, 28
—, Proportional, 30, 31, 150, 151
—, Spring Bow, 31, 32
—, Testing, 29
—, Three-legged, 150
—, Trammel, 32-34, 81
oncrete, Colouring, in Drawings, 138
one, Shading, 71
onic Sections, 70, 71
onstruction Lines, 141, 142
opper, Colouring, in Drawings, 138
opying Drawings, 148-151
— —— with Eidograph, 150, 151
— —— —— Pantagraph, 150, 151
— —— by Photography, 150
— —— —— Pricking, 149
— —— —— Squares, 151
— —— with Three-legged Compasses, 150
— —— by Tracing, 149
over-plate, Chequered, Back Lining, 111
—, ——, Drawing, 110, 111
ube, Back Lining, 104, 105
—, Hollow, Back Lining, 105, 106
urve Bows, 34
urved Angles, 60, 63
urves, Compass, 52-69
—, Elliptical, 70-91
—, Flat, 53, 54, 81-83
—, French, 35
—, ——, Using, 35, 36
—, Hyperbolic Expansion, 86
—, in Machine Construction, 59
—, Parabolic, 83-87
—, Railway, 35
yma Recta Moulding, 64
yma Reversa Moulding, 64
ylinder, Back Lining, 106-108
atum, Ordnance, 125
eal, Colouring, in Drawings, 132, 138
—, —— Grain of, 135,
emy Size Paper, 14
esk for Drawing Office, 18
iagonal Scale, 121
imension Lines, 49
imensions on Drawings, 144, 146
Dividers, Hair, 30
Dotted Lines, 39
Dotting Pens, 27, 28
Double Elephant Size Paper, 14
—— Emperor Size Paper, 14
—— Ruling Pen, 24
Drains, Colouring, in Drawings, 139
Draughtsman at Work, Position of, 11, 12
Drawing-board, 10
——, Battened, 10, 11
——, Cutting Paper from, 155
——, Inclining, 12
——, Ink-stained, 18
——, Preventing, from Warping, 11
——, Renovating, 11
——, Securing Paper to, 15
——, Straining Paper on, 16-18
——, Testing, 42
Drawing-office, Desk for, 12, 13
——, Lighting of, 12
Drawing-paper (see Paper)
Drawing-pins, 16
Drawings, Back Lining, 104-113
——, Builders' Working, 96
——, ——, ——, Scales for, 115, 120
——, Colouring, 126-137
——, Commencing, 37, 140
——, Covering, whilst working on, 155
——, Figuring, 142
——, Hatching, 144
——, Keeping Clean, 155
——, Lettering on, 145, 146
——, Machine Construction Working, 96
——, Making, 140-155
——, Mechanical, Scales for, 115-120
——, Plotting Scales on, 119
——, Position of Scale on, 119
——, Removing, from Board, 155
——, Test, 43-48
Dust, Keeping, from Drawings, 155
Earth, Colouring, in Drawings, 138
Eidograph, Copying Drawings with, 150, 151
Electric Bell Wires, Colouring, in Drawings, 138
Electrum Instruments, 29
Elephant Size Paper, 14
Elevational Projections, 102, 103
Ellipse Construction from Two Circles, 74
——, Drawing, with Compasses, 75
——, ——, —— Paper Trammel, 76, 77
——, ——, —— String, 73, 74
——, Gardener's Method of Setting out, 78
——, Joiner's Method of Drawing, 77, 78
——, Patternmaker's Method of Drawing, 77, 78
——, Projecting, from Circle, 72, 73
Ellipses, 70-78
Elliptical Arch, 68
—— Curves, 70-91
Emperor Size Paper, 14
Entasis, 89-91
——, Tredgold's, 90, 91
Equilateral Arch, 68
Erasing, 39
Expansion Curve, Hyperbolic, 86
Feet and Inches, Symbols for, 145
Fields, Colouring, in Drawings, 138

Fields, Representing, on Maps, 153
Figuring Drawings, 142
Fillets, 65
Fir, Colouring, in Drawings, 132, 138
——, —— Grain of, 135
—— Cross-sections, Colouring, 135
Flagged Footpaths, Colouring, 138
Flat Arc, 81-83
—— Curves, 53, 54
Flat-pointed Arch, 68
Fluted Column, Drawing, 112, 113
—— Pilaster, Drawing, 111, 112
Foolscap Size Paper, 14
Footpaths, Colouring, in Drawings, 138
——, Representing, on Maps, 153
Forty-eighth Scale, 117
French Curves, 38
—— ——, Using, 35, 36
Gantry Drawn in Projection, 103
Gardener's Ellipse, 78
Gas Pipes, Colouring, in Drawings, 139
Glass, Colouring, in Drawings, 138
—— Roofs, Colouring, in Drawings, 138
—— Works, Representing, on Maps, 153
Gorse, Representing, on Maps, 152
Graining, Colouring, in Drawings, 132-137
Grand Eagle Size Paper, 14
Granite, Colouring, in Drawings, 129, 138
Grass-grown Land, Colouring, in Drawings, 139
Grating in Angular Projection, 97
——, Back Lining Drawing of, 109, 119
——, Drawing Plan of, 108, 109
Grecian Mouldings, 64
Greenheart, Colouring, in Drawings, 138
Gun-metal, Colouring, in Drawings, 138
Hair Dividers, 30
Hand-made Paper, 13
Hatching Drawings, 144
Headings for Drawings, 145, 146
Heart in Wood, Colouring, 134
Heath, Representing, on Maps, 152
Helix, 88, 89
Hexagonal Nuts, Curves on, 86
Hills, Sand, Representing, 153
Hollow Cube, Back Lining, 105, 106
—— Cylinder, Back Lining, 106-108
—— Moulding, 64
Hop Grounds, Representing, 152
Hot-water Pipes, Colouring, in Drawings, 139
House in Angular Projection, 98-100
—— Plan to Scale, 120, 121
—— Post, Representing, 152
——, Set of Drawings of, 146
Hurdles, Representing, 153
Hyperbola, 71
—— to fill Rectangle, 87
Hyperbolic Expansion Curve, 86
Imperial Size Paper, 14
Inches, Symbol for, 145
Inclination of Drawing-board, 12
Ink, Chinese or Indian, 154
—— for Coloured Drawings, 154
——, Filling Ruling Pen with, 50
——, Preparing Tracing-paper for, 154
——, Rubbing up, 154
Inking-in Straight Lines, 49-51
Instrument Cases, 22, 23
—— Rolls, 22
Instruments, 9-36
Iron, Colouring, in Drawings, 132, 13
139
—— Works, Representing, 153
Isometrical Projection, 92, 100, 101
—— ——, Brick Wall Drawn in, 102
—— ——, Cube Drawn in, 101
—— ——, False, 96, 97
Jack Arch, 67
Joiner's Ellipse, 77, 78
Joynson's Paper, Sizes of, 14
Kilns, Representing, 153
Lancet Arch, 68
Land, Inundated, Representing, 153
——, Marshy, Representing, 152
——, Meadow, Colouring, 138
——, Measuring, 144
—— Plan to Scale, 121
——, Vacant, Colouring, 138
——, Wooded, Representing, 152, 153
Lead, Colouring, in Drawings, 138
Leather, Colouring in Drawings, 138
Lettering on Drawings, 145, 146
Lime Kilns, Representing, 153
Linen-mounted Paper, 14
Lines, Border, 39
——, Broken, 49
——, Circular, Drawing, 52-69
——, Construction, 141, 142
——, Dimension, 49
——, Dotted, 39
—— in Error, 39
——, Pencil, 141, 142
——, Projections of, 92-96
——, Shadow (see Back Lining)
——, Straight, Drawing, 37-51
Lock on Canal, Representing, 153
Machine Construction Curves, 59
—— —— Working Drawings, 96
Machine-made Scales, 121
Mahogany, Colouring, in Drawings, 13
138
Manhole Cover-plate, 110, 111
Maps, Conventional Signs on, 152, 153
——, Ordnance, 123-125
——, Scale of, 121, 123
Marshy Land, Representing, 152
Meadows, Colouring, in Drawings, 139
Measurements on Drawings, 142, 144
Measuring Land, 144
Mechanical Drawings, Scales for, 115, 1
Medium Size Paper, 14
Medullary Rays, Colouring, in Drawing
135, 137
Mouldings, 63-66
Needle Points of Compasses, 28, 29
Nibs, Pen, 24-27
Ninety-sixth Scale, 119
Nuts, Hexagonal, Curves on, 86
Oak, Colouring, in Drawings, 132, 139
—— Cross-sections, Colouring, 135
Ogee, 63, 64
—— Arch, 68
Oiling Ruling Pen, 24
One-hundred-and-twentieth Scale, 117
Orchards, Representing, in Maps, 153

dnance Datum, 125
— Maps, 123-125
— Scale, 119
thographic Projection, 92, 100, 101
als, 70 (see also Ellipse)
olo Moulding, 64
lings, Representing, in Maps, 152
ntagraph, 150, 151
per, 13-15
—, Cartridge, 13
—, Cloth-mounted, 14
—, Cutting, from Drawing Board, 155
—, Hand-made, 13
—, Joynson's, 14
—, Linen-mounted, 14
—, Rolls of, 14, 15
—, Securing, to Board, 15
—, Sizes of, 14
—, Squared, 15
—, Straining, on Board, 16-18
—, Surfaces of, 13, 14
—, Tracing, 15, 152
—, ——, Mounting, 153
—, ——, Preparing Ink for, 154
— Trammel, Drawing Ellipse with, 74
—, Wetting, 18
—, Whatman's, 14
arabolas, 71, 83-87
arallel and Perpendicular Lines, Drawing, with Set-squares, 20, 22, 42
aths, Colouring, in Drawings, 138
—, Foot, Representing, 153
atternmaker's Ellipse, 77, 78
aved Streets, Colouring, in Drawings, 139
encil Lines on Drawings, 39, 141
— Tracings, 153, 154
encils, 38
—, Sharpening, 38
— for Tracing, 154
ens, Dotting, 27, 28
—, Ruling, 24-27
—, ——, Cleaning, 25, 26
—, ——, Double, 24
—, ——, Filling, with Ink, 50
—, ——, with Ink Reservoir, 24
—, ——, —— Lift-up Nibs, 24
—, ——, Oiling, 24
—, ——, for Pocket, 24
—, ——, Setting, 26, 27
—, ——, Sharpening, 26
—, ——, Swivel, 25
erpendiculars and Parallels, Drawing, with Set-squares, 20, 22, 42
hotography, Copying Drawings by, 150
ilaster, Fluted, Drawing, 111, 112
ine, Colouring, in Drawings, 132
—— Woods, Representing, 153
ins, Drawing, 16
ipes, Cold-water, Colouring, 139
—, Gas, Colouring, 139
—, Hot-water, Colouring, 139
—, Rain-water, Colouring, 139
—, Soil, Colouring, 139
itch Pine, Colouring, in Drawings, 132
lan, Block, 143, 144
—— of House to Scale, 120, 121
—— —— Land to Scale, 121
Plan, Scale of, 121, 123
Plaster, Colouring, in Drawings, 139
—— with Cement, Colouring, 139
Plotting Scales, 119
Pocket Ruling Pen, 24
Portland Stone, Colouring, 128
Post House, Representing, 152
Pricking Drawings, 149
Primary Colours, 129-131
Printing on Drawings, 145, 146
Projection, 92-103
——, Angular (see Angular)
—— in Elevation, 102, 103
——, Gantry Drawn in, 103
——, Isometrical (see Isometrical)
—— of Line, 92-96
——, Pseudo-isometrical, 96, 97
——, Window Opening in, 102, 103
Proportional Compasses, 30, 31, 150, 151
Pseudo-isometrical Projection, 96, 97
Pump Bows, 32
Quarter Scale, 116, 117
Quarter-round Moulding, 64
Railings, Representing, in Maps, 153
Railway Curves, 35
Railways, Colouring, in Drawings, 139
——, Representing, in Maps, 152
Rain-water Pipes, Colouring, in Drawings, 139
Rectangle, Hyperbola to fill, 87
Red Sandstone, Colouring, 129
Reversa Ogee Moulding, 64
Roads, Representing, in Maps, 152
Rocks, Representing, in Maps, 152
Roll of Instruments, 22
Roman Mouldings, 64
Roofs, Glass, Colouring, 138
Rope, Colouring, in Drawings, 139
Rosewood, Colouring, in Drawings, 139
Round Axles, 60-63
Royal Size Paper, 14
Ruling Pens (see Pens)
Sand Hills, Representing, in Maps, 153
Sandstone, Colouring, in Drawings, 121, 129
Saucers for Colour, 127
Scale, 114, 115
——, Boxwood, 117
—— for Builders' Drawings, 115, 120
——, Cardboard, 117
——, Diagonal, 121
—— Drawing of House Plan, 120, 121
—— —— —— Land Plan, 121
—— on Drawing, Position of, 119
—— Drawings, 114-125
——, Forty-eighth, 117
——, Machine-made, 121
—— for Mechanical Drawings, 115, 120
——, Ninety-sixth, 119
——, One-hundred-and-twentieth, 117
——, Ordnance, 119
——, Quarter, 116, 117
——, Twelfth, 117
——, Two-thousand-five-hundredth, 119
Scape Moulding, 65
Scotia, 65
Screw Threads, 88
Secondary Tints, 129 131
Sections, 50

Sections, Colouring, 132-137
—— of Cone, 70, 71
Segment Arch, 67
Semi-circular Arch, 66, 79
Semi-elliptic Arch, 81
Set-squares, 20-22
——, Angles of, 21
——, Drawing Perpendiculars and Parallels with, 20, 22, 42
——, Ebonite, 21
——, Framed, 21
——, Testing, 41
——, Vulcanite, 21
Setting Ruling Pen, 26, 27
Sewers, Colouring, in Drawings, 139
Shading Cone, 71
Shadow Lines (see Back Lining)
Sharpening Pencils, 38
—— Ruling Pens, 26
Skew Arch, 79-81
Skies, Colouring, in Drawings, 139
Slants for Colour, 127
Slate, Colouring, in Drawings, 139
Smithy, Representing, 152
Soil Pipes, Colouring, in Drawings, 139
Speaking Tubes, Colouring, 139
Spiral Staircases, 88
Splines, 34, 35
Spring Bow Compasses, 31, 32
Springs of Water, Representing, 152
Squared Paper, 15
Squares, Copying by means of, 151
Staircases, Spiral, 88
Steel, Colouring, in Drawings, 139
Stone, Bath, Colouring, 128
—— Buildings, Colouring, 138
—— Column, 91
—— Dressings, 139
——, Portland, Colouring, 128
——, Red Sand, Colouring, 129
——, Sand, Colouring, 121
——, Soft, Colouring, 139
——, Usual Colour for, 139
——, York, Colouring, 128, 139
Straight Arch, 83
—— Lines, Drawing, 37-51
Straight-edge, Testing, 39, 40
Streets, Paved, Colouring, 139
String, Drawing Ellipse with, 73, 74
Super Royal Size Paper, 14
Swivel Ruling Pen, 25
Table for Drawing Office, 12, 13
Telegraph Line, Representing, in Maps, 153
——, Office, Representing, 153
Templates, Use of, 36
Test Drawings, 43-48
Testing Compasses, 29
—— Drawing-board, 42
—— Set-squares, 41
—— Straight-edge, 39-40
—— T-square, 39-41
Threads, Screw, 88
Three-legged Compasses, 150
Timber, Colouring, in Drawings, 126-139
Tints, Secondary, 129-131
Tracing, Method of, 149, 153
—— in Pencil, 153, 154
——, Pencils for, 154
Tracing-cloth, 15, 152
——, Mounting, 153
——, Preparing, for Ink, 154
Tracing-paper, 15, 152
——, Mounting, 153
——, Preparing, for Ink, 154
Trammel Compasses, 32-34, 81
——, Paper, Drawing Ellipse with, 74
Tredgold's Entasis, 90, 91
Trees, Representing, in Maps, 153
T-squares, 19, 20
——, Testing, 39-41
——, Wood for, 19
Tubes (see also Pipes)
——, Speaking, Colouring, 139
Tudor Arch, 67
Turned Ovolo Moulding, 65
Twelfth Scale, 117
Two-thousand-five-hundredth Scale, 119
Valve-pit Cover-plate, 110, 111
Villa Plan, 141
Walls, Representing, in Maps, 153
Warping, Preventing Drawing-board from, 11, 12
Water, Colouring, in Drawings, 139
—— Mill, Representing, in Map, 153
—— Spring, Representing, in Map, 152
Well, Representing, in Maps, 152
Whatman's Paper, Sizes of, 14
Windmill, Representing, in Maps, 152
Window Opening Drawn in Projection, 10
Windows, Colouring, in Drawings, 12[illegible]139
Wires, Electric Bell, Colouring, 138
Wood Buildings, Colouring, 138
——, Colouring, in Drawings, 126-139
Wooded Land, Representing, 152-153
Writing on Drawings, 145, 146
Wrought-iron, Colouring, in Drawings, 132-139
York Stone, Colouring, in Drawings, 128, 139
Zinc, Colouring, in Drawings, 139

PRINTED BY CASSELL AND COMPANY, LIMITED, LUDGATE HILL, LONDON, E.C.
15 506

graphic Studios and Dark Rooms. With 180 Illustrations.
ents.—Planning Studios. Building Studios. Portable and Temporary Studios. Improvised from Greenhouses, Dwelling Rooms, etc. Lighting of Studios. ounds. Scenic Accessories. Dark-Rooms. Portable Dark-Rooms. Dark-Room s. Portable Dark Tent. Index.

Bicycle Building. With 137 Illustrations and Diagrams.
nts.—Frame for Motor Bicycle. Patterns for Frame Castings. Building Frame astings. Making 3½ H. P. Petrol Motor. Spray Carburettor for 3½ H. P. Motor. n Coils for Motor Cycles. Light-weight Petrol Motor for Attachment to Roadster . Spray Carburettor for Light-weight Motor. Index.

e Carpentry. With 172 Illustrations.
ents.—Light Rustic Work, Flower Stands, Vases, etc. Tables, Chairs and Seats. and Fences. Rosery Work, Porch, Swing Canopy Aviary, Footbridges, Verandahs, ouses, Garden Shelters, etc. Summer Houses, Dovecot. Index.

s and Rams: Their Action and Construction. With 171 Illustrations.
ents.—Suction Pumps and Lift Pumps. Making Simple Suction Pumps, Pump Cup rs. Pump Valves. Ram or Plunger Pumps. Making Bucket and Plunger Pump. uction of Plumbers' Force Pump, Wooden Pumps, Small Pumps for Special es, Centrifugal Pumps, Air Lift, Mammoth, and Pulsometer Pumps, Hydraulic Index.

stic Jobbing. With 107 Illustrations.
ents.—Cutlery Grinding, Sharpening and Repairing. Simple Soldering and Brazing. Riveting and Repairing. Chair Caning, Furniture Repairing, Glazing Windows, ella Making and Repairing. Index.

Other Volumes in Preparation.

DAVID McKAY, Publisher, Washington Square, Philadelphia.

TECHNICAL INSTRUCTION.

Important New Series of Practical Volumes. Edited by PAUL N. HASL
With numerous Illustrations in the Text. Each book contains about 160
crown 8vo. Cloth, $1.00 each, postpaid.

Practical Draughtsmen's Work. With 226 Illustrations.
Contents.—Drawing Boards. Paper and Mounting. Draughtsmen's Instru
Drawing Straight Lines. Drawing Circular Lines. Elliptical Curves. Proj
Back Lining Drawings. Scale Drawings and Maps. Colouring Drawings. Ma
Drawing. Index.

Practical Gasfitting. With 120 Illustrations.
Contents.—How Coal Gas is Made. Coal Gas from the Retort to the Gas H
Gas Supply from Gas Holder to Meter. Laying the Gas Pipe in the House
Meters. Gas Burners. Incandescent Lights. Gas Fittings in Workshops and Th
Gas Fittings for Festival Illuminations. Gas Fires and Cooking Stoves. Index.

Practical Staircase Joinery. With 215 Illustrations.
Contents.—Introduction: Explanation of Terms. Simple form of Staircase—I
String Stair: Measuring, Planning, and Setting Out. Two-flight Staircase. St
with Winders at Bottom. Staircase with Winders at Top and Bottom. Staircas
Half-space of Winders. Staircase over an Oblique Plan. Staircase with Open
Strings. Cut String Staircase with Brackets. Open String Staircase with Bu
Step. Geometrical Staircases. Winding Staircases. Ships' Staircases. Index.

Practical Metal Plate Work. With 247 Illustrations.
Contents.—Materials used in Metal Plate Work. Geometrical Construction of
Figures. Geometrical Construction and Development of Solid Figures. Too
Appliances used in Metal Plate Work. Soldering and Brazing. Tinning. Re-ti
and Galvanising. Examples of Practical Metal Plate Work. Examples of Pr
Pattern Drawing. Index.

Practical Graining and Marbling. With 79 Illustrations.
Contents.—Graining: Introduction, Tools and Mechanical Aids. Graining Gr
and Graining Colors. Oak Graining in Oil. Oak Graining in Spirit and Water C
Pollard Oak and Knotted Oak Graining. Maple Graining. Mahogany and Pito
Graining. Walnut Graining. Fancy Wood Graining. Furniture Graining. Im
Woods by Staining. Imitating Inlaid Woods. Marbling: Introduction, Too
Materials. Imitating Varieties of Marble. Index.

Painters' Oils, Colors and Varnishes. With Numerous Illustrations.
Contents.—Painters' Oils. Color and Pigments. White Pigments. Blue Pig
Chrome Pigments. Lake Pigments. Green Pigments. Red Pigments. Brown and
Pigments. Yellow and Orange Pigments. Bronze Colors. Driers. Paint Grindi
Mixing. Gums, Oils, and Solvents for Varnishes. Varnish Manufacture. Index.

Practical Plumber's Work. With 298 Illustrations.
Contents.—Materials and Tools Used. Solder and How to Make It. Sheet Lead
ing. Pipe Bending. Pipe Jointing. Lead Burning. Lead-work on Roofs. Inde

Practical Pattern Making. With 300 Illustrations.
Contents.—Foundry Patterns and Foundry Practice. Jointing-up Patterns. Fi
Patterns. Circular Patterns Making Core-Boxes. Coring Holes in Castings. P
and Moulds for Iron Columns. Steam-Engine Cylinder Patterns and Core-Boxes.
Wheel Pattern. Lathe-bed Patterns. Headstock and Poppet Patterns. Sli
Patterns. Miscellaneous Patterns and Core-boxes. Index.

Robinson Township Library
Robinson, Illinois 62454

OCT '79
N. MANCHESTER,
INDIANA 46962

S0-FUO-737